

## Remote Code and Response Report Code

Function	Remote Code		State	Report		
	Byte 2-3	Byte 3-4		Byte 0	Byte 1	Byte 2
Changer MODE	79	00	5 disc	0	0	1
			1 disc	0	0	0
OPEN/CLOSE	79	01	CLOSE	0	1	0
			OPEN	0	1	1
PLAY	79	02	-	0	2	1
PLAY/PAUSE	79	03	PLAY	0	3	0
			PAUSE	0	3	1
SKIP -	79	04	-	0	4	0
SEARCH -	79	05	-	0	5	0
SEARCH +	79	06	-	0	6	0
SKIP +	79	07	-	0	7	0
REPEAT MODE	79	08	OFF	0	8	0
			SINGLE	0	8	1
			ALL	0	8	2
			FOLDER	0	8	3
TIME DISPLAY	79	0A	-	0	A	0
PROGRAM	79	0C	-	0	C	0
CANCEL(CLEAR)	79	0D	-	0	D	0
Numeric 0	79	10	-	1	0	0
Numeric 1	79	11	-	1	1	0
Numeric 2	79	12	-	1	2	0
Numeric 3	79	13	-	1	3	0
Numeric 4	79	14	-	1	4	0
Numeric 5	79	15	-	1	5	0
Numeric 6	79	16	-	1	6	0
Numeric 7	79	17	-	1	7	0
Numeric 8	79	18	-	1	8	0
Numeric 9	79	19	-	1	9	0
RANDOM	79	1B	-	1	B	0
DISC 1	79	21	-	2	1	0
DISC 2	79	22	-	2	2	0
DISC 3	79	23	-	2	3	0
DISC 4	79	24	-	2	4	0
DISC 5	79	25	-	2	5	0
ENTER	79	3F	-	3	F	0
DISCSKIP +	79	4F	-	4	F	0
DISCSKIP -	79	50	-	5	0	0
DISC SCAN	79	53	-	5	3	0
DIMMER	79	54	-	5	4	0
PAUSE	79	55	-	5	5	0
STOP	79	56	-	5	6	0
POWER	79	60	OFF	6	0	0
			ON	6	0	1
FOLDER DOWN	79	6A	-	6	A	0
FOLDER UP	79	69	-	6	9	0
PURE DIRECT ON/OFF	79	6E	OFF	6	E	0
			ON	6	E	1
Change USB/CD Mode	79	6F	CD	6	F	0
			USB	6	F	1
POWER ON *	79	7E	-	7	E	0
POWER OFF *	79	7F	-	7	F	0

\* Discrete power on/off commands available from April 2010 production.

For earlier production units, use the following commands for discrete power on and off:

Power on = PLAY command (79 02)

Power off = PLAY + 3 second pause + POWER toggle command (79 02 + 3 sec. pause + 79 60)