

# Range Extender

## Quick Start Guide

### In-app Setup

1. Make sure your Ring Alarm is disarmed.
2. In the Ring app, tap **Set Up a Device** and find the **Range Extender** in the **Security Devices** menu.
3. Follow the in-app instructions to complete setup.

### Installation

1. Make sure the Range Extender is plugged into an outlet at all times.
2. Choose an outlet between your Base Station and some of the devices farthest from your Base Station.


You can move the Range Extender to another outlet as needed to expand the range of your Z-Wave network.



For additional help, visit:  
[ring.com/help](https://ring.com/help)

# Range Extender

## Placement

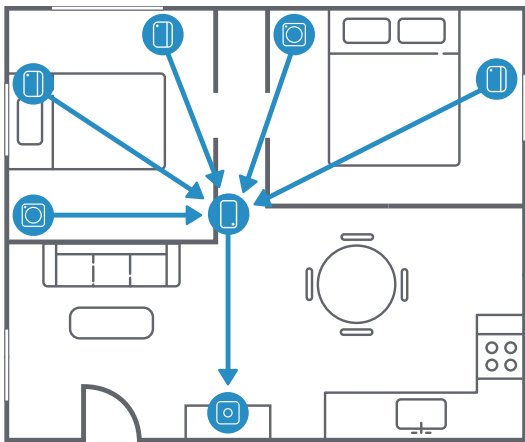

Choose an outlet between your Base Station and some of the devices farthest from your Base Station.

Note: You can move the Range Extender to another outlet as needed to expand the range of your Z-Wave network.

For Z-Wave technical information, visit [ring.com/z-wave](https://ring.com/z-wave)

©2020 Ring LLC or its affiliates. Ring, Always Home, and all related logos are trademarks of Ring LLC or its affiliates.