

# USB Z-Wave Dongle and Z-Wave Repeater/Range Extender

## Z-Wave Accessories

### USB Z-Wave Dongle

The self-powered Z-Wave dongle allows the ClareOS host to control up to 232 Z-Wave devices while simplifying Z-Wave network installation. When connected in SerialAPI mode to a Clare controller, the USB dongle creates a Z-Wave network to integrate control of compatible door locks, thermostats, water detect/cutoff systems, and other Z-Wave applications into a Clare automation project.



- Connects to ClareOS controller via USB
- Add Z-Wave devices with pushbutton ease
- Control up to 232 Z-Wave devices in SerialAPI Mode

### Z-Wave Repeater / Range Extender

Repeaters are used to optimize the performance of a Z-Wave network. The repeaters amplify and rebroadcast weaker Z-Wave communications, improving system reliability and accuracy by resolving Z-Wave signal strength issues related to range or interference.



- Plugs into standard power outlets
- Improves Z-Wave network performance
- Strongly suggested for use with Z-Wave door locks

### Ordering Information

CH-Z-ANT	USB Z-Wave Dongle
CH-Z-RPTR	Z-Wave Repeater