


MM-Max1 Pull Down TV Mount INSTALLATION INSTRUCTIONS

Read this entire manual before you begin!

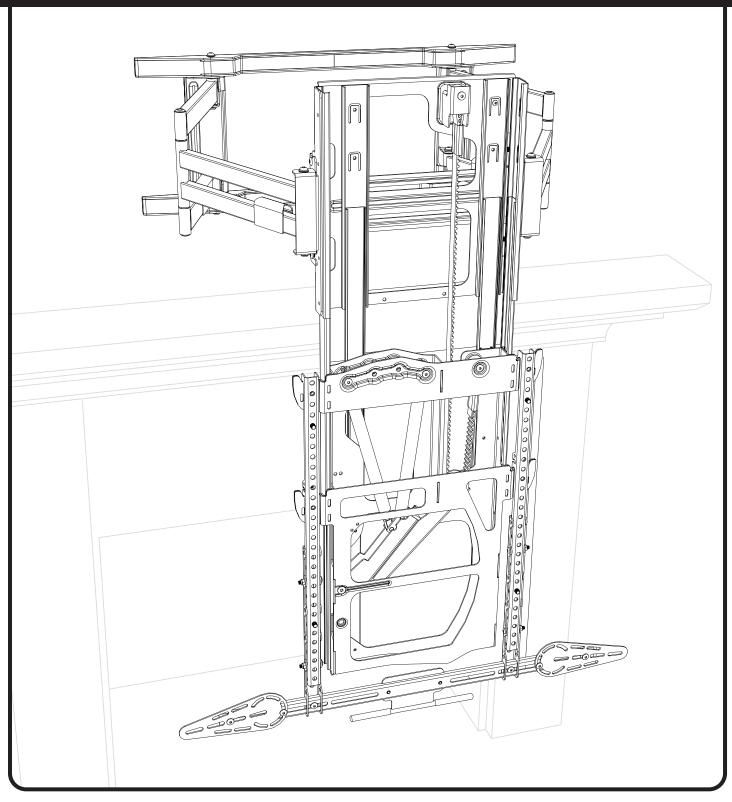

MM-Max1 Installation Steps

Step 1 - Attaching Braces to TV	Page 6
Step 2 - Determine Wall Placement	Page 10
Step 3 - Attach Mount to Wall	Page 12
Step 4 - Attach TV to Mount	Page 14
Step 5 - Make Final Adjustments	Page 15
For any questions during installation, Contact Customer Support: Monday – Friday, 7am–4pm PST 1.800.897.9755 x1 or support@mantelmount.com	1

⚠ IMPORTANT


Your MM-Max1 mount has an adjustments that must be made after the installation is complete in order to operate properly.

The Tension Bolt adjusts the lifting force to accommodate different TV weights. When adjusted properly the force required to lower and raise your mount should be equal.

Do not unpack box contents until verifying the requirements listed on page 4.

▲ WARNING!

Do not place hands into Lifting mechanism. The force of the Lifting mechanism can cause bodily injury!

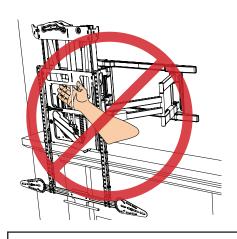

↑ WARNING!

This product contains small parts that can be a choking hazard. Do not let children play with any of these small parts! Keep children away from the work area during the installation process.

▲ CAUTION

This product is intended to be installed by professional installation contractors, or persons familiar with the tools and methods required for this installation. If you are not sure about your ability to perform this installation, you must contact a professional. MantelMount is not responsible for damage or injury caused by incorrect installation or improper use.

Do not let children operate, pull on, or hang from MantelMount. Do not let children push MantelMount upward to the top position. Only a person tall enough to control the mount all the way to the top should operate MantelMount.

Do not use this product in any way, or for any purpose, that is not specifically described in these instructions. MantelMount is not responsible for damage or injury caused by incorrect installation or improper use.

WARRANTY

MantelMount offers a Lifetime Limited Warranty for all TV mounts and accessories. This Lifetime Limited Warranty covers all mechanical parts but excludes lifetime coverage for gas springs or electrical parts which are warrantied for five (5) years from the original purchase date.

This product is intended to be installed by professional contractors or persons familiar with the tools and methods required for this installation.

If you are uncertain about your ability to perform this installation, please contact a professional.

Do not use this product in any way or for any purpose that is not specifically described in these instructions.




Some steps in this installation manual may require two people.

Helpful Installation Tips and Videos can be fount at: http://mantelmount.com/install-tips

For questions during installation? Contact Customer Support:

Monday – Friday, 7am – 4pm PST 1.800.897.9755 x1 or support@mantelmount.com

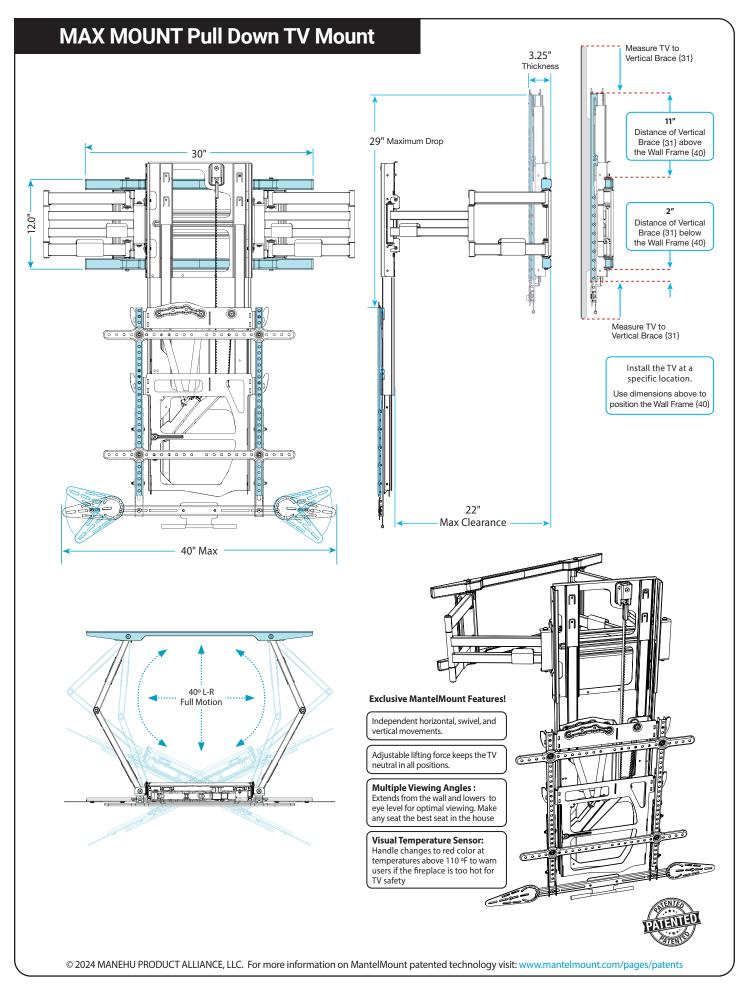

Before Installation

Verify TV and wall space meet these criteria:



SCREEN SIZE 50" to 86" (With Soundbar) 55" to 86" (Without Soundbar)

MANTEL DEPTH 20" MAXIMUM






MAX 20-90 LBS


WEIGHT CAPACITY 20 to 90 LBS. (Including Sound Bar) Studs Maximum 28" apart; Wall Covering Maximum 5/8"




VESA COMPLIANT Up to 600 X 600mm




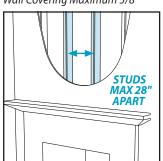

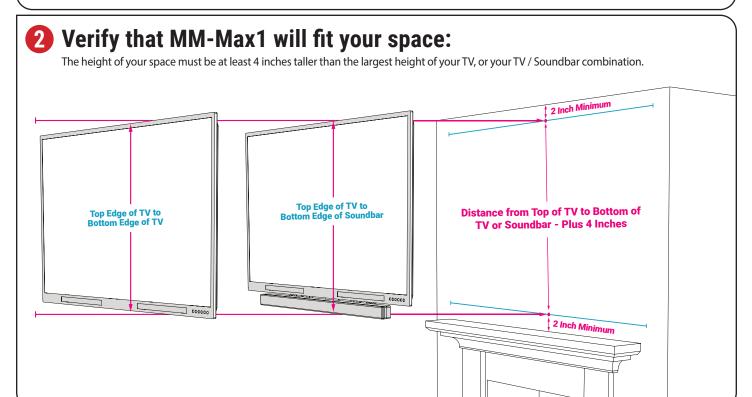


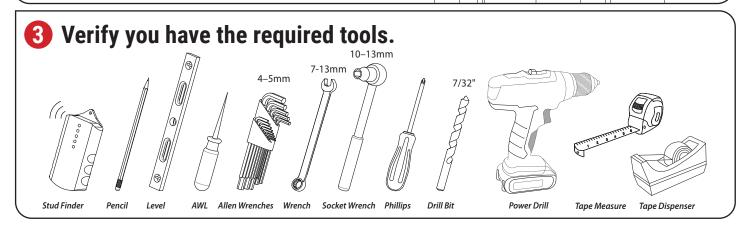

Before Installation

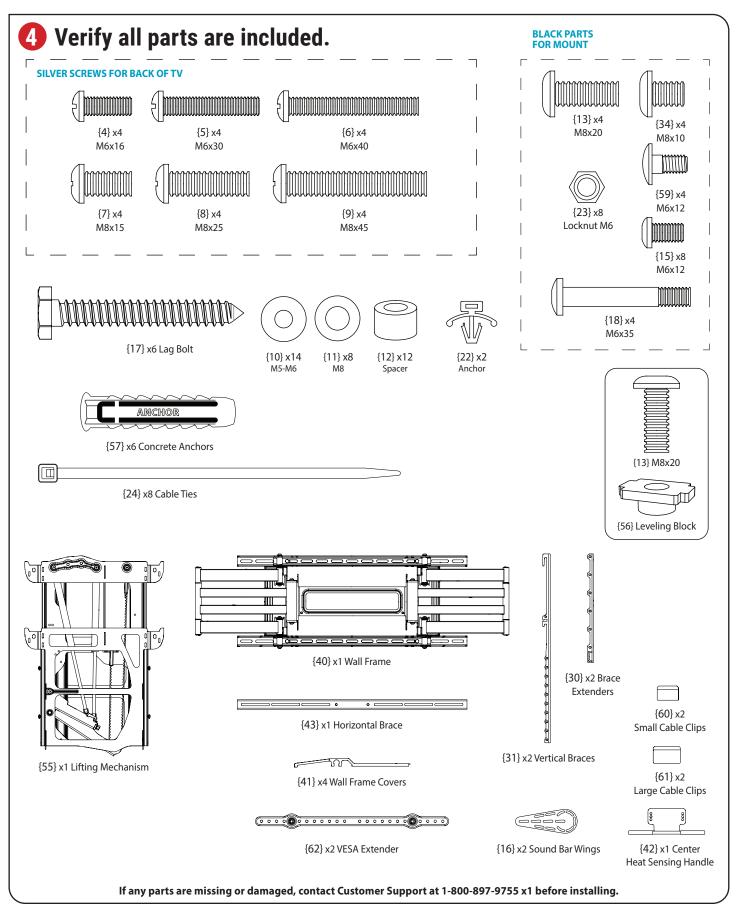


STEP 1 **Attach Braces** to TV

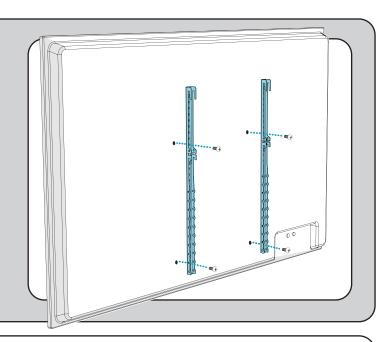

1.1 Do You Need the VESA Extenders?

If your TV VESA holes are the same width (400mm) as the two main holes on the VESA Extenders (62) then **DO NOT** use the Extenders. If your TV holes do not align, then attach the VESA Extenders to your TV using the appropriate silver TV Screws shown in STEP 1.4.

NOTE: The VESA Extenders will not be shown in the instructions.

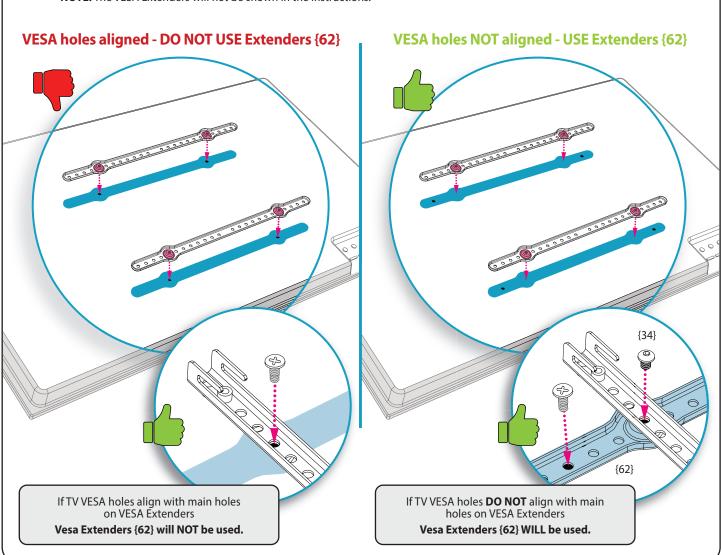


1.2 **Test-Fit the TV Components.**

The bottom of the Vertical Braces {31} must be attached within 3"-12" from the bottom of the TV. Confirm that the Braces will attach to the TV at this distance. To ensure Brace Extenders (30) are not visible place them slightly above the bottom of the TV as shown in image A.

Without Soundbar: Test-fit the Brace Extenders (30) and the Center Heat Sensing Handle (42) to confirm that the Handle can be grabbed at the bottom of the TV.

With Soundbar: Position the Soundbar at the bottom of the TV. Test-fit the Brace Extenders (30) and the Center Heat Sensing Handle (42) to confirm that the Handle can be grabbed at the bottom of the Soundbar.


NOTE: Soundbar Wings {16} can also be used to fine-tune Soundbar attachment (STEP 1.8).

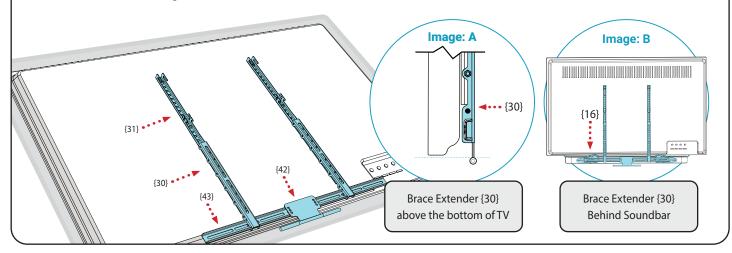


Determine if the back of your TV Is flat or irregular.


1.3


The TV Components must be parallel with the TV screen. Use Spacers {12} as shown, if needed.

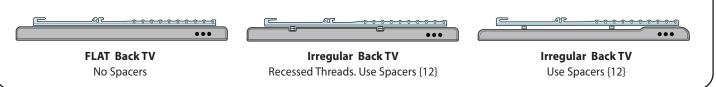



1.4 Select Screws and Spacers. If Spacers {12} are required, choose one of these Screw combinations shown with maximum Spacer usage.

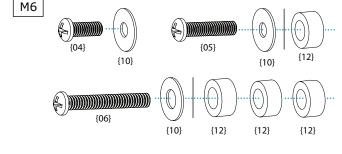


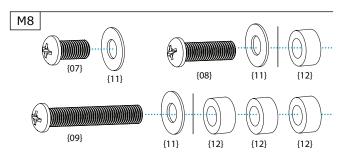


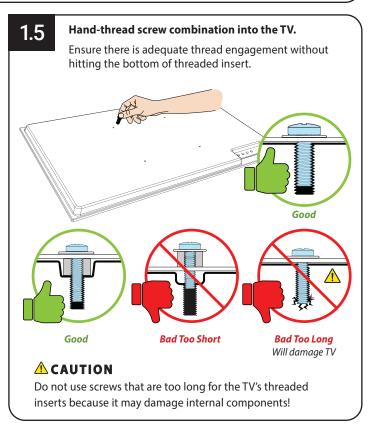

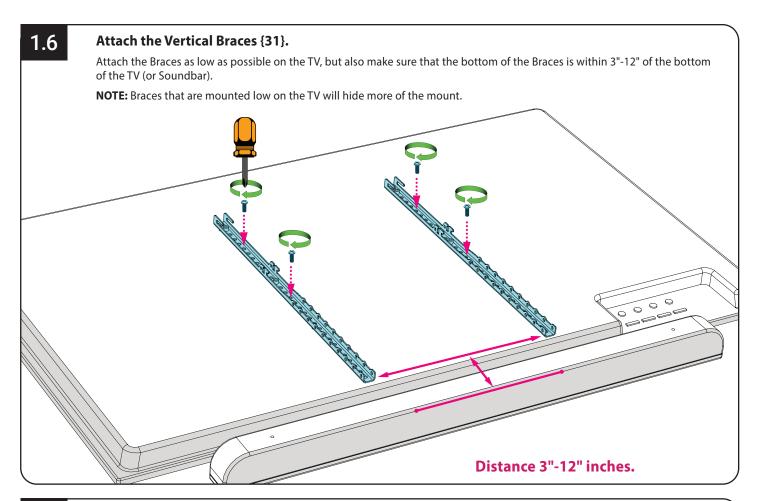


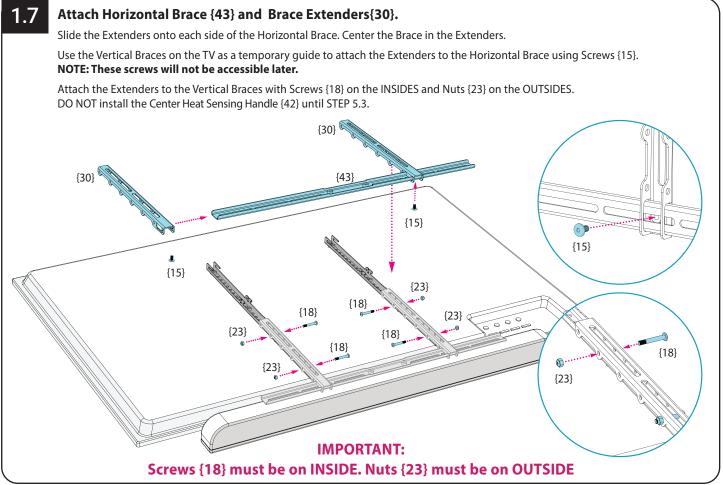

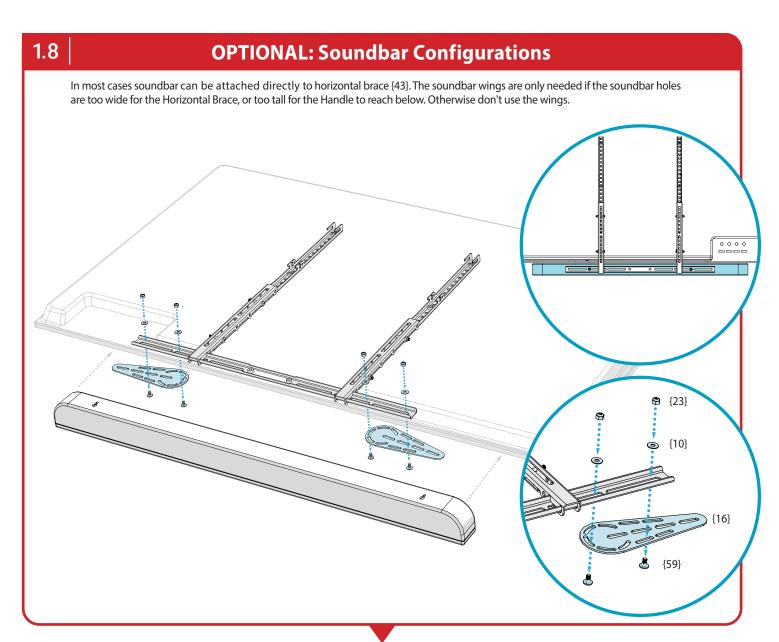

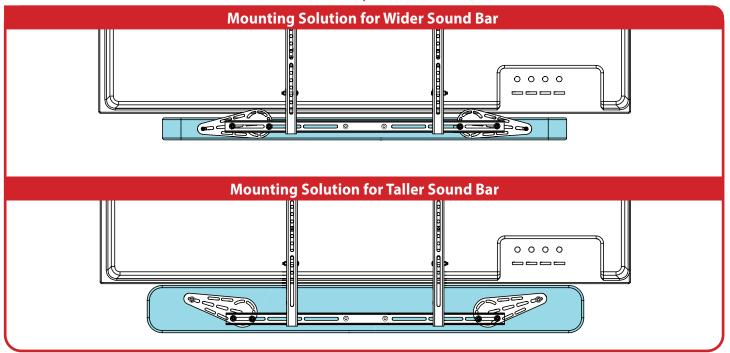

Step 2 **Determine Wall Placement**

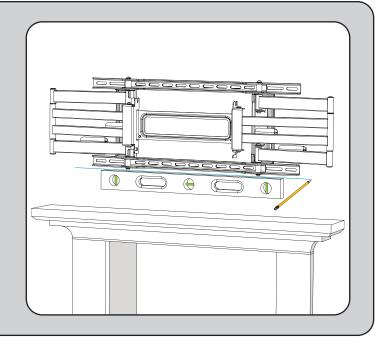


2.1 **Determine Wall Location:**

Measure the distance from the BOTTOM of the Vertical Braces on your TV to the BOTTOM of your TV, (or the bottom of the Soundbar if you attached one).

NOTE: This distance should be between 3"-12".


ADD 4 INCHES: The bottom of the Wall Frame (40) will be installed at least 4 INCHES HIGHER than the measured distance.

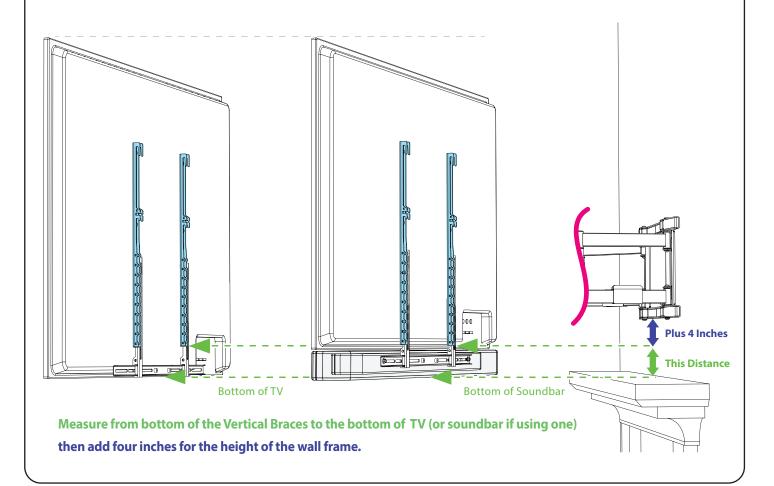

2.2 Find the center of your mantel and the centers of two studs.

Measure and mark the center line of the mantel onto the wall with tape. Next, use a stud finder to locate two studs, one on each side of the centerline. Maximum stud width is 28 inches.


Then, at the height from Step 2.1, locate the center of the stud(s) by poking a sharp awl or finish nail through the drywall to find each stud edge. Mark these center spots on the wall. Lag Bolts must be installed into the CENTER of the studs in as show in STEP 3.1.

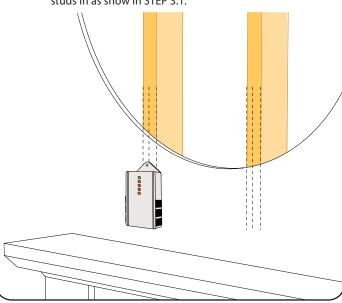

2.3 Mark the wall location with the template:

Use the calculated height from STEP 2.1 to locate the Template on the wall. Level the Template and tape it into position. Mark at least four holes where the Template SLOTS align with your wall studs.


NOTE: DO NOT locate the holes any higher on the wall unless you have verified that you have enough extra clearance at the top.

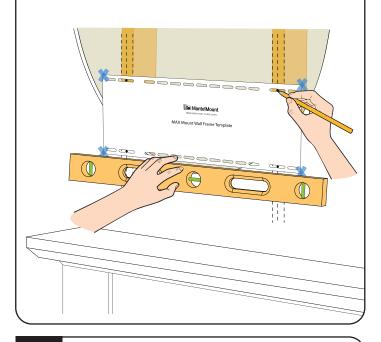

2.4 **Pre-drill Holes**

Pre-drill the 4 holes with 7/32" drill bit to a depth of 2.5 inches (65mm) including wall covering.


⚠ CAUTION: Wall covering (drywall) must not exceed 5/8" thickness.

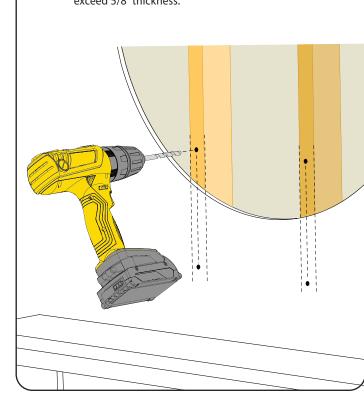

2.5 **Concrete Wall Installation**

Concrete must be large blocks or solid walls able to hold four times the weight of the TV and Mount.


⚠ CAUTION: Install anchors at least 2 inches

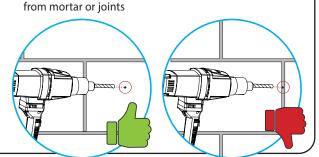


2.6 **Installing Concrete Anchors**

Drill pilot holes to a depth of 3 in. (75mm) using a 3/8" in. (10mm) diameter masonry drill bit. Insert Concrete Anchors (57) until flush.

Note: Pilot holes must be at least 2 inches away from

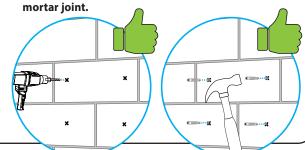


Step 3 **Attach Mount** to Wall

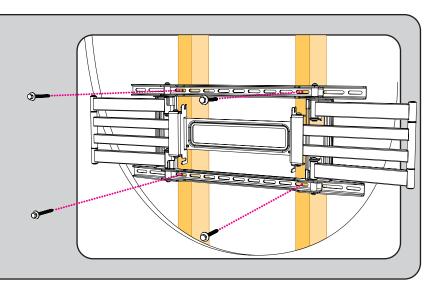

3.1 **Attach The Wall Frame:**


Level the Wall Frame and attach it to the wall with Lag Bolts {17} and Washers {11}


⚠ CAUTION: Do Not over tighten Lag Bolts {17}. Tighten only until the washers are firmly against the wall plate. Damage due to over tightening can cause property damage or injury.

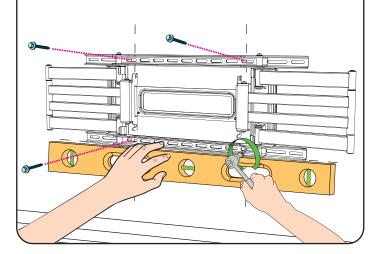


Attach The Wall Frame Covers {41}:

Tuck the center tabs under each other before snapping the Cover onto the metal post inside the Wall Frame.

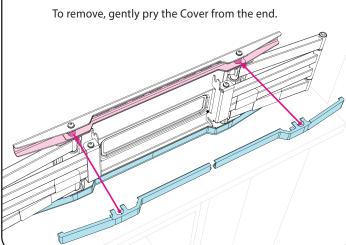

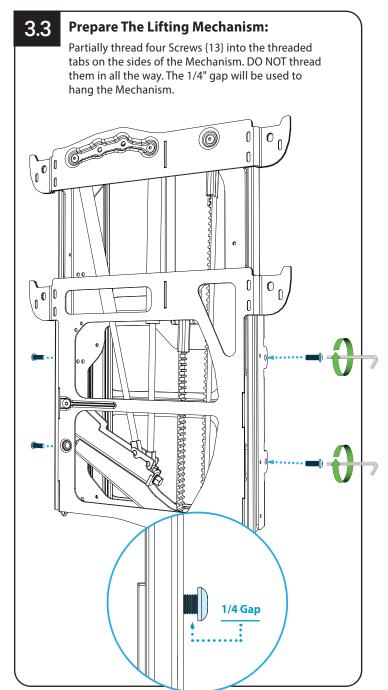


3.4 Hang the Mechanism: Pull the Wall Frame horizontally from the wall. Lower the thread gaps of the top Screws of the Lifting Mechanism into the top slots of the Wall Frame, then swing the lower Screws into the lower slots. DO NOT tighten the screws.

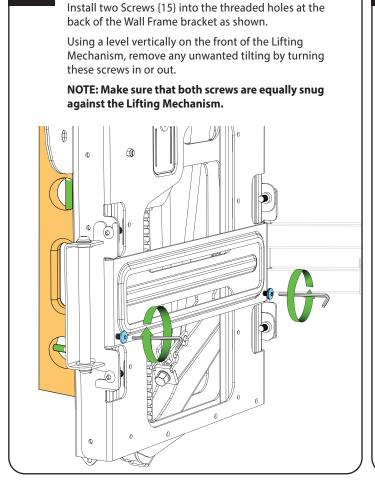

Remove Tilt of the Lifting Mechanism:


3.5

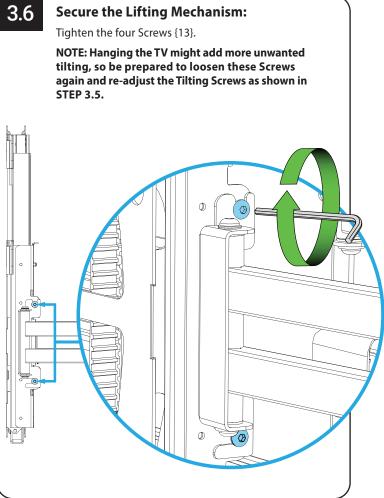

STEP 4 - Attach TV to Mount

4.1 Pre-adjust the Lifting Force


Before hanging the TV, retrieve the weight of your TV (and Soundbar) from the owner's manual or website. Adjust the tension bolt so that the front edge of the Gas Spring Block aligns with the correct weight. Rotating the bolt clockwise in the direction shown as "MORE" will increase the lifting force.

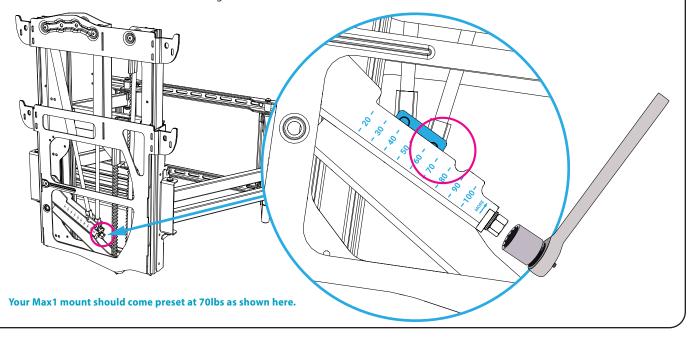

4.2 Hang the TV


Pull the Lifting Mechanism away from the wall. Hang ALL FOUR hooks and slowly release the TV.

If the TV starts to lower, REMOVE THE TV and increase the lifting force as shown in STEP 4.1.

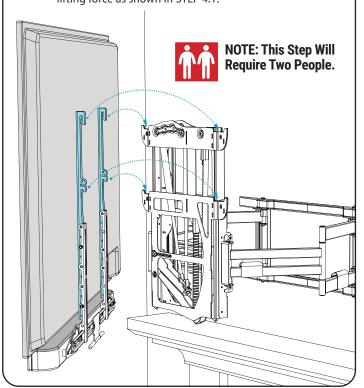



4.3 SECURE the TV


Insert four Screws {15} into the Vertical TV Braces, but DO NOT TIGHTEN them until the TV is leveled as shown in STEP 5.1.

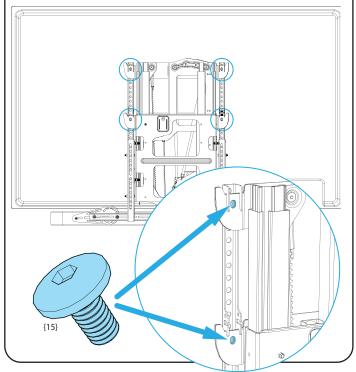



STEP 5 – Make Final Adjustments

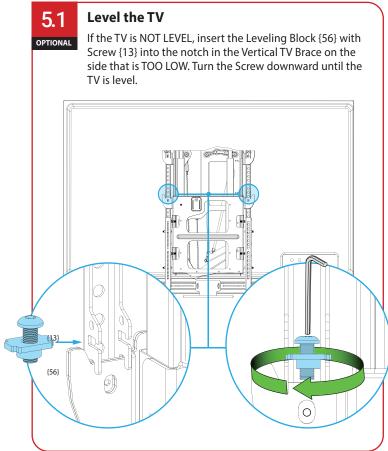


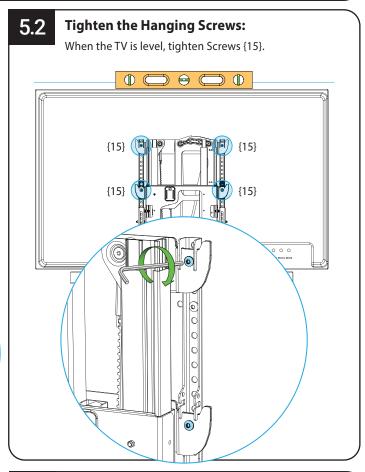

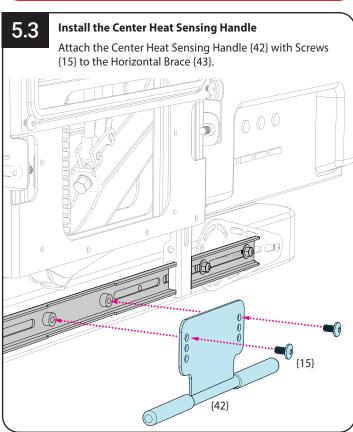


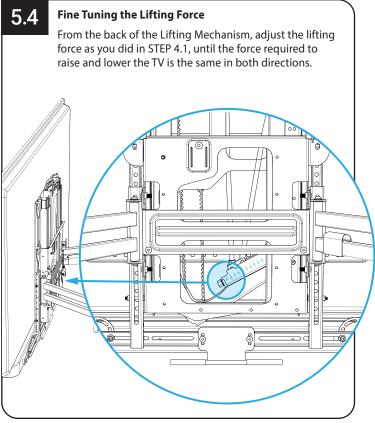


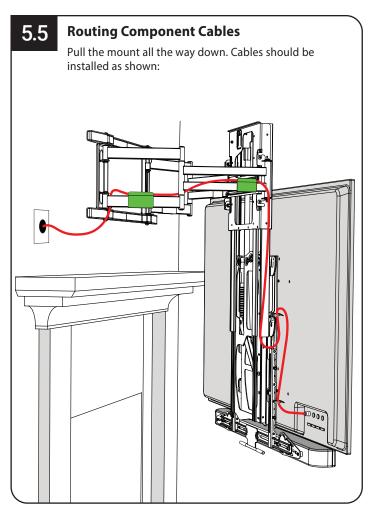


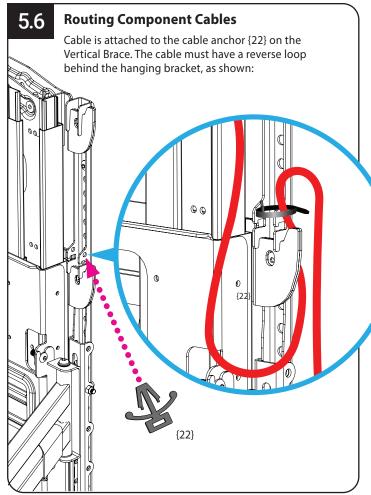

5.7 **Routing Component Cables** In the UP position the cable should have a dangle hanging as shown: Run the cable along the OUTSIDE of the first horizontal arm and attach with the small cable clip, and then on the INSIDE of the second horizontal arm and attach with the large cable clip. Outside

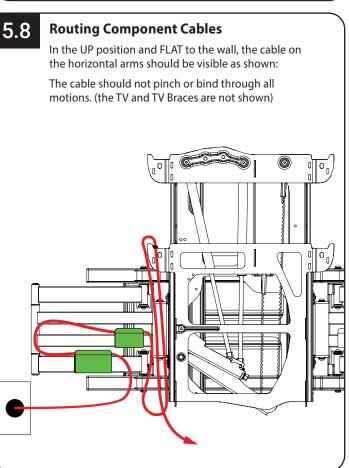

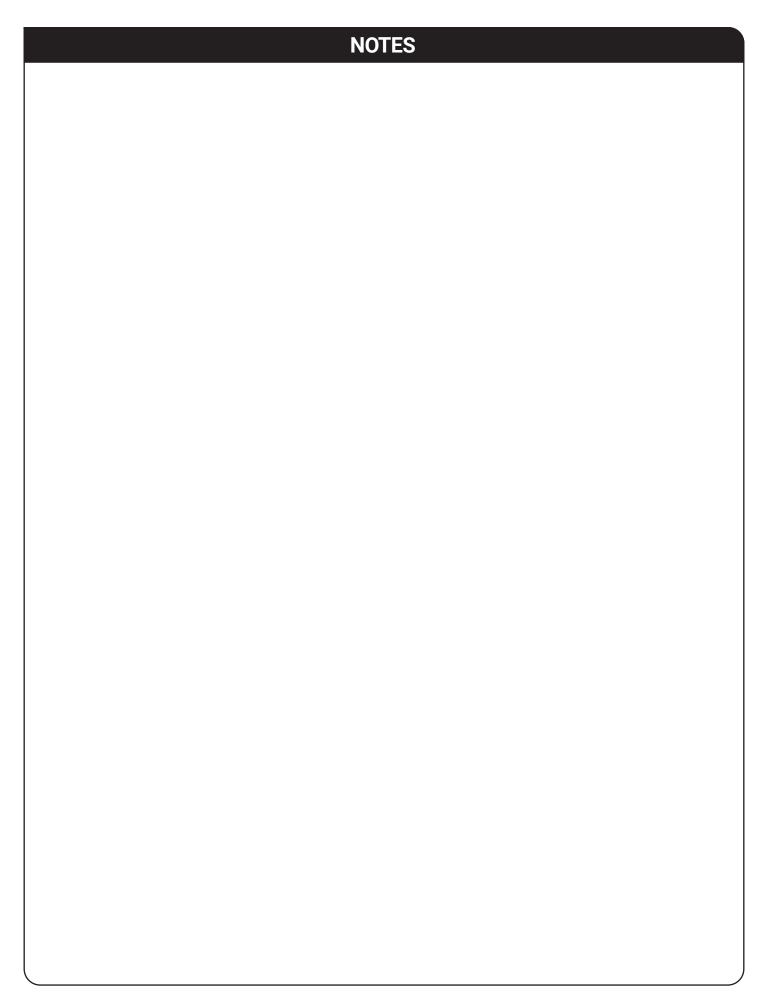

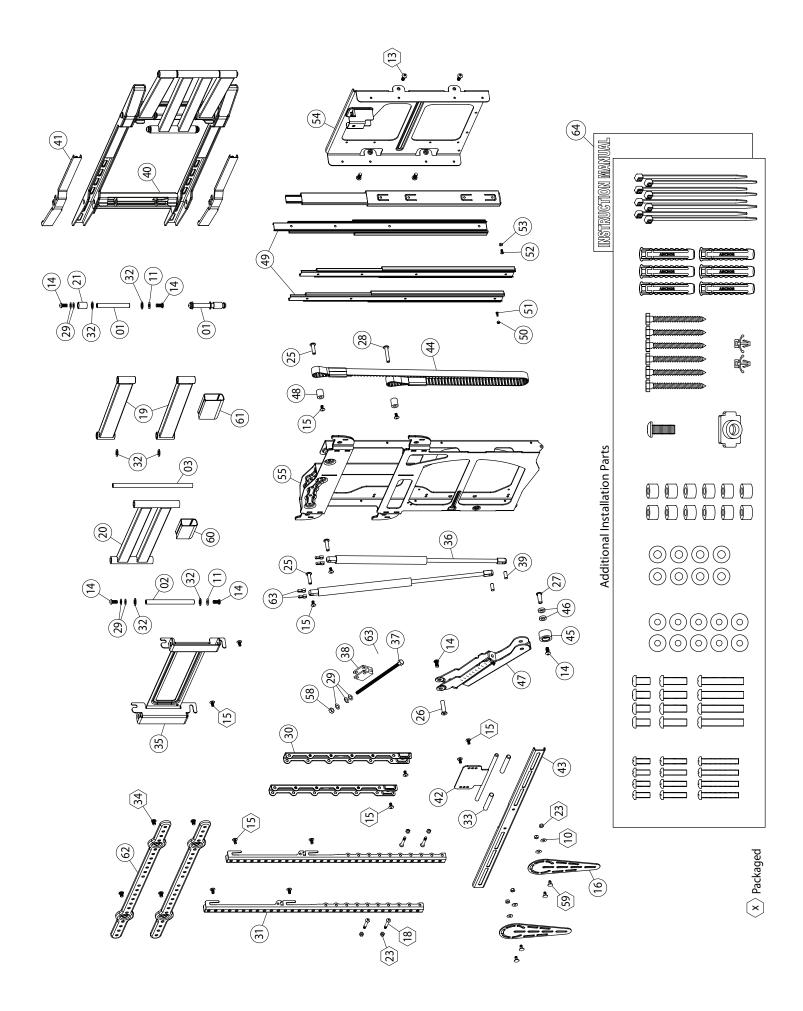

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
-	42046	Pivot Rod	4	40	41010	Wall Frame, Welded	-
2	42047	Pivot Rod	2		41000	Wall Plate	2
3	42048	Rivet	2		41002	Wall Plate Insert	2
4	12193	M6 x 16	4		41005	Wall Bracket	2
5	12194	M6 x 30	4	41	41003	Wall Plate Cover	4
9	12195	M6 x 40	4	42	23023	Center Handle, Hidden	1
7	12197	M8 x 15	4	43	14060	TV Horizontal Brace	1
8	12198	M8 x 25	4	44	42037	Belt Assembly	-
6	12199	M8 x 45	4		42038	Belt Clamp	2
10	12166	Washer M6	14	45	41044	Pulley	-
11	14126	Washer M8 x 2	14	46	42020	Roller Bearing	2
12	12122	Spacer	12	47	41037	Adjuster Rail, Welded, Printed	1
13	12179	Round Head Screw M8 x 20	5		41033	Adjuster Rail	1
14	12176	Round Head Screw M8 x 16	10		41042	Pulley Rail	-
15	12178	Round Head Screw M6 x 12	8		41007	Adjuster Rail Cap	2
16	15010	SoundBar Wing	2		41045	Locking Gear	-
17	12154	Lag Bolt M8 x 60mm	9	48	42039	Belt Spacer	2
18	12255	Round Head Screw M6 x 35	4	49	41029	Slider Rail	4
19	41013	Inner Arm	4	50	12243	Locknut M4	15
20	41017	Outer Arm	2	51	12242	Panhead Screw, M4 x 10 (Inner Rail)	15
21	42014	Spacer	4	52	12180	Panhead Screw, M5 x 10 (Outer Rail)	15
22	14110	Cable Tie Anchor	2	53	21191	Locknut M5	15
23	12183	Locknut M6	8	54	41021	Slider Bracket, Welded	-
24	12162	Tie Wrap	8		41020	Slider Bracket	1
25	42029	Screw Post M6 x 8 O.D. x 28 L	æ		41038	Belt Anchor Bracket	-
26	42033	Screw Post M8 x 10 O.D. x 38 L	1		42003	Thread Insert, M8	4
27	42031	Screw Post M8 x 10 O.D. x 27 L	1	55	41027	Slider Housing, Welded	1
28	42002	Screw Post M6 x 8 O.D. x 45 L	1		41025	Slider Housing	-
29	12247	Disk Spring Washer, M8	15		41024	Slider Housing Top Brace	1
30	14056	TV Brace Extender	2		41026	Slider Housing Bottom Brace	-
31	41040	TV Vertical Brace	2	56	42041	Leveling Block	-
32	42013	Washer M12	12	57	25010	Concrete Wall Anchor	9
33	23024	Handle Rubber	2	58	12186	Nut, M8	1
34	12276	Round Head Screw M8 x 10	4	59	15083	Carriage Bolt, M6 x 12	4
35	41015	Arm Bracket	-	09	42019	Cable Clip 30 x 20	2
36	13064	Gas Spring	2	61	42021	Cable Clip 40 x 20	2
37	42023	Hex Bolt M8 x 185	_	62	41041	VESA Cross Brace	2
38	41050	Gas Spring Slider	1	63	42027	Clip Spacer	5
39	42004	Mounting Pin	2	64	MM-MAX1	Instruction Manual	-



For missing/damaged parts or questions during installation, please contact our Customer Support team at **1.800.897.9755 ext.1** or **support@mantelmount.com.** Customer satisfaction is our highest priority!

For more information on MantelMount patented technology visit: www.mantelmount.com/pages/patents



WARNING: This product can expose you to chemicals including Lithium Grease, which is known to the State of California to cause cancer or developmental harm. For more information go to www.P65Warnings.ca.gov.