

CR-CDI-1000/2000-LSCAPE AMPLIFIER

OVERVIEW

The tables below contain the device presets for use with the Landscape Speakers and the CR-CDi-1000/2000-LSCAPE Amplifiers. Use the information below as a reference for the proper settings for each type of speaker connected to the amplifier.

Please contact SnapAV Technical Support with any questions.

LS V3.0A DEVICE PRESET CONFIGURATION TABLE

		CHANNEL 2					
		LS-SAT-4 (70V)	LS-SAT-6 (70V)	LS-SAT-8 (70V)	LS-SAT-4 (8Ω)	LS-SAT-6 (8Ω)	LS-SAT-8 (8Ω)
CHANNEL 1	LS-SAT-4 (70V)	(2) LS4SATS					
	LS-SAT-6 (70V)		(3) LS6SATS				
	LS-SAT-8 (70V)			(4) LS8SATS			
	LS-SAT-4 (8Ω)				(17) LS4SAT_8		
	LS-SAT-6 (8Ω)					(18) LS6SAT_8	
	LS-SAT-8 (8Ω)						(19) LS8SAT_8
	LS-HSUB-10 (8Ω)	(5) ST4_HS10	(6) ST6_HS10	(7) ST8_HS10	(8) S4HS10_8	(9) S6HS10_8	(10) S8HS10_8
	LS-BSUB-12 (8Ω)	(11) ST4_SB12	(12) ST6_SB12	(13) ST8_SB12	(14) S4SB12_8	(15) S6SB12_8	(16) S8SB12_8

LS V3.0B DEVICE PRESET CONFIGURATION TABLE

		CHANNEL 2					
		LS-SAT-4 (70V)	LS-SAT-6 (70V)	LS-SAT-8 (70V)	LS-SAT-4 (8Ω)	LS-SAT-6 (8Ω)	LS-SAT-8 (8Ω)
CHANNEL 1	LS-SAT-4 (70V)	(2) LS MIX4_6					
	LS-SAT-6 (70V)		(3) LS MIX4_8				
	LS-SAT-8 (70V)			(4) LS MIX6_8			
	LS-SAT-4 (8Ω)						
	LS-SAT-6 (8Ω)						
	LS-SAT-8 (8Ω)						
	LS-BSUB-12 (8Ω)						
	LS-BSUB-10 (8Ω)						

LS V3.0C DEVICE PRESET CONFIGURATION TABLE

		CHANNEL 2					
		LS-SAT-4 (70V)	LS-SAT-6 (70V)	LS-SAT-8 (70V)	LS-SAT-4 (8Ω)	LS-SAT-6 (8Ω)	LS-SAT-8 (8Ω)
CHANNEL 1	LS-SAT-4 (70V)	(2) LS4SATS					
	LS-SAT-6 (70V)		(3) LS6SATS				
	LS-SAT-8 (70V)			(4) LS8SATS			
	LS-SAT-4 (8Ω)				(17) LS4SAT_8		
	LS-SAT-6 (8Ω)					(18) LS6SAT_8	
	LS-SAT-8 (8Ω)						(19) LS8SAT_8
	LS-BSUB-8 (8Ω)	(5) ST4_SB8	(6) ST6_SB8	(7) ST8_SB8	(8) S4SB8_8	(9) S6SB8_8	(10) S8SB8_8
	LS-BSUB-10 (8Ω)	(11) ST4_SB10	(12) ST6_SB10	(13) ST8_SB10	(14) S4SB10_8	(15) S6SB10_8	(16) S8SB10_8

DEVICE FILE REFERENCE TABLES

NORMAL DEVICE FILE (LS_V3.0A)			
Preset#	Preset Name	Output Voltage	Speaker Hookup
1	Default	8Ω	Flat
		8Ω	Flat
2	LS4SATS	70V	SAT 4
		70V	SAT 4
3	LS6SATS	70V	SAT 6
		70V	SAT 6
4	LS8 SATS	70V	SAT 8
		70V	SAT 8
5	ST4_HS10	8Ω	HARDSCAPE 10"
		70V	SAT 4
6	ST6_HS10	8Ω	HARDSCAPE 10"
		70V	SAT 6
7	ST8_HS10	8Ω	HARDSCAPE 10"
		70V	SAT 8
8	S4HS10_8	8Ω	HARDSCAPE 10"
		8Ω	SAT 4
9	S6HS10_8	8Ω	HARDSCAPE 10"
		8Ω	SAT 6
10	S8HS10_8	8Ω	HARDSCAPE 10"
		8Ω	SAT 8
11	ST4_SB12	8Ω	BURIAL 12"
		70V	SAT 4
12	ST6_SB12	8Ω	BURIAL 12"
		70V	SAT 6
13	ST8_SB12	8Ω	BURIAL 12"
		70V	SAT 8
14	S4SB12_8	8Ω	BURIAL 12"
		8Ω	SAT 4
15	S6SB12_8	8Ω	BURIAL 12"
		8Ω	SAT 6
16	S8SB12_8	8Ω	BURIAL 12"
		8Ω	SAT 8
17	LS4SAT_8	8Ω	SAT 4
		8Ω	SAT 4
18	LS6SAT_8	8Ω	SAT 6
		8Ω	SAT 6
19	LS8SAT_8	8Ω	SAT 8
		8Ω	SAT 8

LS MIX DEVICE FILE (LS_V3.0B)			
Preset#	Preset Name	Voltage	Speaker Hookup
1	Default	8Ω	Flat
		8Ω	Flat
2	LS MIX4_6	70V	SAT 4
		70V	SAT 6
3	LS MIX4_8	70V	SAT 4
		70V	SAT 8
4	LS MIX6_8	70V	SAT 6
		70V	SAT 8

OPTIONAL DEVICE FILE (8" AND 10") (LS_V3.0C)			
Preset#	Preset Name	Output Voltage	Speaker Hookup
1	Default	8Ω	Flat
		8Ω	Flat
2	LS4SATS	70V	SAT 4
		70V	SAT 4
3	LS6SATS	70V	SAT 6
		70V	SAT 6
4	LS8 SATS	70V	SAT 8
		70V	SAT 8
5	ST4_SB8	8Ω	BURIAL 8"
		70V	SAT 4
6	ST6_SB8	8Ω	BURIAL 8"
		70V	SAT 6
7	ST8_SB8	8Ω	BURIAL 8"
		70V	SAT 8
8	S4SB8_8	8Ω	BURIAL 8"
		8Ω	SAT 4
9	S6SB8_8	8Ω	BURIAL 8"
		8Ω	SAT 6
10	S8SB8_8	8Ω	BURIAL 8"
		8Ω	SAT 8
11	ST4_SB10	8Ω	BURIAL 10"
		70V	SAT 4
12	ST6_SB10	8Ω	BURIAL 10"
		70V	SAT 6
13	ST8_SB10	8Ω	BURIAL 10"
		70V	SAT 8
14	S4SB10_8	8Ω	BURIAL 10"
		8Ω	SAT 4
15	S6SB10_8	8Ω	BURIAL 10"
		8Ω	SAT 6
16	S8SB10_8	8Ω	BURIAL 10"
		8Ω	SAT 8
17	LS4SAT_8	8Ω	SAT 4
		8Ω	SAT 4

OPTIONAL DEVICE FILE (8" AND 10") (LS_V3.0C)			
Preset#	Preset Name	Output Voltage	Speaker Hookup
18	LS6SAT_8	8Ω	SAT 6
		8Ω	SAT 6
19	LS8SAT_8	8Ω	SAT 8
		8Ω	SAT 8

CONTACT TECH SUPPORT

Need Help? Contact Tech Support!

If you need further clarification, please call tech support at 800.838.5052, or email support@snapav.com. For other information, instructional videos, support documentation, or ideas, visit our website and view your item's product page at www.snapav.com.

Phone: (866) 838-5052

Email: Techsupport@SnapAV.com



Rev: 150401-1200