

Standard IR codes for RX-V385-585

赤字記載 83からの変更箇所

新規対応コード

本体無効コード

対応検討中

Function		Device	Code (ID1)	Code (ID2)	385	485	585			
Group	Name							Zone		
POWER	RECEIVER POWER	ON/OFF	RECEIVER	MAIN	7E-2A	7E-2AD4	YES	YES	YES	
			ZONE2	7A-453A	7A-453B	NO	YES	YES		
			ZONE3	7A-4639	7A-4638	NO	NO	NO		
			ZONE4	7A-6F10	7A-6F11	NO	NO	NO		
	SLEEP	TOGGLE	RECEIVER	MAIN	7A-30	7A-30CE	YES	YES	YES	
			ZONE2	7A-31	7A-31CF	NO	YES	YES		
			ZONE3	7A-32	7A-32CC	NO	NO	NO		
			ZONE4	7A-33	7A-33CD	NO	NO	NO		
INPUT	USB		RECEIVER	MAIN	7F01-720D	7F01-720C	YES	YES	YES	
			ZONE2	7F01-730C	7F01-730D	NO	YES	YES		
			ZONE3	7F01-740B	7F01-740A	NO	NO	NO		
			ZONE4	7F01-7A05	7F01-7A04	NO	NO	NO		
	NET	TOGGLE	RECEIVER	MAIN	7F01-3F	7F01-3FC1	NO	YES	YES	
			ZONE2	7F01-40	7F01-40BE	NO	YES	YES		
			ZONE3	7F01-41	7F01-41BF	NO	NO	NO		
			ZONE4	7F01-49	7F01-49B7	NO	NO	NO		
	TUNER (FM/AM)	If Another input, Swich input to TUNER If TUNER input, Toggle band AM⇄FM	RECEIVER	MAIN	7A-16	7A-16E8	NO	YES	YES	
			ZONE2	7A-D2	7A-D22C	NO	YES	YES		
			ZONE3	7A-F3	7A-F30D	NO	NO	NO		
			ZONE4	7A-20	7A-20DE	NO	NO	NO		
	CATEGORY/BAND	FM	If Another input, Swich input to TUNER and select band FM	RECEIVER	MAIN	7F01-5827	7F01-5826	YES	NO	NO
				ZONE2	7F01-5926	7F01-5927	NO	NO	NO	
				ZONE3	7F01-5A25	7F01-5A24	NO	NO	NO	
				ZONE4	7F01-7D02	7F01-7D03	NO	NO	NO	
		AM	If Another input, Swich input to TUNER and select band AM	RECEIVER	MAIN	7F01-552A	7F01-552B	YES	NO	NO
				ZONE2	7F01-5629	7F01-5628	NO	NO	NO	
				ZONE3	7F01-5728	7F01-5729	NO	NO	NO	
				ZONE4	7F01-7C03	7F01-7C02	NO	NO	NO	
	BLUETOOTH		RECEIVER	MAIN	7A-BEC1	7A-BEC0	YES	YES	YES	
			ZONE2	7A-BFC0	7A-BFC1	NO	YES	YES		
			ZONE3	7A-C8B7	7A-C8B6	NO	NO	NO		
			ZONE4	7A-C9B6	7A-C9B7	NO	NO	NO		
	UP		RECEIVER	MAIN	7A-1F60	7A-1F61	YES	YES	YES	
			ZONE2	7A-205F	7A-205E	NO	YES	YES		
			ZONE3	7A-215E	7A-215F	NO	NO	NO		
			ZONE4	7A-225D	7A-225C	NO	NO	NO		
	DOWN		RECEIVER	MAIN	7A-235C	7A-235D	YES	YES	YES	
			ZONE2	7A-245B	7A-245A	NO	YES	YES		
			ZONE3	7A-255A	7A-255B	NO	NO	NO		
			ZONE4	7A-2659	7A-2658	NO	NO	NO		
PROGRAM	ENHANCER	TOGGLE	RECEIVER	MAIN	7A-94	7A-946A	YES	YES	YES	
	STRAIGHT	TOGGLE	RECEIVER	MAIN	7A-56	7A-56A8	YES	YES	YES	
	DIRECT	TOGGLE	RECEIVER	MAIN	7A-DD	7A-DD23	YES	YES	YES	
	BASS	TOGGLE	RECEIVER	MAIN	7A-BDC2	7A-BDC3	YES	YES	YES	
	PROGRAM	UP	RECEIVER	MAIN	7A-58	7A-58A6	YES	YES	YES	
DOWN		RECEIVER	MAIN	7A-59	7A-59A7	YES	YES	YES		
MEMORY	SCENE	1 BD/DVD	RECEIVER	MAIN	7A-007F	7A-007E	YES	YES	YES	
			ZONE2	7A-017E	7A-017F	NO	YES	YES		
			ZONE3	7A-027D	7A-027C	NO	NO	NO		
			ZONE4	7A-1867	7A-1866	NO	NO	NO		
	2 TV	RECEIVER	MAIN	7A-037C	7A-037D	YES	YES	YES		
		ZONE2	7A-047B	7A-047A	NO	YES	YES			
		ZONE3	7A-057A	7A-057B	NO	NO	NO			
		ZONE4	7A-1966	7A-1967	NO	NO	NO			
	3 CD or NET	RECEIVER	MAIN	7A-0679	7A-0678	YES	YES	YES		
		ZONE2	7A-0778	7A-0779	NO	YES	YES			
		ZONE3	7A-0877	7A-0876	NO	NO	NO			
		ZONE4	7A-1A65	7A-1A64	NO	NO	NO			
	4 RADIO	RECEIVER	MAIN	7A-0976	7A-0977	YES	YES	YES		
		ZONE2	7A-0A75	7A-0A74	NO	YES	YES			
		ZONE3	7A-0B74	7A-0B75	NO	NO	NO			
		ZONE4	7A-1B64	7A-1B65	NO	NO	NO			
MENU	SETUP	TOGGLE	RECEIVER	MAIN	7A-84	7A-847A	YES	YES	YES	
			ZONE2	7A-3B44	7A-3B45	NO	NO	NO		
			ZONE3	7A-443B	7A-443A	NO	NO	NO		
			ZONE4	7A-413E	7A-413F	NO	NO	NO		
	OPTION	TOGGLE	RECEIVER	MAIN	7A-6B14	7A-6B15	YES	YES	YES	
			ZONE2	7A-6C13	7A-6C12	NO	NO	NO		
			ZONE3	7A-6D12	7A-6D13	NO	NO	NO		
			ZONE4	7A-6E11	7A-6E10	NO	NO	NO		
	TOP MENU	TOGGLE	RECEIVER	MAIN	7A-A0DF	7A-A0DE	YES	YES	YES	
			ZONE2	7A-A1DE	7A-A1DF	NO	YES	YES		
			ZONE3	7A-A2DD	7A-A2DC	NO	NO	NO		
			ZONE4	7A-A3DC	7A-A3DD	NO	NO	NO		
	POP-UP MENU	TOGGLE	RECEIVER	MAIN	7A-A4DB	7A-A4DA	YES	YES	YES	
			ZONE2	7A-A5DA	7A-A5DB	NO	YES	YES		
			ZONE3	7A-A6D9	7A-A6D8	NO	NO	NO		
			ZONE4	7A-A7D8	7A-A7D9	NO	NO	NO		
	HOME	TOGGLE	RECEIVER	MAIN	7F01-66	7F01-6698	YES	YES	YES	
			ZONE2	7F01-86	7F01-8678	NO	YES	YES		
			ZONE3	7F01-A6	7F01-A658	NO	NO	NO		

				ZONE4	7F01-C6	7F01-C638	NO	NO	NO
CURSOR	UP	RECEIVER	MAIN	7A-9D	7A-9D63	YES	YES	YES	
			ZONE2	7A-2B54	7A-2B55	NO	YES	YES	
			ZONE3	7A-304F	7A-304E	NO	NO	NO	
			ZONE4	7A-354A	7A-354B	NO	NO	NO	
	DOWN	RECEIVER	MAIN	7A-9C	7A-9C62	YES	YES	YES	
			ZONE2	7A-2C53	7A-2C52	NO	YES	YES	
			ZONE3	7A-314E	7A-314F	NO	NO	NO	
			ZONE4	7A-3649	7A-3648	NO	NO	NO	
	LEFT	RECEIVER	MAIN	7A-9F	7A-9F61	YES	YES	YES	
			ZONE2	7A-2D52	7A-2D53	NO	YES	YES	
			ZONE3	7A-324D	7A-324C	NO	NO	NO	
			ZONE4	7A-3748	7A-3749	NO	NO	NO	
	RIGHT	RECEIVER	MAIN	7A-9E	7A-9E60	YES	YES	YES	
			ZONE2	7A-2E51	7A-2E50	YES	YES	YES	
			ZONE3	7A-334C	7A-334D	NO	NO	NO	
			ZONE4	7A-3847	7A-3846	NO	NO	NO	
ENTER		RECEIVER	MAIN	7A-DE	7A-DE20	YES	YES	YES	
			ZONE2	7A-2F50	7A-2F51	NO	YES	YES	
			ZONE3	7A-344B	7A-344A	NO	NO	NO	
			ZONE4	7A-3946	7A-3947	NO	NO	NO	
RETURN		RECEIVER	MAIN	7A-AA	7A-AA54	YES	YES	YES	
			ZONE2	7A-3C43	7A-3C42	NO	YES	YES	
			ZONE3	7A-3F40	7A-3F41	NO	NO	NO	
			ZONE4	7A-423D	7A-423C	NO	NO	NO	
VOLUME	VOLUME	UP	RECEIVER	MAIN	7A-1A	7A-1AE4	YES	YES	YES
				ZONE2	7A-DA	7A-DA24	NO	YES	YES
				ZONE3	7A-FD	7A-FD03	NO	NO	NO
				ZONE4	7A-2B	7A-2BD5	NO	NO	NO
		DOWN	RECEIVER	MAIN	7A-1B	7A-1BE5	YES	YES	YES
				ZONE2	7A-DB	7A-DB25	NO	YES	YES
				ZONE3	7A-FE	7A-FE00	NO	NO	NO
				ZONE4	7A-2C	7A-2CD2	NO	NO	NO
	MUTE	TOGGLE	RECEIVER	MAIN	7A-1C	7A-1CE2	YES	YES	YES
				ZONE2	7A-DC	7A-DC22	NO	YES	YES
				ZONE3	7A-FF	7A-FF01	NO	NO	NO
				ZONE4	7A-2D	7A-2DD3	NO	NO	NO
DISPLAY	DISPLAY	TOGGLE	RECEIVER	MAIN	7F01-60	7F01-609E	YES	YES	YES
				ZONE2	7F01-80	7F01-807E	NO	YES	YES
				ZONE3	7F01-A0	7F01-A05E	NO	NO	NO
				ZONE4	7F01-C0	7F01-C03E	NO	NO	NO
OPERATION	STOP		RECEIVER	MAIN	7F01-69	7F01-6997	YES	YES	YES
				ZONE2	7F01-89	7F01-8977	NO	YES	YES
				ZONE3	7F01-A9	7F01-A957	NO	NO	NO
				ZONE4	7F01-C9	7F01-C937	NO	NO	NO
	PAUSE		RECEIVER	MAIN	7F01-67	7F01-6799	YES	YES	YES
				ZONE2	7F01-87	7F01-8779	NO	YES	YES
				ZONE3	7F01-A7	7F01-A759	NO	NO	NO
				ZONE4	7F01-C7	7F01-C739	NO	NO	NO
	PLAY or MEMORY		RECEIVER	MAIN	7F01-68	7F01-6896	YES	YES	YES
				ZONE2	7F01-88	7F01-8876	NO	YES	YES
				ZONE3	7F01-A8	7F01-A856	NO	NO	NO
				ZONE4	7F01-C8	7F01-C836	NO	NO	NO
	SEARCH or TUNING	SEARCH- or TUNING-	RECEIVER	MAIN	7F01-6A	7F01-6A94	YES	YES	YES
				ZONE2	7F01-8A	7F01-8A74	NO	YES	YES
				ZONE3	7F01-AA	7F01-AA54	NO	NO	NO
				ZONE4	7F01-CA	7F01-CA34	NO	NO	NO
		SEARCH+ or TUNING+	RECEIVER	MAIN	7F01-6B	7F01-6B95	YES	YES	YES
				ZONE2	7F01-8B	7F01-8B75	NO	YES	YES
				ZONE3	7F01-AB	7F01-AB55	NO	NO	NO
				ZONE4	7F01-CB	7F01-CB35	NO	NO	NO
	SKIP	SKIP-	RECEIVER	MAIN	7F01-6C	7F01-6C92	YES	YES	YES
				ZONE2	7F01-8C	7F01-8C72	NO	YES	YES
				ZONE3	7F01-AC	7F01-AC52	NO	NO	NO
				ZONE4	7F01-CC	7F01-CC32	NO	NO	NO
		SKIP+	RECEIVER	MAIN	7F01-6D	7F01-6D93	YES	YES	YES
				ZONE2	7F01-8D	7F01-8D73	NO	YES	YES
				ZONE3	7F01-AD	7F01-AD53	NO	NO	NO
				ZONE4	7F01-CD	7F01-CD33	NO	NO	NO
	PRESET	PRESET-	RECEIVER	MAIN	7F01-5E21	7F01-5E20	YES	YES	YES
				ZONE2	7F01-5F20	7F01-5F21	NO	YES	YES
				ZONE3	7F01-601F	7F01-601E	NO	NO	NO
				ZONE4	7F01-6B14	7F01-6B15	NO	NO	NO
PRESET+		RECEIVER	MAIN	7F01-5B24	7F01-5B25	YES	YES	YES	
			ZONE2	7F01-5C23	7F01-5C22	NO	YES	YES	
			ZONE3	7F01-5D22	7F01-5D23	NO	NO	NO	
			ZONE4	7F01-6A15	7F01-6A14	NO	NO	NO	
COLOR	RED		RECEIVER	MAIN	7A-C0BF	7A-C0BE	YES	YES	YES
				ZONE2	7A-C4BB	7A-C4BA	NO	YES	YES
	GREEN		RECEIVER	MAIN	7A-C1BE	7A-C1BF	YES	YES	YES
				ZONE2	7A-C5BA	7A-C5BB	NO	YES	YES
	YELLOW		RECEIVER	MAIN	7A-C2BD	7A-C2BC	YES	YES	YES
				ZONE2	7A-C6B9	7A-C6B8	NO	YES	YES
	BLUE		RECEIVER	MAIN	7A-C3BC	7A-C3BD	YES	YES	YES
				ZONE2	7A-C7B8	7A-C7B9	NO	YES	YES
POWER	POWER	ON	RECEIVER	MAIN	7E-7E	7E-7E80	YES	YES	YES
				ZONE2	7E-BA	7E-BA44	NO	YES	YES
				ZONE3	7A-ED	7A-ED13	NO	NO	NO
				ZONE4	7A-7B	7A-7B85	NO	NO	NO
				ALL	7A-1D	7A-1DE3	YES	YES	YES
	STANDBY	OFF	RECEIVER	MAIN	7E-7F	7E-7F81	YES	YES	YES
				ZONE2	7E-BB	7E-BB45	NO	YES	YES

			ZONE3	7A-EE	7A-EE10	NO	NO	NO	
			ZONE4	7A-7C	7A-7C82	NO	NO	NO	
			ALL	7A-1E	7A-1EE0	YES	YES	YES	
SOURCE POWER	TOGGLE	RECEIVER	MAIN	7F01-50	7F01-50AE	NO	NO	NO	
			ZONE2	7F01-70	7F01-708E	NO	NO	NO	
			ZONE3	7F01-90	7F01-906E	NO	NO	NO	
			ZONE4	7F01-B0	7F01-B04E	NO	NO	NO	
SLEEP	TOGGLE	RECEIVER	ALL	7A-57	7A-57A9	YES	YES	YES	
		RECEIVER	MAIN	7E-1669	7E-1668	NO	NO	NO	
	ON	RECEIVER	ZONE2	7E-1768	7E-1769	NO	NO	NO	
		RECEIVER	ZONE3	7E-1867	7E-1866	NO	NO	NO	
		RECEIVER	ZONE4	7E-1966	7E-1967	NO	NO	NO	
		RECEIVER	ALL	7E-1A65	7E-1A64	NO	NO	NO	
		OFF	RECEIVER	MAIN	7E-1B64	7E-1B65	NO	NO	NO
			RECEIVER	ZONE2	7E-1C63	7E-1C62	NO	NO	NO
			RECEIVER	ZONE3	7E-1D62	7E-1D63	NO	NO	NO
	RECEIVER		ZONE4	7E-1E61	7E-1E60	NO	NO	NO	
	120min	RECEIVER	ALL	7E-B4	7E-B44A	YES	YES	YES	
	90min	RECEIVER	ALL	7E-B5	7E-B54B	YES	YES	YES	
	60min	RECEIVER	ALL	7E-B6	7E-B648	YES	YES	YES	
30min	RECEIVER	ALL	7E-B7	7E-B749	YES	YES	YES		
INPUT	HDMI- 1	RECEIVER	MAIN	7A-4738	7A-4739	YES	YES	YES	
			ZONE2	7A-4837	7A-4836	NO	YES	YES	
			ZONE3	7A-4936	7A-4937	NO	NO	NO	
	HDMI- 2	RECEIVER	MAIN	7A-4A35	7A-4A34	YES	YES	YES	
			ZONE2	7A-4B34	7A-4B35	NO	YES	YES	
			ZONE3	7A-4C33	7A-4C32	NO	NO	NO	
	HDMI- 3	RECEIVER	MAIN	7A-4D32	7A-4D33	YES	YES	YES	
			ZONE2	7A-4E31	7A-4E30	NO	YES	YES	
			ZONE3	7A-4F30	7A-4F31	NO	NO	NO	
	HDMI- 4	RECEIVER	MAIN	7A-502F	7A-502E	YES	YES	YES	
			ZONE2	7A-512E	7A-512F	NO	YES	YES	
			ZONE3	7A-522D	7A-522C	NO	NO	NO	
	HDMI- 5	RECEIVER	MAIN	7A-700F	7A-700E	NO	NO	NO	
			ZONE2	7A-710E	7A-710F	NO	NO	NO	
			ZONE3	7A-720D	7A-720C	NO	NO	NO	
	HDMI- 6	RECEIVER	MAIN	7A-730C	7A-730D	NO	NO	NO	
			ZONE2	7A-740B	7A-740A	NO	NO	NO	
			ZONE3	7A-750A	7A-750B	NO	NO	NO	
	HDMI- 7	RECEIVER	MAIN	7A-98E7	7A-98E6	NO	NO	NO	
			ZONE2	7A-99E6	7A-99E7	NO	NO	NO	
			ZONE3	7A-9AE5	7A-9AE4	NO	NO	NO	
	AV- 1	RECEIVER	MAIN	7A-532C	7A-532D	YES	YES	YES	
			ZONE2	7A-542B	7A-542A	NO	YES	YES	
			ZONE3	7A-552A	7A-552B	NO	NO	NO	
			ZONE4	7A-84FB	7A-84FA	NO	NO	NO	
	AV- 2	RECEIVER	MAIN	7A-5629	7A-5628	YES	YES	YES	
			ZONE2	7A-5728	7A-5729	NO	YES	YES	
			ZONE3	7A-5827	7A-5826	NO	NO	NO	
			ZONE4	7A-85FA	7A-85FB	NO	NO	NO	
	AV- 3	RECEIVER	MAIN	7A-5926	7A-5927	YES	YES	YES	
			ZONE2	7A-5A25	7A-5A24	NO	YES	YES	
			ZONE3	7A-5B24	7A-5B25	NO	NO	NO	
			ZONE4	7A-86F9	7A-86F8	NO	NO	NO	
	AV- 4	RECEIVER	MAIN	7A-5C23	7A-5C22	NO	NO	NO	
			ZONE2	7A-5D22	7A-5D23	NO	NO	NO	
			ZONE3	7A-5E21	7A-5E20	NO	NO	NO	
			ZONE4	7A-87F8	7A-87F9	NO	NO	NO	
	AV- 5	RECEIVER	MAIN	7A-5F20	7A-5F21	NO	NO	NO	
			ZONE2	7A-601F	7A-601E	NO	NO	NO	
			ZONE3	7A-611E	7A-611F	NO	NO	NO	
			ZONE4	7A-88F7	7A-88F6	NO	NO	NO	
	AV- 6	RECEIVER	MAIN	7A-621D	7A-621C	NO	NO	NO	
			ZONE2	7A-631C	7A-631D	NO	NO	NO	
			ZONE3	7A-641B	7A-641A	NO	NO	NO	
			ZONE4	7A-89F6	7A-89F7	NO	NO	NO	
	AV- 7	RECEIVER	MAIN	7A-7609	7A-7608	NO	NO	NO	
			ZONE2	7A-7708	7A-7709	NO	NO	NO	
			ZONE3	7A-7807	7A-7806	NO	NO	NO	
			ZONE4	7A-8AF5	7A-8AF4	NO	NO	NO	
	AUDIO- 1 (AUDIO)	RECEIVER	MAIN	7A-651A	7A-651B	YES	YES	YES	
			ZONE2	7A-6619	7A-6618	NO	YES	YES	
			ZONE3	7A-6718	7A-6719	NO	NO	NO	
			ZONE4	7A-8CF3	7A-8CF2	NO	NO	NO	
	AUDIO- 2	RECEIVER	MAIN	7A-6817	7A-6816	YES	YES	YES	
			ZONE2	7A-6916	7A-6917	NO	YES	YES	
			ZONE3	7A-6A15	7A-6A14	NO	NO	NO	
			ZONE4	7A-8DF2	7A-8DF3	NO	NO	NO	
	AUDIO- 3	RECEIVER	MAIN	7A-7C03	7A-7C02	NO	YES	YES	
			ZONE2	7A-7D02	7A-7D03	NO	YES	YES	
			ZONE3	7A-7E01	7A-7E00	NO	NO	NO	
			ZONE4	7A-8EF1	7A-8EF0	NO	NO	NO	
	AUDIO- 4	RECEIVER	MAIN	7A-7F00	7A-7F01	NO	NO	NO	
			ZONE2	7A-80FF	7A-80FE	NO	NO	NO	
			ZONE3	7A-81FE	7A-81FF	NO	NO	NO	
			ZONE4	7A-8FF0	7A-8FF1	NO	NO	NO	
	AUDIO- 5	RECEIVER	MAIN	7A-ACD3	7A-ACD2	NO	NO	NO	
			ZONE2	7A-ADD2	7A-ADD3	NO	NO	NO	
			ZONE3	7A-AED1	7A-AED0	NO	NO	NO	
			ZONE4	7A-AFD0	7A-AFD1	NO	NO	NO	
	AUX		RECEIVER	MAIN	7A-55	7A-55AB	YES	YES	YES

			ZONE2	7A-D8	7A-D826	NO	YES	YES	
			ZONE3	7A-F0	7A-F00E	NO	NO	NO	
			ZONE4	7A-7D	7A-7D83	NO	NO	NO	
PHONO		RECEIVER	MAIN	7A-14	7A-14EA	NO	NO	NO	
			ZONE2	7A-D0	7A-D02E	NO	NO	NO	
			ZONE3	7A-F1	7A-F10F	NO	NO	NO	
			ZONE4	7A-7E	7A-7E80	NO	NO	NO	
NET/USB	TOGGLE	RECEIVER	MAIN	7A-A8D7	7A-A8D6	NO	NO	NO	
			ZONE2	7A-A9D6	7A-A9D7	NO	NO	NO	
			ZONE3	7A-AAD5	7A-AAD4	NO	NO	NO	
			ZONE4	7A-ABD4	7A-ABD5	NO	NO	NO	
CATEGORY/BAND	FM	RECEIVER	MAIN	7F01-5827	7F01-5826	YES	YES	YES	
	If Another input, Swich input to TUNER and select band FM		ZONE2	7F01-5926	7F01-5927	NO	YES	YES	
			ZONE3	7F01-5A25	7F01-5A24	NO	NO	NO	
			ZONE4	7F01-7D02	7F01-7D03	NO	NO	NO	
	AM	RECEIVER	MAIN	7F01-552A	7F01-552B	YES	YES	YES	
	If Another input, Swich input to TUNER and select band AM		ZONE2	7F01-5629	7F01-5628	NO	YES	YES	
			ZONE3	7F01-5728	7F01-5729	NO	NO	NO	
			ZONE4	7F01-7C03	7F01-7C02	NO	NO	NO	
MULTI CH IN		RECEIVER	MAIN	7A-87	7A-8779	NO	NO	NO	
AUDIO SEL	AUTO	RECEIVER	MAIN	7E-A6	7E-A658	NO	NO	NO	
	HDMI	RECEIVER	MAIN	7E-DA	7E-DA24	NO	NO	NO	
	COAX/OPT	RECEIVER	MAIN	7E-A9	7E-A957	NO	NO	NO	
	ANALOG	RECEIVER	MAIN	7E-AA	7E-AA54	NO	NO	NO	
SUB INPUT	SERVER	RECEIVER	MAIN	7F01-6C13	7F01-6C12	YES	YES	YES	
			ZONE2	7F01-6D12	7F01-6D13	NO	YES	YES	
			ZONE3	7F01-6E11	7F01-6E10	NO	NO	NO	
			ZONE4	7F01-7807	7F01-7806	NO	NO	NO	
	NET RADIO	RECEIVER	MAIN	7F01-6F10	7F01-6F11	YES	YES	YES	
			ZONE2	7F01-700F	7F01-700E	NO	YES	YES	
			ZONE3	7F01-710E	7F01-710F	NO	NO	NO	
			ZONE4	7F01-7906	7F01-7907	NO	NO	NO	
	Rhapsody or Napster-Rhapsody *UCBGLFPPSH	RECEIVER	MAIN	7F01-750A	7F01-750B	NO	YES	YES	
			ZONE2	7F01-7609	7F01-7608	NO	YES	YES	
			ZONE3	7F01-7708	7F01-7709	NO	NO	NO	
			ZONE4	7F01-7B04	7F01-7B05	NO	NO	NO	
	Pandora	RECEIVER	MAIN	7F01-85FA	7F01-85FB	NO	YES	YES	
			ZONE2	7F01-86F9	7F01-86F8	NO	YES	YES	
			ZONE3	7F01-87F8	7F01-87F9	NO	NO	NO	
			ZONE4	7F01-88F7	7F01-88F6	NO	NO	NO	
	*UC								
	SiriusXM	RECEIVER	MAIN	7F01-81FE	7F01-81FF	NO	YES	YES	
			ZONE2	7F01-82FD	7F01-82FC	NO	YES	YES	
			ZONE3	7F01-83FC	7F01-83FD	NO	NO	NO	
			ZONE4	7F01-84FB	7F01-84FA	NO	NO	NO	
	*UC								
	Napster	RECEIVER	MAIN	7F01-89F6	7F01-89F7	NO	NO	NO	
			ZONE2	7F01-8AF5	7F01-8AF4	NO	NO	NO	
			ZONE3	7F01-8BF4	7F01-8BF5	NO	NO	NO	
			ZONE4	7F01-8CF3	7F01-8CF2	NO	NO	NO	
	Spotify	RECEIVER	MAIN	7F01-8DF2	7F01-8DF3	NO	YES	YES	
			ZONE2	7F01-8EF1	7F01-8EF0	NO	YES	YES	
			ZONE3	7F01-8FF0	7F01-8FF1	NO	NO	NO	
			ZONE4	7F01-90EF	7F01-90EE	NO	NO	NO	
	*Except TK								
	MC Link	RECEIVER	MAIN	7A-D5AA	7A-D5AB	NO	YES	YES	
			ZONE2	7A-D6A9	7A-D6A8	NO	YES	YES	
			ZONE3	7A-D7A8	7A-D7A9	NO	NO	NO	
			ZONE4	7A-D8A7	7A-D8A6	NO	NO	NO	
	AirPlay	RECEIVER	MAIN	7F01-91EE	7F01-91EF	NO	YES	YES	
			ZONE2	7F01-92ED	7F01-92EC	NO	YES	YES	
			ZONE3	7F01-93EC	7F01-93ED	NO	NO	NO	
			ZONE4	7F01-94EB	7F01-94EA	NO	NO	NO	
	JUKE	RECEIVER	MAIN	7F01-95EA	7F01-95EB	NO	YES	YES	
			ZONE2	7F01-96E9	7F01-96E8	NO	YES	YES	
			ZONE3	7F01-97E8	7F01-97E9	NO	NO	NO	
			ZONE4	7F01-98E7	7F01-98E6	NO	NO	NO	
	*BGEF								
	Qobuz	RECEIVER	MAIN	7F01-9AE5	7F01-9AE4	NO	YES	YES	
			ZONE2	7F01-9BE4	7F01-9BE5	NO	YES	YES	
			ZONE3	7F01-9CE3	7F01-9CE2	NO	NO	NO	
			ZONE4	7F01-9DE2	7F01-9DE3	NO	NO	NO	
	*BGEF								
	TIDAL	RECEIVER	MAIN	7F01-A6D9	7F01-A6D8	NO	YES	YES	
			ZONE2	7F01-A7D8	7F01-A7D9	NO	YES	YES	
			ZONE3	7F01-A8D7	7F01-A8D6	NO	NO	NO	
			ZONE4	7F01-A9D6	7F01-A9D7	NO	NO	NO	
	*Except JTK								
	Deezer	RECEIVER	MAIN	7F01-A2DD	7F01-A2DC	NO	YES	YES	
			ZONE2	7F01-A3DC	7F01-A3DD	NO	YES	YES	
			ZONE3	7F01-A4DB	7F01-A4DA	NO	NO	NO	
			ZONE4	7F01-A5DA	7F01-A5DB	NO	NO	NO	
	*Except T								
	Radiko	RECEIVER	MAIN	7F01-9EE1	7F01-9EE0	NO	NO	NO	
			ZONE2	7F01-9FE0	7F01-9FE1	NO	NO	NO	
			ZONE3	7F01-A0DF	7F01-A0DE	NO	NO	NO	
			ZONE4	7F01-A1DE	7F01-A1DF	NO	NO	NO	
	*J								
MAIN SYNC	ON		ZONE2	7A-D2AD	7A-D2AC	NO	NO	NO	
			ZONE3	7A-D3AC	7A-D3AD	NO	NO	NO	
			ZONE4	7A-D4AB	7A-D4AA	NO	NO	NO	
OUTPUT	HDMI OUT	TOGGLE	RECEIVER	MAIN	7A-35	7A-35CB	YES	YES	YES
				ZONE2	7A-B4CB	7A-B4CA	NO	NO	NO
				ZONE3	7A-B5CA	7A-B5CB	NO	NO	NO
				ZONE4	7A-B6C9	7A-B6C8	NO	NO	NO
	SPEAKER	ZONE A	RECEIVER	MAIN	7A-9A	7A-9A64	NO	YES	YES
		ZONE B	RECEIVER	MAIN	7A-9B	7A-9B65	NO	YES	YES
	HDMI OUT 1	ON	RECEIVER	ALL	7E-205F	7E-205E	YES	YES	YES
		OFF	RECEIVER	ALL	7E-B0CF	7E-B0CE	YES	YES	YES
	HDMI OUT 2	ON	RECEIVER	ALL	7E-215E	7E-215F	NO	NO	NO

		OFF	RECEIVER	ALL	7E-B1CE	7E-B1CF	NO	NO	NO
VOLUME	MUTE	ON (FULL)	RECEIVER	MAIN	7E-A2	7E-A25C	YES	YES	YES
				ZONE2	7E-A0	7E-A05E	NO	YES	YES
				ZONE3	7E-26	7E-26D8	NO	NO	NO
				ZONE4	7E-0C73	7E-0C72	NO	NO	NO
				ALL	7E-2758	7E-2759	NO	NO	NO
		ON (-40dB)	RECEIVER	MAIN	7E-631C	7E-631D	NO	NO	NO
				ZONE2	7E-641B	7E-641A	NO	YES	YES
				ZONE3	7E-651A	7E-651B	NO	NO	NO
				ZONE4	7E-6619	7E-6618	NO	NO	NO
				ALL	7E-6718	7E-6719	NO	NO	NO
		ON (-20dB)	RECEIVER	MAIN	7E-DF	7E-DF21	YES	YES	YES
				ZONE2	7E-2956	7E-2957	NO	YES	YES
				ZONE3	7E-2A55	7E-2A54	NO	NO	NO
				ZONE4	7E-2B54	7E-2B55	NO	NO	NO
				ALL	7E-2C53	7E-2C52	NO	NO	NO
		OFF	RECEIVER	MAIN	7E-A3	7E-A35D	YES	YES	YES
ZONE2	7E-A1			7E-A15F	NO	YES	YES		
ZONE3	7E-66			7E-6698	NO	NO	NO		
ZONE4	7E-0D72			7E-0D73	NO	NO	NO		
ALL	7E-2857			7E-2856	NO	NO	NO		
DISPLAY	SMART ZOOM	ON	RECEIVER	MAIN	7E-225D	7E-225C	NO	NO	NO
		OFF (THROUGH)	RECEIVER	MAIN	7E-235C	7E-235D	NO	NO	NO
	INFO	TOGGLE	RECEIVER	MAIN	7A-2758	7A-2759	YES	YES	YES
				ZONE2	7A-2857	7A-2856	NO	NO	NO
ZONE3				7A-2956	7A-2957	NO	NO	NO	
ZONE4	7A-2A55			7A-2A54	NO	NO	NO		
PROGRAM	MOVIE	TOGGLE	RECEIVER	MAIN	7A-88	7A-8876	YES	YES	YES
	MUSIC	TOGGLE	RECEIVER	MAIN	7A-89	7A-8977	YES	YES	YES
	SUR. DECODE	TOGGLE	RECEIVER	MAIN	7A-8D	7A-8D73	YES	YES	YES
	CLASSICAL	TOGGLE	RECEIVER	MAIN	7A-8A	7A-8A74	NO	NO	NO
	LIVE/CLUB	TOGGLE	RECEIVER	MAIN	7A-8B	7A-8B75	NO	NO	NO
	ENTERTAIN	TOGGLE	RECEIVER	MAIN	7A-8C	7A-8C72	NO	NO	NO
	MOVIE	TOGGLE	RECEIVER	MAIN	7A-8E	7A-8E70	NO	NO	NO
	STEREO	TOGGLE	RECEIVER	MAIN	7A-8F	7A-8F71	YES	YES	YES
	PURE DIRECT or DIRECT	ON	RECEIVER	MAIN	7E-80	7E-807E	YES	YES	YES
		OFF	RECEIVER	MAIN	7E-82	7E-827C	YES	YES	YES
	STRAIGHT	ON	RECEIVER	MAIN	7E-E0	7E-E01E	YES	YES	YES
		OFF	RECEIVER	MAIN	7E-27	7E-27D9	YES	YES	YES
	PROGRAM	Hall in Munich A	RECEIVER	MAIN	7E-E1	7E-E11F	YES	YES	YES
		Hall in Munich B	RECEIVER	MAIN	7E-E2	7E-E21C	NO	NO	NO
		Hall in Frankfurt	RECEIVER	MAIN	7E-E3	7E-E31D	NO	NO	NO
		Hall in Stuttgart	RECEIVER	MAIN	7E-E4	7E-E41A	NO	NO	NO
		Hall in Vienna	RECEIVER	MAIN	7E-E5	7E-E51B	YES	YES	YES
		Hall in Amsterdam	RECEIVER	MAIN	7E-E6	7E-E618	NO	NO	NO
		Hall in USA A	RECEIVER	MAIN	7E-C4	7E-C43A	NO	NO	NO
		Hall in USA B	RECEIVER	MAIN	7E-C5	7E-C53B	NO	NO	NO
		Church in Tokyo	RECEIVER	MAIN	7E-E7	7E-E719	NO	NO	NO
		Church in Freiburg	RECEIVER	MAIN	7E-E8	7E-E816	NO	NO	NO
		Church in Royaumont	RECEIVER	MAIN	7E-E9	7E-E917	NO	NO	NO
		Chamber	RECEIVER	MAIN	7E-AF	7E-AF51	YES	YES	YES
		Village Gate	RECEIVER	MAIN	7E-EA	7E-EA14	NO	NO	NO
		Village Vanguard	RECEIVER	MAIN	7E-EB	7E-EB15	NO	NO	NO
		Warehouse Loft	RECEIVER	MAIN	7E-EE	7E-EE10	NO	NO	NO
		Cellar Club	RECEIVER	MAIN	7E-CD	7E-CD33	YES	YES	YES
		The Roxy Theatre	RECEIVER	MAIN	7E-ED	7E-ED13	YES	YES	YES
		The Bottom Line	RECEIVER	MAIN	7E-EC	7E-EC12	YES	YES	YES
		Arena	RECEIVER	MAIN	7E-EF	7E-EF11	NO	NO	NO
		Sports	RECEIVER	MAIN	7E-F8	7E-F806	YES	YES	YES
		Action Game	RECEIVER	MAIN	7E-F2	7E-F20C	YES	YES	YES
		Roleplaying Game	RECEIVER	MAIN	7E-CE	7E-CE30	YES	YES	YES
		Music Video	RECEIVER	MAIN	7E-F3	7E-F30D	YES	YES	YES
		Recital/Opera	RECEIVER	MAIN	7E-F5	7E-F50B	NO	NO	NO
		Pavilion	RECEIVER	MAIN	7E-F6	7E-F608	NO	NO	NO
		Disco	RECEIVER	MAIN	7E-F0	7E-F00E	NO	NO	NO
		Standard	RECEIVER	MAIN	7E-FE	7E-FE00	YES	YES	YES
		Spectacle	RECEIVER	MAIN	7E-F9	7E-F907	YES	YES	YES
		Sci-Fi	RECEIVER	MAIN	7E-FA	7E-FA04	YES	YES	YES
		Adventure	RECEIVER	MAIN	7E-FB	7E-FB05	YES	YES	YES
	Drama	RECEIVER	MAIN	7E-FC	7E-FC02	YES	YES	YES	
	Mono Movie	RECEIVER	MAIN	7E-F7	7E-F709	YES	YES	YES	
	2ch Stereo	RECEIVER	MAIN	7E-C0	7E-C03E	YES	YES	YES	
	Xch Stereo	RECEIVER	MAIN	7E-FF	7E-FF01	YES	YES	YES	
	SUR. DECODE	ON	RECEIVER	MAIN	7E-FD	7E-FD03	YES	YES	YES
ENHANCER	AUTO	RECEIVER	MAIN	7E-D8	7E-D826	YES	YES	YES	
	OFF	RECEIVER	MAIN	7E-D9	7E-D927	YES	YES	YES	
TONE CONTROL	BASS +	RECEIVER	ZONE2	7A-73	7A-738D	NO	NO	NO	
		RECEIVER	ZONE3	7A-77	7A-7789	NO	NO	NO	
		RECEIVER	ZONE4	7E-433C	7E-433D	NO	NO	NO	
	BASS -	RECEIVER	ZONE2	7A-74	7A-748A	NO	NO	NO	
		RECEIVER	ZONE3	7A-78	7A-7886	NO	NO	NO	
		RECEIVER	ZONE4	7E-443B	7E-443A	NO	NO	NO	
	TREBLE +	RECEIVER	ZONE2	7A-75	7A-758B	NO	NO	NO	
		RECEIVER	ZONE3	7A-79	7A-7987	NO	NO	NO	
		RECEIVER	ZONE4	7E-453A	7E-453B	NO	NO	NO	
TREBLE -	RECEIVER	ZONE2	7A-76	7A-7688	NO	NO	NO		
	RECEIVER	ZONE3	7A-7A	7A-7A84	NO	NO	NO		
	RECEIVER	ZONE4	7E-4639	7E-4638	NO	NO	NO		
BALANCE	LEFT	RECEIVER	ZONE2	7E-D4	7E-D42A	NO	NO	NO	
		RECEIVER	ZONE3	7E-D6	7E-D628	NO	NO	NO	
		RECEIVER	ZONE4	7E-4738	7E-4739	NO	NO	NO	
	RIGHT	RECEIVER	ZONE2	7E-D5	7E-D52B	NO	NO	NO	

			RECEIVER	ZONE3	7E-D7	7E-D729	NO	NO	NO	
			RECEIVER	ZONE4	7E-4837	7E-4836	NO	NO	NO	
MENU	SUR. DECODE	DOLBY SURROUND	RECEIVER	MAIN	7E-B8C7	7E-B8C6	NO	NO	YES	
		Neural:X	RECEIVER	MAIN	7E-CC	7E-CC32	NO	NO	YES	
		PLII(IIx) MOVIE	RECEIVER	MAIN	7E-67	7E-6799	YES	YES	NO	
		PLII(IIx) MUSIC	RECEIVER	MAIN	7E-68	7E-6896	YES	YES	NO	
		PLII(IIx) GAME	RECEIVER	MAIN	7E-C7	7E-C739	YES	YES	NO	
		NEO:6 CINEMA	RECEIVER	MAIN	7E-69	7E-6997	YES	YES	YES	
		NEO:6 MUSIC	RECEIVER	MAIN	7E-6A	7E-6A94	YES	YES	YES	
		Prologic	RECEIVER	MAIN	7E-C9	7E-C937	NO	NO	NO	
	EXTED SURROUND	AUTO	RECEIVER	MAIN	7E-7C	7E-7C82	NO	NO	NO	
		PLIIx MOVIE	RECEIVER	MAIN	7E-DD	7E-DD23	NO	NO	NO	
		PLIIx MUSIC	RECEIVER	MAIN	7E-DE	7E-DE20	NO	NO	NO	
		ON(EX/ES)	RECEIVER	MAIN	7E-B8	7E-B846	NO	NO	NO	
		OFF	RECEIVER	MAIN	7E-B9	7E-B947	NO	NO	NO	
	HDMI Auto Lipsync	ON	RECEIVER	MAIN	7E-83FC	7E-83FD	YES	YES	YES	
		OFF(MANUAL)	RECEIVER	MAIN	7E-84FB	7E-84FA	YES	YES	YES	
	DUAL MONO	MAIN	RECEIVER	MAIN	7E-93	7E-936D	YES*J	YES*J	YES*J	
		SUB	RECEIVER	MAIN	7E-94	7E-946A	YES*J	YES*J	YES*J	
		ALL	RECEIVER	MAIN	7E-95	7E-956B	YES*J	YES*J	YES*J	
	ADAPTIVE DRC	ON	RECEIVER	MAIN	7E-740B	7E-740A	YES	YES	YES	
		OFF	RECEIVER	MAIN	7E-750A	7E-750B	YES	YES	YES	
	ADAPTIVE DSP	ON	RECEIVER	MAIN	7E-7609	7E-7608	NO	NO	NO	
		OFF	RECEIVER	MAIN	7E-7708	7E-7709	NO	NO	NO	
	TRIGGER 1	MANUAL ON	RECEIVER	ALL	7E-3F40	7E-3F41	NO	NO	NO	
		MANUAL OFF	RECEIVER	ALL	7E-403F	7E-403E	NO	NO	NO	
	TRIGGER 2	MANUAL ON	RECEIVER	ALL	7E-413E	7E-413F	NO	NO	NO	
		MANUAL OFF	RECEIVER	ALL	7E-423D	7E-423C	NO	NO	NO	
	DIALOGUE LEVEL	0	RECEIVER	MAIN	7E-B4CB	7E-B4CA	YES	YES	YES	
		1	RECEIVER	MAIN	7E-B5CA	7E-B5CB	YES	YES	YES	
		2	RECEIVER	MAIN	7E-B6C9	7E-B6C8	YES	YES	YES	
		3	RECEIVER	MAIN	7E-B7C8	7E-B7C9	YES	YES	YES	
	LEVEL	TOGGLE	RECEIVER	MAIN	7A-86	7A-8678	NO	NO	NO	
	MEMORY	SCENE	5	RECEIVER	MAIN	7A-90EF	7A-90EE	NO	NO	NO
			6	RECEIVER	MAIN	7A-91EE	7A-91EF	NO	NO	NO
7			RECEIVER	MAIN	7A-92ED	7A-92EC	NO	NO	NO	
8			RECEIVER	MAIN	7A-93EC	7A-93ED	NO	NO	NO	
9			RECEIVER	MAIN	7A-94EB	7A-94EA	NO	NO	NO	
10			RECEIVER	MAIN	7A-95EA	7A-95EB	NO	NO	NO	
11			RECEIVER	MAIN	7A-96E9	7A-96E8	NO	NO	NO	
12			RECEIVER	MAIN	7A-97E8	7A-97E9	NO	NO	NO	
VOLUME MEMORY			1	RECEIVER	MAIN	7E-6B	7E-6B95	YES	YES	YES
					ZONE2	7E-87	7E-8779	NO	NO	NO
					ZONE3	7E-20	7E-20DE	NO	NO	NO
					ZONE4	7E-007F	7E-007E	NO	NO	NO
		2	RECEIVER	MAIN	7E-6C	7E-6C92	YES	YES	YES	
				ZONE2	7E-88	7E-8876	NO	NO	NO	
				ZONE3	7E-21	7E-21DF	NO	NO	NO	
				ZONE4	7E-017E	7E-017F	NO	NO	NO	
		3	RECEIVER	MAIN	7E-6D	7E-6D93	YES	YES	YES	
				ZONE2	7E-89	7E-8977	NO	NO	NO	
				ZONE3	7E-22	7E-22DC	NO	NO	NO	
				ZONE4	7E-027D	7E-027C	NO	NO	NO	
		4	RECEIVER	MAIN	7E-6E	7E-6E90	YES	YES	YES	
				ZONE2	7E-8A	7E-8A74	NO	NO	NO	
				ZONE3	7E-23	7E-23DD	NO	NO	NO	
				ZONE4	7E-037C	7E-037D	NO	NO	NO	
		5	RECEIVER	MAIN	7E-6F	7E-6F91	YES	YES	YES	
				ZONE2	7E-8B	7E-8B75	NO	NO	NO	
				ZONE3	7E-24	7E-24DA	NO	NO	NO	
				ZONE4	7E-047B	7E-047A	NO	NO	NO	
		6	RECEIVER	MAIN	7E-70	7E-708E	YES	YES	YES	
				ZONE2	7E-8C	7E-8C72	NO	NO	NO	
				ZONE3	7E-25	7E-25DB	NO	NO	NO	
				ZONE4	7E-057A	7E-057B	NO	NO	NO	
VOLUME RECALL		1	RECEIVER	MAIN	7E-75	7E-758B	YES	YES	YES	
			ZONE2	7E-8D	7E-8D73	NO	NO	NO		
			ZONE3	7E-60	7E-609E	NO	NO	NO		
			ZONE4	7E-0679	7E-0678	NO	NO	NO		
	2	RECEIVER	MAIN	7E-76	7E-7688	YES	YES	YES		
			ZONE2	7E-8E	7E-8E70	NO	NO	NO		
			ZONE3	7E-61	7E-619F	NO	NO	NO		
			ZONE4	7E-0778	7E-0779	NO	NO	NO		
	3	RECEIVER	MAIN	7E-77	7E-7789	YES	YES	YES		
			ZONE2	7E-8F	7E-8F71	NO	NO	NO		
			ZONE3	7E-62	7E-629C	NO	NO	NO		
			ZONE4	7E-0877	7E-0876	NO	NO	NO		
	4	RECEIVER	MAIN	7E-78	7E-7886	YES	YES	YES		
			ZONE2	7E-90	7E-906E	NO	NO	NO		
			ZONE3	7E-63	7E-639D	NO	NO	NO		
			ZONE4	7E-0976	7E-0977	NO	NO	NO		
	5	RECEIVER	MAIN	7E-79	7E-7987	YES	YES	YES		
			ZONE2	7E-91	7E-916F	NO	NO	NO		
			ZONE3	7E-64	7E-649A	NO	NO	NO		
			ZONE4	7E-0A75	7E-0A74	NO	NO	NO		
	6	RECEIVER	MAIN	7E-7A	7E-7A84	YES	YES	YES		
			ZONE2	7E-92	7E-926C	NO	NO	NO		
			ZONE3	7E-65	7E-659B	NO	NO	NO		
			ZONE4	7E-0B74	7E-0B75	NO	NO	NO		
VIDEO PRESET	1	RECEIVER	MAIN	7E-A4DB	7E-A4DA	NO	NO	NO		
	2	RECEIVER	MAIN	7E-A5DA	7E-A5DB	NO	NO	NO		
	3	RECEIVER	MAIN	7E-A6D9	7E-A6D8	NO	NO	NO		

		4	RECEIVER	MAIN	7E-A7D8	7E-A7D9	NO	NO	NO
		5	RECEIVER	MAIN	7E-A8D7	7E-A8D6	NO	NO	NO
		6	RECEIVER	MAIN	7E-A9D6	7E-A9D7	NO	NO	NO
	MEMORY		RECEIVER	MAIN	7F01-6718	7F01-6719	YES	YES	YES
				ZONE2	7F01-6817	7F01-6816	NO	YES	YES
				ZONE3	7F01-6916	7F01-6917	NO	NO	NO
				ZONE4	7F01-80FF	7F01-80FE	NO	NO	NO
ZONE CONTROL	PARTY	ON	RECEIVER	ALL	7E-354A	7E-354B	NO	NO	NO
		OFF	RECEIVER	ALL	7E-3649	7E-3648	NO	NO	NO
	PARTY	TOGGLE	RECEIVER	ALL	7A-34	7A-34CA	NO	NO	NO
MENU	SRCH MODE	PRESET	TUNER	ALL	7F01-FD	7F01-FD03	YES	YES	YES
		MANUAL	HD-Radio		7F01-FE	7F01-FE00	YES	YES	YES
		TOGGLE			7A-AB	7A-AB55	YES	YES	YES
INPUT	BAND	FM			7E-BC	7E-BC42	YES	YES	YES
		AM			7E-BD	7E-BD43	YES	YES	YES
OPERATION	AUTO TUNING	UP			7E-BE	7E-BE40	YES	YES	YES
		DOWN			7E-BF	7E-BF41	YES	YES	YES
	TUNING/ PRESET No.	UP			7A-10	7A-10EE	YES	YES	YES
		DOWN			7A-11	7A-11EF	YES	YES	YES
	TUNING/CH	TUNING-	RECEIVER	MAIN	7F01-641B	7F01-641A	YES	YES	YES
				ZONE2	7F01-651A	7F01-651B	NO	YES	YES
				ZONE3	7F01-6619	7F01-6618	NO	NO	NO
				ZONE4	7F01-7F00	7F01-7F01	NO	NO	NO
		TUNING+	RECEIVER	MAIN	7F01-611E	7F01-611F	YES	YES	YES
				ZONE2	7F01-621D	7F01-621C	NO	YES	YES
				ZONE3	7F01-631C		NO	NO	NO
				ZONE4	7F01-7E01	7F01-7E00	NO	NO	NO
	TUNER mode	STEREO	RECEIVER	MAIN	7F01-4A35	7F01-4A34	NO	NO	NO
		MONO			7F01-4B34	7F01-4B35	NO	NO	NO
	CUSTOMIZE Operate as PROGRAM	CUSTOMIZE- Operate as PROGRAM-	RECEIVER	MAIN	7A-CBB4	7A-CBB5	YES	YES	YES
				ZONE2	7A-CDB2	7A-CDB3	NO	NO	NO
				ZONE3	7A-CFB0	7A-CFB1	NO	NO	NO
				ZONE4	7A-D1AE	7A-D1AF	NO	NO	NO
		CUSTOMIZE+ Operate as PROGRAM+	RECEIVER	MAIN	7A-CAB5	7A-CAB4	YES	YES	YES
				ZONE2	7A-CCB3	7A-CCB2	NO	NO	NO
				ZONE3	7A-CEB1	7A-CEB0	NO	NO	NO
				ZONE4	7A-D0AF	7A-D0AE	NO	NO	NO
NUMBER/CHARACTER	1		RECEIVER	MAIN	7F01-51	7F01-51AF	YES	YES	YES
				ZONE2	7F01-71	7F01-718F	NO	YES	YES
				ZONE3	7F01-91	7F01-916F	NO	NO	NO
				ZONE4	7F01-B1	7F01-B14F	NO	NO	NO
	2		RECEIVER	MAIN	7F01-52	7F01-52AC	YES	YES	YES
				ZONE2	7F01-72	7F01-728C	NO	YES	YES
				ZONE3	7F01-92	7F01-926C	NO	NO	NO
				ZONE4	7F01-B2	7F01-B24C	NO	NO	NO
	3		RECEIVER	MAIN	7F01-53	7F01-53AD	YES	YES	YES
				ZONE2	7F01-73	7F01-738D	NO	YES	YES
				ZONE3	7F01-93	7F01-936D	NO	NO	NO
				ZONE4	7F01-B3	7F01-B34D	NO	NO	NO
	4		RECEIVER	MAIN	7F01-54	7F01-54AA	YES	YES	YES
				ZONE2	7F01-74	7F01-748A	NO	YES	YES
				ZONE3	7F01-94	7F01-946A	NO	NO	NO
				ZONE4	7F01-B4	7F01-B44A	NO	NO	NO
	5		RECEIVER	MAIN	7F01-55	7F01-55AB	YES	YES	YES
				ZONE2	7F01-75	7F01-758B	NO	YES	YES
				ZONE3	7F01-95	7F01-956B	NO	NO	NO
				ZONE4	7F01-B5	7F01-B54B	NO	NO	NO
	6		RECEIVER	MAIN	7F01-56	7F01-56A8	YES	YES	YES
				ZONE2	7F01-76	7F01-7688	NO	YES	YES
				ZONE3	7F01-96	7F01-9668	NO	NO	NO
				ZONE4	7F01-B6	7F01-B648	NO	NO	NO
	7		RECEIVER	MAIN	7F01-57	7F01-57A9	YES	YES	YES
				ZONE2	7F01-77	7F01-7789	NO	YES	YES
				ZONE3	7F01-97	7F01-9769	NO	NO	NO
				ZONE4	7F01-B7	7F01-B749	NO	NO	NO
	8		RECEIVER	MAIN	7F01-58	7F01-58A6	YES	YES	YES
				ZONE2	7F01-78	7F01-7886	NO	YES	YES
				ZONE3	7F01-98	7F01-9866	NO	NO	NO
				ZONE4	7F01-B8	7F01-B846	NO	NO	NO
	9		RECEIVER	MAIN	7F01-59	7F01-59A7	YES	YES	YES
				ZONE2	7F01-79	7F01-7987	NO	YES	YES
				ZONE3	7F01-99	7F01-9967	NO	NO	NO
				ZONE4	7F01-B9	7F01-B947	NO	NO	NO
	0		RECEIVER	MAIN	7F01-5A	7F01-5AA4	YES	YES	YES
				ZONE2	7F01-7A	7F01-7A84	NO	YES	YES
				ZONE3	7F01-9A	7F01-9A64	NO	NO	NO
				ZONE4	7F01-BA	7F01-BA44	NO	NO	NO
	+10 or MEMORY		RECEIVER	MAIN	7F01-5B	7F01-5BA5	NO	NO	NO
				ZONE2	7F01-7B	7F01-7B85	NO	NO	NO
				ZONE3	7F01-9B	7F01-9B65	NO	NO	NO
				ZONE4	7F01-BB	7F01-BB45	NO	NO	NO
	ENT		RECEIVER	MAIN	7F01-5C	7F01-5CA2	YES	YES	YES
				ZONE2	7F01-7C	7F01-7C82	NO	YES	YES
				ZONE3	7F01-9C	7F01-9C62	NO	NO	NO
				ZONE4	7F01-BC	7F01-BC42	NO	NO	NO