

Yamaha Standard IR codes for RX-V685, RX-A780 – RX-A3080 and CX-A5200

Red Font Changed from RX-V 83 and RX-A 70 Series

New Code

Not Available

Group	Function		Device	Zone	Code (ID1)	Code (ID2)	RX-V685 RX-A780	RX-A880	RX-A1080	RX-A2080	RX-A3080	CX-A5200				
	Name															
POWER	RECEIVER POWER	ON/OFF	RECEIVER	MAIN	7E-2A	7E-2AD4	YES	YES	YES	YES	YES	YES				
				ZONE2	7A-453A	7A-453B	YES	YES	YES	YES	YES	YES				
				ZONE3	7A-4639	7A-4638	NO	NO	NO	YES	YES	YES				
				ZONE4	7A-6F10	7A-6F11	NO	NO	NO	YES	YES	YES				
	SLEEP	TOGGLE	RECEIVER	MAIN	7A-30	7A-30CE	YES	YES	YES	YES	YES	YES	YES			
				ZONE2	7A-31	7A-31CF	YES	YES	YES	YES	YES	YES				
				ZONE3	7A-32	7A-32CC	NO	NO	NO	YES	YES	YES				
				ZONE4	7A-33	7A-33CD	NO	NO	NO	YES	YES	YES				
INPUT	BLUETOOTH		RECEIVER	MAIN	7A-BEC1	7A-BEC0	YES	YES	YES	YES	YES	YES				
				ZONE2	7A-BFC0	7A-BFC1	YES	YES	YES	YES	YES	YES				
				ZONE3	7A-C8B7	7A-C8B6	NO	NO	NO	YES	YES	YES				
	USB		RECEIVER	MAIN	7F01-720D	7F01-720C	YES	YES	YES	YES	YES	YES				
				ZONE2	7F01-730C	7F01-730D	YES	YES	YES	YES	YES	YES				
				ZONE3	7F01-740B	7F01-740A	NO	NO	NO	YES	YES	YES				
	NET	TOGGLE	RECEIVER	MAIN	7F01-3F	7F01-3FC1	YES	YES	YES	YES	YES	YES				
				ZONE2	7F01-40	7F01-40BE	YES	YES	YES	YES	YES	YES				
				ZONE3	7F01-41	7F01-41BF	NO	NO	NO	YES	YES	YES				
	TUNER		RECEIVER	MAIN	7A-16	7A-16E8	YES	YES	YES	YES	YES	YES				
				ZONE2	7A-D2	7A-D22C	YES	YES	YES	YES	YES	YES				
				ZONE3	7A-F3	7A-F30D	NO	NO	NO	YES	YES	YES				
	UP		RECEIVER	MAIN	7A-1F60	7A-1F61	YES	YES	YES	YES	YES	YES				
				ZONE2	7A-205F	7A-205E	YES	YES	YES	YES	YES	YES				
				ZONE3	7A-215E	7A-215F	NO	NO	NO	YES	YES	YES				
				ZONE4	7A-225D	7A-225C	NO	NO	NO	YES	YES	YES				
	DOWN		RECEIVER	MAIN	7A-235C	7A-235D	YES	YES	YES	YES	YES	YES				
				ZONE2	7A-245B	7A-245A	YES	YES	YES	YES	YES	YES				
				ZONE3	7A-255A	7A-255B	NO	NO	NO	YES	YES	YES				
				ZONE4	7A-2659	7A-2658	NO	NO	NO	YES	YES	YES				
	OUTPUT	HDMI OUT	TOGGLE	RECEIVER	MAIN	7A-35	7A-35CB	YES	YES	YES	YES	YES	YES			
					ZONE2	7A-B4CB	7A-B4CA	NO	NO	YES	YES	YES	YES			
					ZONE4	7A-B8C9	7A-B8C8	NO	NO	NO	YES	YES	YES			
PROGRAM	ENHANCER	TOGGLE	RECEIVER	MAIN	7A-94	7A-946A	YES	YES	YES	YES	YES	YES				
				ZONE2	7A-D9A6	7A-D9A7	YES	YES	YES	YES	YES	YES				
				ZONE3	7A-DA45	7A-DA44	NO	NO	NO	YES	YES	YES				
	STRAIGHT	TOGGLE	RECEIVER	MAIN	7A-56	7A-56A8	YES	YES	YES	YES	YES	YES				
				PURE DIRECT	TOGGLE	RECEIVER	MAIN	7A-DD	7A-DD23	YES	YES	YES	YES	YES		
	SUR. DECODE	TOGGLE	RECEIVER	MAIN	7A-8D	7A-8D73	YES	YES	YES	YES	YES	YES				
				SUR AI	TOGGLE	RECEIVER	MAIN	7E-13	7E-13ED	YES	YES	YES	YES	YES		
	PROGRAM	UP	RECEIVER	MAIN	7A-58	7A-58A6	YES*No key	YES*No key	YES*No key	YES*No key	YES*No key	YES*No key				
				DOWN	RECEIVER	MAIN	7A-59	7A-59A7	YES*No key	YES*No key	YES*No key	YES*No key	YES*No key			
	MEMORY	SCENE	1	RECEIVER	MAIN	7A-007F	7A-007E	YES	YES	YES	YES	YES	YES			
ZONE2					7A-017E	7A-017F	YES	YES	YES	YES	YES	YES				
ZONE3					7A-027D	7A-027C	NO	NO	NO	YES	YES	YES				
ZONE4					7A-1867	7A-1866	NO	NO	NO	YES	YES	YES				
2					RECEIVER	MAIN	7A-037C	7A-037D	YES	YES	YES	YES	YES	YES		
						ZONE2	7A-047B	7A-047A	YES	YES	YES	YES	YES	YES		
						ZONE3	7A-057A	7A-057B	NO	NO	NO	YES	YES	YES		
						ZONE4	7A-1966	7A-1967	NO	NO	NO	YES	YES	YES		
3					RECEIVER	MAIN	7A-0679	7A-0678	YES	YES	YES	YES	YES	YES		
						ZONE2	7A-0778	7A-0779	YES	YES	YES	YES	YES	YES		
						ZONE3	7A-0877	7A-0876	NO	NO	NO	YES	YES	YES		
						ZONE4	7A-1A65	7A-1A64	NO	NO	NO	YES	YES	YES		
4					RECEIVER	MAIN	7A-0976	7A-0977	YES	YES	YES	YES	YES	YES		
						ZONE2	7A-0A75	7A-0A74	YES	YES	YES	YES	YES	YES		
						ZONE3	7A-0B74	7A-0B75	NO	NO	NO	YES	YES	YES		
						ZONE4	7A-1B64	7A-1B65	NO	NO	NO	YES	YES	YES		
5					RECEIVER	MAIN	7A-90EF	7A-90EE	YES	YES	YES	YES	YES	YES		
						ZONE2	7A-0C73	7A-0C72	YES	YES	YES	YES	YES	YES		
						ZONE3	7A-0D72	7A-0D73	NO	NO	NO	YES	YES	YES		
						ZONE4	7A-0E71	7A-0E70	NO	NO	NO	YES	YES	YES		
6					RECEIVER	MAIN	7A-91EE	7A-91EF	YES	YES	YES	YES	YES	YES		
						ZONE2	7A-0F70	7A-0F71	YES	YES	YES	YES	YES	YES		
						ZONE3	7A-106F	7A-106E	NO	NO	NO	YES	YES	YES		
						ZONE4	7A-116E	7A-116F	NO	NO	NO	YES	YES	YES		
7					RECEIVER	MAIN	7A-92ED	7A-92EC	YES	YES	YES	YES	YES	YES		
						ZONE2	7A-126D	7A-126C	YES	YES	YES	YES	YES	YES		
						ZONE3	7A-136C	7A-136D	NO	NO	NO	YES	YES	YES		
						ZONE4	7A-146B	7A-146A	NO	NO	NO	YES	YES	YES		
8					RECEIVER	MAIN	7A-93EC	7A-93ED	YES	YES	YES	YES	YES	YES		
						ZONE2	7A-156A	7A-156B	YES	YES	YES	YES	YES	YES		
						ZONE3	7A-1669	7A-1668	NO	NO	NO	YES	YES	YES		
						ZONE4	7A-1768	7A-1769	NO	NO	NO	YES	YES	YES		
MENU					SETUP	TOGGLE	RECEIVER	MAIN	7A-84	7A-847A	YES	YES	YES	YES	YES	YES
								OPTION	TOGGLE	RECEIVER	MAIN	7A-6B14	7A-6B15	YES	YES	YES
					SCENE MENU	TOGGLE	RECEIVER	MAIN	7A-E49B	7A-E49A	YES	YES	YES	YES	YES	YES
								ZONE2	7A-E59A	7A-E59B	YES	YES	YES	YES	YES	YES
								ZONE3	7A-E699	7A-E698	NO	NO	NO	YES	YES	YES
								ZONE4	7A-E798	7A-E799	NO	NO	NO	YES	YES	YES
					TOP MENU	TOGGLE	RECEIVER	MAIN	7A-A0DF	7A-A0DE	YES	YES	YES	YES	YES	
					POP-UP MENU	TOGGLE	RECEIVER	MAIN	7A-A4DB	7A-A4DA	YES	YES	YES	YES	YES	
					HOME	TOGGLE	RECEIVER	MAIN	7F01-66	7F01-6698	YES	YES	YES	YES	YES	
					CURSOR	UP	RECEIVER	MAIN	7A-9D	7A-9D63	YES	YES	YES	YES	YES	YES
ZONE2								7A-2B54	7A-2B55	NO	NO	NO	YES	YES	YES	

	DOWN	RECEIVER	MAIN	7A-9C	7A-9C62	YES	YES	YES	YES	YES	YES	
			ZONE2	7A-2C53	7A-2C52	NO	NO	NO	YES	YES	YES	
			ZONE3	7A-9F	7A-9F61	YES	YES	YES	YES	YES	YES	
		LEFT	RECEIVER	MAIN	7A-2D52	7A-2D53	NO	NO	NO	YES	YES	YES
				ZONE2	7A-9E	7A-9E60	YES	YES	YES	YES	YES	YES
				ZONE3	7A-2E51	7A-2E50	NO	NO	NO	YES	YES	YES
	ENTER	RECEIVER	MAIN	7A-DE	7A-DE20	YES	YES	YES	YES	YES	YES	
			ZONE2	7A-2F50	7A-2F51	NO	NO	NO	YES	YES	YES	
	RETURN	RECEIVER	MAIN	7A-AA	7A-AA54	YES	YES	YES	YES	YES	YES	
			ZONE2	7A-3C43	7A-3C42	NO	NO	NO	YES	YES	YES	
	LEVEL	TOGGLE	RECEIVER	MAIN	7A-86	7A-8678	NO	NO	NO	YES*No key	YES*No key	YES*No key
	VOLUME	VOLUME	UP	RECEIVER	MAIN	7A-1A	7A-1AE4	YES	YES	YES	YES	YES
ZONE2					7A-DA	7A-DA24	YES	YES	YES	YES	YES	
ZONE3					7A-FD	7A-FD03	NO	NO	NO	YES	YES	YES
DOWN			RECEIVER	MAIN	7A-1B	7A-1BE5	YES	YES	YES	YES	YES	YES
				ZONE2	7A-DB	7A-DB25	YES	YES	YES	YES	YES	YES
				ZONE3	7A-FE	7A-FE00	NO	NO	NO	YES	YES	YES
MUTE		TOGGLE	RECEIVER	MAIN	7A-1C	7A-1CE2	YES	YES	YES	YES	YES	YES
				ZONE2	7A-DC	7A-DC22	YES	YES	YES	YES	YES	YES
				ZONE3	7A-FF	7A-FF01	NO	NO	NO	YES	YES	YES
ZONE CONTROL		PARTY	TOGGLE	RECEIVER	ALL	7A-34	7A-34CA	YES	YES	YES	YES	YES
DISPLAY		HELP	RECEIVER	MAIN	7F01-AA05	7F01-AA04	YES	YES	YES	YES	YES	YES
				ZONE2	7F01-ABD4	7F01-ABD5	YES	YES	YES	YES	YES	YES
	ZONE3			7F01-ACD3	7F01-ACD2	NO	NO	NO	YES	YES	YES	
	ZONE4			7F01-ADD2	7F01-ADD3	NO	NO	NO	YES	YES	YES	
	INFO	TOGGLE	RECEIVER	MAIN	7A-2758	7A-2759	YES(No Key)	YES(No Key)	YES(No Key)	YES(No Key)	YES(No Key)	YES(No Key)
OPERATION	STOP	RECEIVER	MAIN	7F01-69	7F01-6997	YES	YES	YES	YES	YES	YES	
			ZONE2	7F01-89	7F01-8977	YES	YES	YES	YES	YES	YES	
			ZONE3	7F01-A9	7F01-A957	NO	NO	NO	YES	YES	YES	
	PAUSE or BAND	RECEIVER	MAIN	7F01-67	7F01-6799	YES	YES	YES	YES	YES	YES	
			ZONE2	7F01-87	7F01-8779	YES	YES	YES	YES	YES	YES	
			ZONE3	7F01-A7	7F01-A759	NO	NO	NO	YES	YES	YES	
	PLAY or MEMORY	RECEIVER	MAIN	7F01-68	7F01-6896	YES	YES	YES	YES	YES	YES	
			ZONE2	7F01-88	7F01-8876	YES	YES	YES	YES	YES	YES	
			ZONE3	7F01-A8	7F01-A856	NO	NO	NO	YES	YES	YES	
	SEARCH or TUNING	RECEIVER	MAIN	7F01-6A	7F01-6A94	YES	YES	YES	YES	YES	YES	
			ZONE2	7F01-8A	7F01-8A74	YES	YES	YES	YES	YES	YES	
			ZONE3	7F01-AA	7F01-AA54	NO	NO	NO	YES	YES	YES	
	SEARCH+ or TUNING+	RECEIVER	MAIN	7F01-6B	7F01-6B95	YES	YES	YES	YES	YES	YES	
			ZONE2	7F01-8B	7F01-8B75	YES	YES	YES	YES	YES	YES	
			ZONE3	7F01-AB	7F01-AB55	NO	NO	NO	YES	YES	YES	
	SKIP	RECEIVER	MAIN	7F01-6C	7F01-6C92	YES	YES	YES	YES	YES	YES	
			ZONE2	7F01-8C	7F01-8C72	YES	YES	YES	YES	YES	YES	
			ZONE3	7F01-AC	7F01-AC52	NO	NO	NO	YES	YES	YES	
	SKIP+	RECEIVER	MAIN	7F01-6D	7F01-6D93	YES	YES	YES	YES	YES	YES	
			ZONE2	7F01-8D	7F01-8D73	YES	YES	YES	YES	YES	YES	
			ZONE3	7F01-AD	7F01-AD53	NO	NO	NO	YES	YES	YES	
	PRESET	RECEIVER	MAIN	7F01-5E21	7F01-5E20	YES	YES	YES	YES	YES	YES	
			ZONE2	7F01-5F20	7F01-5F21	YES	YES	YES	YES	YES	YES	
			ZONE3	7F01-601F	7F01-601E	NO	NO	NO	YES	YES	YES	
	PRESET+	RECEIVER	MAIN	7F01-5B24	7F01-5B25	YES	YES	YES	YES	YES	YES	
			ZONE2	7F01-5C23	7F01-5C22	YES	YES	YES	YES	YES	YES	
			ZONE3	7F01-5D22	7F01-5D23	NO	NO	NO	YES	YES	YES	
	CATEGORY/BAND	FM	RECEIVER	MAIN	7F01-5827	7F01-5826	NO	NO	NO	YES*No key	YES*No key	YES*No key
				ZONE2	7F01-5926	7F01-5927	NO	NO	NO	YES*No key	YES*No key	YES*No key
				ZONE3	7F01-5A25	7F01-5A24	NO	NO	NO	YES*No key	YES*No key	YES*No key
		AM	RECEIVER	MAIN	7F01-582A	7F01-582B	NO	NO	NO	YES*No key	YES*No key	YES*No key
				ZONE2	7F01-5629	7F01-5628	NO	NO	NO	YES*No key	YES*No key	YES*No key
				ZONE3	7F01-5728	7F01-5729	NO	NO	NO	YES*No key	YES*No key	YES*No key
	TUNING/CH	TUNING-	RECEIVER	MAIN	7F01-641B	7F01-641A	NO	NO	NO	YES*No key	YES*No key	YES*No key
				ZONE2	7F01-651A	7F01-651B	NO	NO	NO	YES*No key	YES*No key	YES*No key
				ZONE3	7F01-6619	7F01-6618	NO	NO	NO	YES*No key	YES*No key	YES*No key
		TUNING+	RECEIVER	MAIN	7F01-611E	7F01-611F	NO	NO	NO	YES*No key	YES*No key	YES*No key
				ZONE2	7F01-621D	7F01-621C	NO	NO	NO	YES*No key	YES*No key	YES*No key
				ZONE3	7F01-631C	7F01-631D	NO	NO	NO	YES*No key	YES*No key	YES*No key
	CUSTOMIZE	CUSTOMIZE-	RECEIVER	MAIN	7A-CBB4	7A-CBB5	YES	YES	YES	YES	YES	YES
				ZONE2	7A-CDB2	7A-CDB3	YES	YES	YES	YES	YES	YES
				ZONE3	7A-CFB0	7A-CFB1	NO	NO	NO	YES	YES	YES
		CUSTOMIZE+	RECEIVER	MAIN	7A-CAB5	7A-CAB4	YES	YES	YES	YES	YES	YES
				ZONE2	7A-CGB3	7A-CGB2	YES	YES	YES	YES	YES	YES
				ZONE3	7A-CEB1	7A-CEB0	NO	NO	NO	YES	YES	YES
	RED	RECEIVER	MAIN	7A-C0BF	7A-C0BE	YES	YES	YES	YES	YES	YES	
	GREEN	RECEIVER	MAIN	7A-C1BE	7A-C1BF	YES	YES	YES	YES	YES	YES	
	YELLOW	RECEIVER	MAIN	7A-C2BD	7A-C2BC	YES	YES	YES	YES	YES	YES	
BLUE	RECEIVER	MAIN	7A-C3BC	7A-C3BD	YES	YES	YES	YES	YES	YES		