

Yamaha Standard IR codes for WXA-50, WXC-50

*A: Australia model, B and G: Europe model, C: Canada model, U: USA model

*T: China model, J: Japan model, K: Korea model

rev 0

Function			Device		Code (ID1)	Code (ID2)	WXA-50 WXC-50
Group	Name			Zone			
POWER	RECEIVER POWER	ON/OFF	RECEIVER	MAIN	7E-2A	7E-2AD4	YES
INPUT	OPT		RECEIVER	MAIN	7A-651A	7A-651B	YES
	AUX		RECEIVER	MAIN	7A-55	7A-55AB	YES
	BLUETOOTH		RECEIVER	MAIN	7A-BEC1	7A-BEC0	YES
	USB		RECEIVER	MAIN	7F01-720D	7F01-720C	YES
	NET	TOGGLE	RECEIVER	MAIN	7F01-3F	7F01-3FC1	YES
VOLUME	VOLUME	UP	RECEIVER	MAIN	7A-1A	7A-1AE4	YES
		DOWN	RECEIVER	MAIN	7A-1B	7A-1BE5	YES
	MUTE	TOGGLE	RECEIVER	MAIN	7A-1C	7A-1CE2	YES
NUMBER/ CHARACTER	PRESET 1		RECEIVER	MAIN	7F01-51	7F01-51AF	YES
	PRESET 2		RECEIVER	MAIN	7F01-52	7F01-52AC	YES
	PRESET 3		RECEIVER	MAIN	7F01-53	7F01-53AD	YES
	PRESET 4		RECEIVER	MAIN	7F01-54	7F01-54AA	YES
	PRESET 5		RECEIVER	MAIN	7F01-55	7F01-55AB	YES
	PRESET 6		RECEIVER	MAIN	7F01-56	7F01-56A8	YES
OPERATION	PLAY or PAUSE		RECEIVER	MAIN	7F01-99E6	7F01-99E7	YES
	SKIP	SKIP-	RECEIVER	MAIN	7F01-6C	7F01-6C92	YES
		SKIP+	RECEIVER	MAIN	7F01-6D	7F01-6D93	YES