

Yamaha Standard IR codes for XDA-QS5400RK and XDA-AMP5400RK

*A: Australia model, B and G: Europe model, C: Canada model, U: USA model

*T: China model, J: Japan model, K: Korea model

rev 0

Function			Device		Code (ID1)	Code (ID2)	XDA-QS5400RK	XDA-AMP5400RK
Group	Name			Zone				
POWER	RECEIVER POWER	ON/OFF	RECEIVER	MAIN	7E-2A	7E-2AD4	YES	YES
				ZONE2	7A-453A	7A-453B	YES	YES
				ZONE3	7A-4639	7A-4638	YES	YES
				ZONE4	7A-6F10	7A-6F11	YES	YES

Yamaha Extended IR codes for XDA-QS5400RK and XDA-AMP5400RK

*A: Australia model, B and G: Europe model, C: Canada model, U: USA model

*T: China model, J: Japan model, K: Korea model

rev 0

Function			Device		Code (ID1)	Code (ID2)	XDA-QS5400RK	XDA-AMP5400RK
Group	Name			Zone				
POWER	POWER	ON	RECEIVER	MAIN	7E-7E	7E-7E80	YES	YES
				ZONE2	7E-BA	7E-BA44	YES	YES
				ZONE3	7A-ED	7A-ED13	YES	YES
				ZONE4	7A-7B	7A-7B85	YES	YES
				ALL	7A-1D	7A-1DE3	YES	YES
	STANDBY	OFF	RECEIVER	MAIN	7E-7F	7E-7F81	YES	YES
				ZONE2	7E-BB	7E-BB45	YES	YES
				ZONE3	7A-EE	7A-EE10	YES	YES
				ZONE4	7A-7C	7A-7C82	YES	YES
				ALL	7A-1E	7A-1EE0	YES	YES
	SLEEP	ON	RECEIVER	MAIN	7E-1669	7E-1668	YES	NO
				ZONE2	7E-1768	7E-1769	YES	NO
				ZONE3	7E-1867	7E-1866	YES	NO
				ZONE4	7E-1966	7E-1967	YES	NO
				ALL	7E-1A65	7E-1A64	YES	NO
		OFF	RECEIVER	MAIN	7E-1B64	7E-1B65	YES	NO
				ZONE2	7E-1C63	7E-1C62	YES	NO
				ZONE3	7E-1D62	7E-1D63	YES	NO
				ZONE4	7E-1E61	7E-1E60	YES	NO
				ALL	7E-B3	7E-B34D	YES	NO
120min	RECEIVER	ALL	7E-B4	7E-B44A	YES	NO		
90min	RECEIVER	ALL	7E-B5	7E-B54B	YES	NO		
60min	RECEIVER	ALL	7E-B6	7E-B648	YES	NO		
30min	RECEIVER	ALL	7E-B7	7E-B749	YES	NO		
INPUT	USB		RECEIVER	MAIN	7F01-720D	7F01-720C	YES	NO
				ZONE2	7F01-730C	7F01-730D	YES	NO
				ZONE3	7F01-740B	7F01-740A	YES	NO
				ZONE4	7F01-7A05	7F01-7A04	YES	NO
	BUS-IN		RECEIVER	MAIN	7A-55	7A-55AB	YES	NO
				ZONE2	7A-D8	7A-D826	YES	NO
				ZONE3	7A-F0	7A-F00E	YES	NO
				ZONE4	7A-7D	7A-7D83	YES	NO
	NET	TOGGLE	RECEIVER	MAIN	7F01-3F	7F01-3FC1	YES	NO
				ZONE2	7F01-40	7F01-40BE	YES	NO
				ZONE3	7F01-41	7F01-41BF	YES	NO
				ZONE4	7F01-49	7F01-49B7	YES	NO
	SUB INPUT	SERVER	RECEIVER	MAIN	7F01-6C13	7F01-6C12	YES	NO
				ZONE2	7F01-6D12	7F01-6D13	YES	NO

				ZONE3	7F01-6E11	7F01-6E10	YES	NO
				ZONE4	7F01-7807	7F01-7806	YES	NO
	NET RADIO	RECEIVER		MAIN	7F01-6F10	7F01-6F11	YES	NO
				ZONE2	7F01-700F	7F01-700E	YES	NO
				ZONE3	7F01-710E	7F01-710F	YES	NO
				ZONE4	7F01-7906	7F01-7907	YES	NO
	Rhapsody or Napster *UCBG	RECEIVER		MAIN	7F01-750A	7F01-750B	YES	NO
				ZONE2	7F01-7609	7F01-7608	YES	NO
				ZONE3	7F01-7708	7F01-7709	YES	NO
				ZONE4	7F01-7B04	7F01-7B05	YES	NO
	Pandora	RECEIVER		MAIN	7F01-85FA	7F01-85FB	YES	NO
				ZONE2	7F01-86F9	7F01-86F8	YES	NO
				ZONE3	7F01-87F8	7F01-87F9	YES	NO
	*UA			ZONE4	7F01-88F7	7F01-88F6	YES	NO
	Sirius XM	RECEIVER		MAIN	7F01-81FE	7F01-81FF	YES	NO
				ZONE2	7F01-82FD	7F01-82FC	YES	NO
				ZONE3	7F01-83FC	7F01-83FD	YES	NO
	*UC			ZONE4	7F01-84FB	7F01-84FA	YES	NO
	Spotify	RECEIVER		MAIN	7F01-8DF2	7F01-8DF3	YES	NO
				ZONE2	7F01-8EF1	7F01-8EF0	YES	NO
				ZONE3	7F01-8FF0	7F01-8FF1	YES	NO
	*Except TK			ZONE4	7F01-90EF	7F01-90EE	YES	NO
	JUKE	RECEIVER		MAIN	7F01-95EA	7F01-95EB	YES	NO
				ZONE2	7F01-96E9	7F01-96E8	YES	NO
				ZONE3	7F01-97E8	7F01-97E9	YES	NO
	*BG			ZONE4	7F01-98E7	7F01-98E6	YES	NO
	Radiko	RECEIVER		MAIN	7F01-9AE5	7F01-9AE4	YES	NO
				ZONE2	7F01-9BE4	7F01-9BE5	YES	NO
				ZONE3	7F01-9CE3	7F01-9CE2	YES	NO
	*J			ZONE4	7F01-9DE2	7F01-9DE3	YES	NO
	Qobuz	RECEIVER		MAIN	7F01-9EE1	7F01-9EE0	YES	NO
				ZONE2	7F01-9FE0	7F01-9FE1	YES	NO
				ZONE3	7F01-A0DF	7F01-A0DE	YES	NO
	*BG			ZONE4	7F01-A1DE	7F01-A1DF	YES	NO
	AirPlay	RECEIVER		MAIN	7F01-91EE	7F01-91EF	YES	NO
				ZONE2	7F01-92ED	7F01-92EC	YES	NO
				ZONE3	7F01-93EC	7F01-93ED	YES	NO
				ZONE4	7F01-94EB	7F01-94EA	YES	NO
	MC Link	RECEIVER		MAIN	7A-D5AA	7A-D5AB	YES	NO
				ZONE2	7A-D6A9	7A-D6A8	YES	NO
				ZONE3	7A-D7A8	7A-D7A9	YES	NO
				ZONE4	7A-D8A7	7A-D8A6	YES	NO
VOLUME	VOLUME	UP	RECEIVER	MAIN	7A-1A	7A-1AE4	YES	NO
				ZONE2	7A-DA	7A-DA24	YES	NO
				ZONE3	7A-FD	7A-FD03	YES	NO
				ZONE4	7A-2B	7A-2BD5	YES	NO
		DOWN	RECEIVER	MAIN	7A-1B	7A-1BE5	YES	NO
				ZONE2	7A-DB	7A-DB25	YES	NO
				ZONE3	7A-FE	7A-FE00	YES	NO
				ZONE4	7A-2C	7A-2CD2	YES	NO
	MUTE	TOGGLE	RECEIVER	MAIN	7A-1C	7A-1CE2	YES	YES
				ZONE2	7A-DC	7A-DC22	YES	YES
				ZONE3	7A-FF	7A-FF01	YES	YES
				ZONE4	7A-2D	7A-2DD3	YES	YES
		ON (FULL)	RECEIVER	MAIN	7E-A2	7E-A25C	YES	YES
				ZONE2	7E-A0	7E-A05E	YES	YES
				ZONE3	7E-26	7E-26D8	YES	YES
				ZONE4	7E-0C73	7E-0C72	YES	YES
			ALL	7E-2758	7E-2759	YES	YES	

		ON (-40dB)	RECEIVER	MAIN	7E-631C	7E-631D	YES	NO	
				ZONE2	7E-641B	7E-641A	YES	NO	
				ZONE3	7E-651A	7E-651B	YES	NO	
				ZONE4	7E-6619	7E-6618	YES	NO	
				ALL	7E-6718	7E-6719	YES	NO	
		ON (-20dB)	RECEIVER	MAIN	7E-DF	7E-DF21	YES	NO	
				ZONE2	7E-2956	7E-2957	YES	NO	
				ZONE3	7E-2A55	7E-2A54	YES	NO	
				ZONE4	7E-2B54	7E-2B55	YES	NO	
				ALL	7E-2C53	7E-2C52	YES	NO	
		OFF	RECEIVER	MAIN	7E-A3	7E-A35D	YES	YES	
				ZONE2	7E-A1	7E-A15F	YES	YES	
				ZONE3	7E-66	7E-6698	YES	YES	
				ZONE4	7E-0D72	7E-0D73	YES	YES	
				ALL	7E-2857	7E-2856	YES	YES	
PROGRAM	ENHANCER	ON	RECEIVER	MAIN	7E-D8	7E-D826	YES	NO	
				ZONE2	7E-B9C6	7E-B9C7	YES	NO	
				ZONE3	7E-BBC4	7E-BBC5	YES	NO	
				ZONE4	7E-BEC1	7E-BEC0	YES	NO	
		OFF	RECEIVER	MAIN	7E-D9	7E-D927	YES	NO	
				ZONE2	7E-BAC5	7E-BAC4	YES	NO	
				ZONE3	7E-BCC3	7E-BCC2	YES	NO	
				ZONE4	7E-BFC0	7E-BFC1	YES	NO	
	TRIGGER	MANUAL ON	RECEIVER	MAIN	7E-3F40	7E-3F41	YES	NO	
				ZONE2	7E-413E	7E-413F	YES	NO	
				ZONE3	7E-52	7E-52AC	YES	NO	
				ZONE4	7E-C0BF	7E-C0BE	YES	NO	
		MANUAL OFF	RECEIVER	MAIN	7E-403F	7E-403E	YES	NO	
				ZONE2	7E-423D	7E-423C	YES	NO	
				ZONE3	7E-53	7E-53AD	YES	NO	
ZONE4	7E-C1BE	7E-C1BF	YES	NO					
OPERATION	PAUSE		RECEIVER	MAIN	7F01-67	7F01-6799	YES	NO	
				ZONE2	7F01-87	7F01-8779	YES	NO	
				ZONE3	7F01-A7	7F01-A759	YES	NO	
				ZONE4	7F01-C7	7F01-C739	YES	NO	
	PLAY		RECEIVER	MAIN	7F01-68	7F01-6896	YES	NO	
				ZONE2	7F01-88	7F01-8876	YES	NO	
				ZONE3	7F01-A8	7F01-A856	YES	NO	
				ZONE4	7F01-C8	7F01-C836	YES	NO	
	STOP		RECEIVER	MAIN	7F01-69	7F01-6997	YES	NO	
				ZONE2	7F01-89	7F01-8977	YES	NO	
				ZONE3	7F01-A9	7F01-A957	YES	NO	
				ZONE4	7F01-C9	7F01-C937	YES	NO	
	SKIP	SKIP-		RECEIVER	MAIN	7F01-6C	7F01-6C92	YES	NO
					ZONE2	7F01-8C	7F01-8C72	YES	NO
					ZONE3	7F01-AC	7F01-AC52	YES	NO
ZONE4					7F01-CC	7F01-CC32	YES	NO	
SKIP+			RECEIVER	MAIN	7F01-6D	7F01-6D93	YES	NO	
				ZONE2	7F01-8D	7F01-8D73	YES	NO	
				ZONE3	7F01-AD	7F01-AD53	YES	NO	
				ZONE4	7F01-CD	7F01-CD33	YES	NO	