 



A Transmitter - IR Control In (3.5mm {1/8"} Mono)



IR Signal	Tip
GND (Ground)	Ring


This connection does not include power for an IR Receiver. If the system requires a powered IR Receiver at the Transmitter, a powered IR Block (ex: SnapAV KIT-IR-RPTR-1X4) will be needed between the IR Receiver and the Transmitters IR Control In.

 C IR Flasher Out (3.5mm {1/8"} Mono)



IR Signal	Tip
GND (Ground)	Ring

 B Receiver - IR Receiver In (3.5mm {1/8"} Stereo)



IR Signal	Tip
GND (Ground)	Ring
+9V DC	Sleeve

This 3.5mm {1/8"} Stereo connection includes +9V DC power for an IR Receiver. DO NOT connect a mono cable to this connection as damage may occur. If the system requires connection to an Automation System, or Connecting Block, the included IR Adapter Cable must be used between the Automation System or Connecting Block output, and the IR Receiver input.

