



Accessing the Web GUI Over the LAN

The web interface gives you easy access to all kinds of setup features for the matrix.

To access it, make sure the matrix is connected to the LAN. Then, with a Windows device on that same LAN, open up a browser and type <http://avmatrix> into the address bar.

You should be directed to the home page where you're then able to configure the matrix as you see fit using any of the menu bar options.