


IR Receiver PWR ON

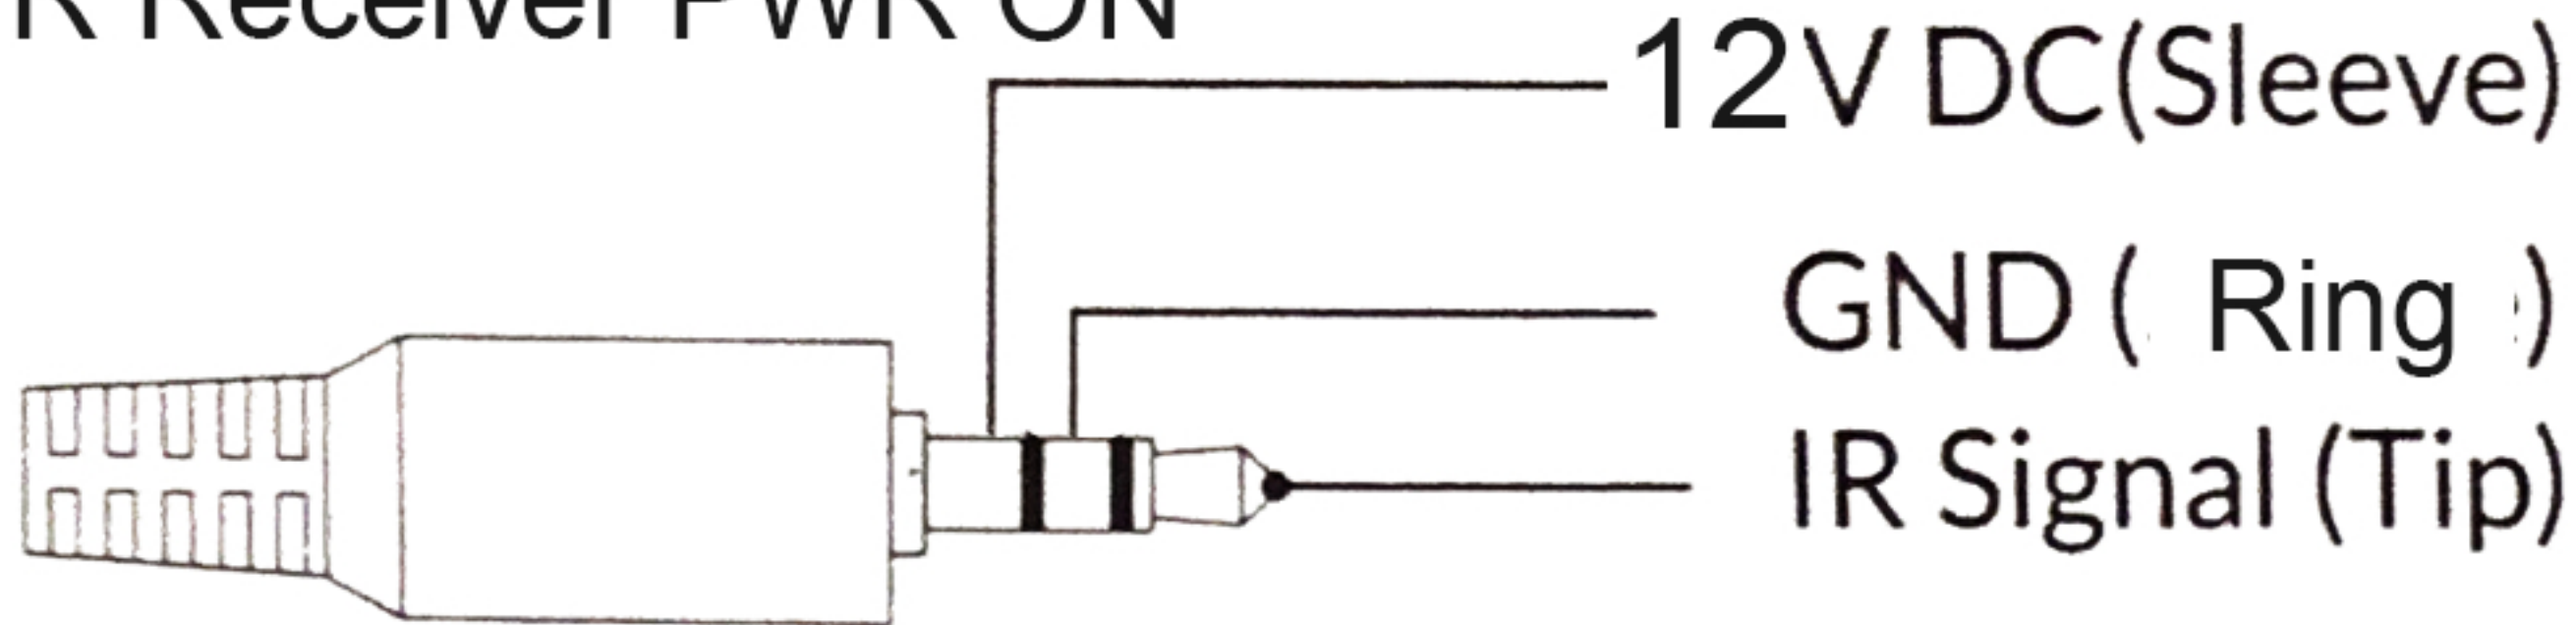

IR Receiver PWR OFF

