

# SM-ART1-M

Strong™ Medium Single-arm Articulating Mount  
(Black)



**INSTALLATION MANUAL**

## HARDWARE KIT



M4 x 12mm Philips Head Screw (x4)



M4 x 20mm Philips Head Screw (x4)



# 14x2.5" Philips Wood Screw (x4)



M5 (16 x 5.3 x 1.5mm) Metal Washer (x4)



M5 x 12mm Philips Head Screw (x4)



M5 x 30mm Philips Head Screw (x4)



Concrete Wall Anchor (x4)



M8 (20.5 x 8.5 x 2mm) Metal Washer (x8)



M6 x 12mm Philips Head Screw (x4)



M6 x 20mm Philips Head Screw (x4)



M6 x 30mm Philips Head Screw (x4)



Allen Wrench, 4mm (x1)



M8 x 16mm Philips Head Screw (x4)



M8 x 20mm Phillips Head Screw (x4)



M4/M5/M6 spacer 12mm (x4)



Screw Cover (x2)



4" Wire Tie (x4)

## WARNINGS

- We highly recommend this product be installed by a qualified professional.
- Please do not begin installation until you have thoroughly read and understood these instructions.
- This mount supports display mounting from VESA 75X75, 100x100, 200x100 & 200x200, and supports a maximum load of 80 lbs (36.4 kg).
- Ensure the wall that you plan to use will safely support four times the combined weight of the mount and your chosen display.
- The manufacturer does not accept responsibility for incorrect installation.

## SPECIFICATIONS

- Maximum Load: 80 lbs. (36.4 kg)
- Maximum Extension: 15.4"
- Wire management
- Pan/Swivel Range: 270°
- Tilt Range: +5° / -15°
- Roll: +/- 2.5°

## TOOLS REQUIRED

- Power Drill
- 3/16" (5mm) Drill Bit
- 5/16" (8mm) Masonry Bit
- Phillips Head Screw Driver
- Level

## BOX CONTENTS

- Wall Arm Assembly (1)
- Adapter Plate(1)
- Hardware kit (1)



### CAUTION:

This wall mount is intended for use only with the maximum weight of 80 lbs (36.4kg).

# INSTALLATION INSTRUCTIONS

## Step 1: Use Wall Plate to Mark Mounting Hole Locations

- a. The use of a stud finder is highly recommended.


## Step 2: Mount the Wall Arm Assembly

### For Mounting on a Stud Wall (Fig 1)

- a. Pre-drill two holes into stud using a 3/16" drill bit. Be sure to drill into the center of the studs.
- b. Insert two Wood Screws into holes through the Wall Plate and tighten down. Be sure the Wall Arm Assembly is mounted with the key slots pointing upwards

**WARNING: Tighten screws so that the Wall Plate is firmly attached, but do not over tighten. Over tightening can damage the screws, greatly reducing their holding strength.**

- c. (Optional) Attach Screw Covers over head of screws.

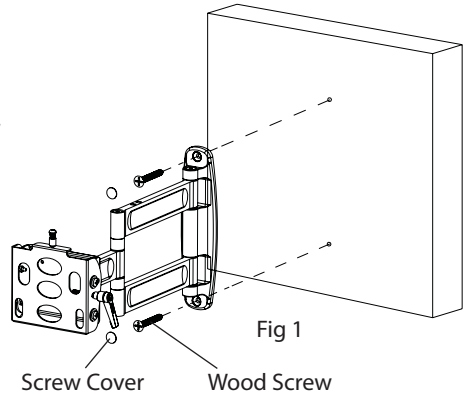

### For Mounting on a Concrete Wall (Fig 2)


- a. Pre-drill two holes into concrete using 5/16" drill bits. Insert Concrete Wall Anchors and tap in with hammer, if necessary.

**WARNING:** When installing Wall Arm Assembly on cinder block, verify first that you have a minimum of 1-3/8" of concrete thickness to be used for the Concrete Wall Anchors. Do not drill into mortar joints! Be sure to mount in a solid part of the block, generally 1" minimum from the side of the block. Cinder block must meet ASTM C-90 specifications. It is suggested that a standard electric drill on slow setting is used to drill the hole instead of a hammer drill to avoid breaking out the back of the hole when entering a void or cavity.

**Concrete must be 2000 psi density minimum. Lighter density concrete may not hold concrete anchor.**

Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.

- b. Insert two Wood Screws into the Wall Anchors through the Wall Plate. Be sure the Wall Arm Assembly is mounted with the key slots pointing upwards.

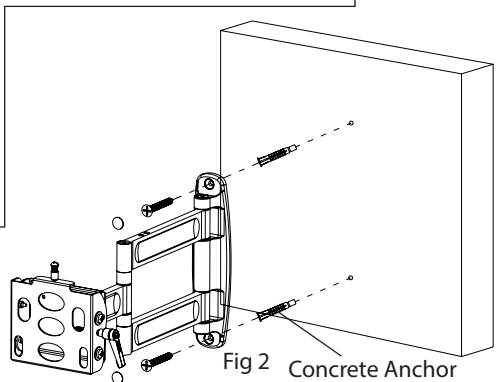


**WARNING: Tighten screws so that wall plate is firmly attached, but do not over tighten. Over tightening can damage the screws, greatly reducing their holding strength.**

- c. (Optional) Attach Screw Covers over head of screw.


### Step 3: Attach the Adapter Plate to the Display

- a. Attach the Adapter Plate to the display using M4, M5, M6, or M8 screws. For displays with a hole pattern in a pocket or inputs behind Adapter Plate, spacers go between Adapter Plate and display (Fig 3).

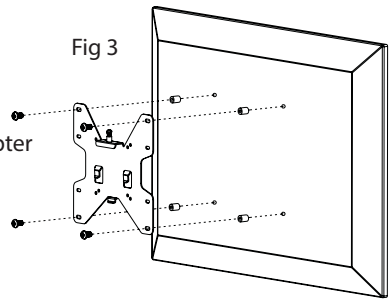

### Step 4: Attach the Adapter Plate with Display to Wall Arm Assembly

- a. Attach Adapter Plate and Display onto Wall Arm Assembly, ensuring all 3 hooks slide into holes of Mounting Head (Fig 4).
- b. Using a Philips Head Screwdriver, tighten down Locking Screw located on Adapter Plate into threaded hole in the Mounting Head on Wall Arm Assembly.

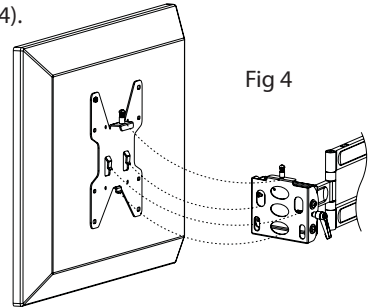

## ADJUSTMENTS

### Adjust Tilt and Horizontal Level

#### Tilt Adjustment

- a. Loosen Tilt Lever (Only enough to allow controlled adjustment)
- b. Adjust Tilt
- c. Lock Tilt Lever (Tighten)
- d. Once Tilt Lever is locked, the position of the lever can be adjusted, without loosening or tightening the unit, by pulling the lever outwards and then repositioning it to a vertical, less obtrusive position.

#### Horizontal Level Adjustment (Roll)

- a. To adjust the horizontal angle (roll) of the display, use the screws found on the back side of Wall Arm Assembly Mounting Head. First remove the inset Philips head screw on the left of the mount arm (Fig 5). Next, slightly loosen the top two screws then firmly hold opposite corners of the display and gently turn it into the desired position. When level, re-tighten top screws to lock in the position.

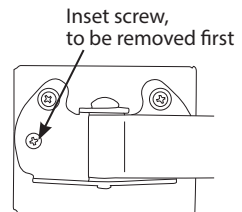


Fig 5

## OTHER FEATURES

### Cable Management

- a. Pass through locations in arms allow for Wire Ties to be inserted to manage wires, if needed.

#### Lifetime Limited Warranty

Strong™ Mounts have a Lifetime Limited Warranty. This warranty includes parts and labor repairs on all components found to be defective in material or workmanship under normal conditions of use. This warranty shall not apply to products which have been abused, modified or disassembled. Products to be repaired under this warranty must be returned to SnapAV or a designated service center with prior notification and an assigned return authorization (RA) number.

For Technical Support call 1.866.838.5052