


Instructions

This document details how to update your Araknis device firmware using the web interface. For OvrC updates, access your OvrC account and find instructions there (<https://app.ovrc.com/#/login>).

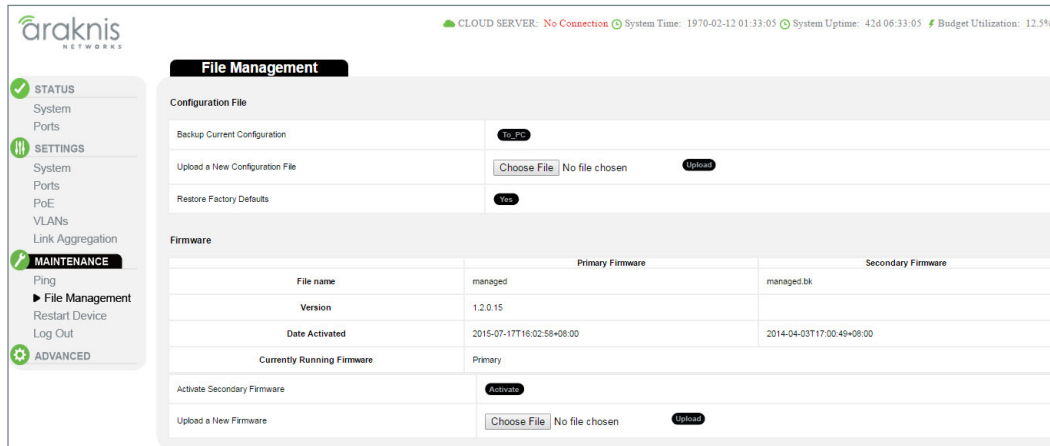

1. Log into the device's web interface (see full manual for instructions to find IP address). Default access:
 - **Username** – araknis
 - **Password** – araknis
2. Click **File Management** in the left menu to get to the firmware update menu.
3. Click the **Choose File** button under the **Firmware** submenu and navigate to where the firmware file is saved on your computer.
4. Select the file and then press **Enter/Return** on the computer keyboard or click **Open** on the menu. (The firmware file name should appear next to the Upload New Firmware File **Browse** button.)
5. Click **Upload**. The Upload Firmware Information screen will open.
6. Click **Upgrade**. Wait while the new firmware loads.
7. Refresh the page after the update is complete.
8. Enter the username and password.
9. Confirm the new firmware version is installed.

Contacting Technical Support

Phone: (866) 838-5052

Email: support@araknisnetworks.com