


Overview

This document details how to update your Araknis access point firmware using the web interface. For OvrC updates, see your OvrC account.

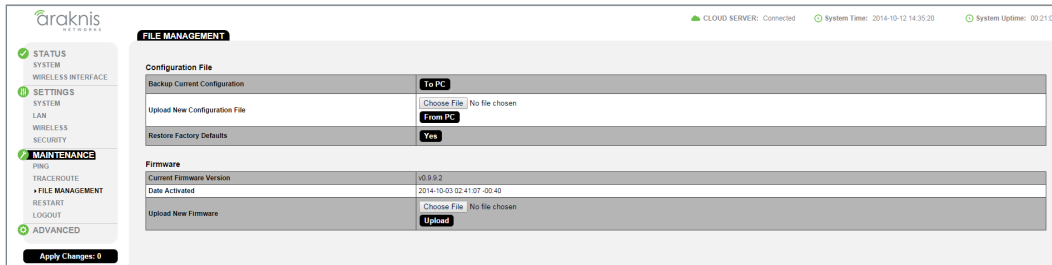

1. Log into the access point web interface. (default username/password: araknis/araknis)
2. Click **File Management** in the left menu to get to the firmware update menu.
3. Click the **Browse** button under the **Firmware** sub-menu and navigate to where the firmware file is saved on your computer.
4. Select the file and then press **Enter/Return** on the computer keyboard or click **Open** on the menu. (The firmware file name should appear next to the Upload New Firmware File **Browse** button.)
5. Click **Upload**. The Upload Firmware Information screen will open.
6. Click **Upgrade**. Wait while the new firmware loads. When the configuration upload is finished, the login screen will appear.
7. Enter the username and password.
8. Confirm the new firmware version is installed.

Contacting Technical Support

Phone: (866) 838-5052

Email: support@araknisnetworks.com