



3. Insert plug of wireless trigger into +5V - 12V DC hole of device (typically a projector or receiver).

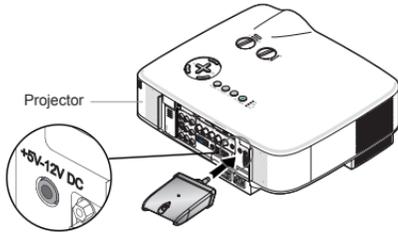

4. Screen should open (lower) automatically when device is turned ON and close (raise) automatically when device is turned OFF.

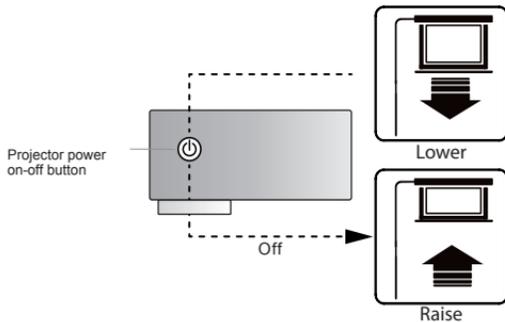

**2-Year Limited Warranty**

This Dragonfly Accessory has a 2-Year Limited Warranty. This warranty includes parts and labor repairs on all components found to be defective in material or workmanship under normal conditions of use. This warranty shall not apply to products which have been abused, modified or disassembled. Products to be repaired under this warranty must be returned to SnapAV or a designated service center with prior notification and an assigned return authorization number (RA).


For Technical Support: 1.866.838.5052



## DFM-RF-TRIG-12V

### 12V RF Wireless Trigger


The DFM-RF-TRIG-12V sends UP/DOWN commands to the Dragonfly™ Filmscreen from the 12V output of a component.

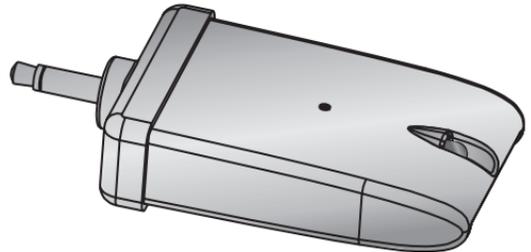



RF to IR Receiver

Programming Button

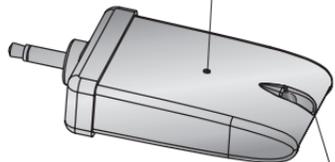

Indicator Light

Battery Groove



Pin Insert



Battery

Battery Model: CR2430 (3v) Lithium  
Transmitting Frequency: 868MHz  
Modulation Method: RF

# Installation


1. Take 3V Battery (CR2430) positive side up and insert in to battery slot.



(Positive side UP)

2. a. Insert wireless RF/IR receiver into external IR input of screen.

b. Insert a small pin into the programming button hole insert. With the pin inserted, depress the programming button and the indicator light will flash repeatedly. The programming instructions will be synced to both devices and the program mode will end. Once completed, the indicator light will stop flashing and stay on.

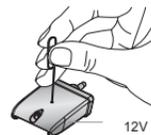

12V Wireless Trigger

Wireless Converter (RF to IR)

