

Complete Control Mobile App

for use with a Complete Control system from URC



iPad



iPhone/iPod touch

Complete Control Mobile App

Overview

As with iOS apps for the iPad, iPhone and iPod touch, finding your way around the Complete Control Mobile App is simple. Although, with the power of a Complete Control system, each and every page shown on the application could be slightly different (*depending upon the system programmer*), there are some consistencies.

The button layout for the iOS devices consists of Volume, Channel, Colored, Numeric Keypad, Navigation/Information, Transport and Custom Keys.

No matter which view your iOS device is in, portrait or landscape, the button layout is available for full control of your entertainment system.

Features and Benefits

● House-Wide Control

Control any IR, RS-232 or Relay controlled device anywhere in your home! By simply adding additional MRX-1s, expand control anywhere on your local network.

● iOS Gesture Navigation

Use the familiar iOS gestures, like swipe, tap and rotate, to access and control your devices. Browse through the devices and their pages by swiping. Rotate the iPad, iPhone or iPod touch to display the remote in portrait or landscape view.

● Home Lighting Control

With the addition of the optional RFTX-1 and URC Lighting by Lutron, easily control the environment within the home. Access lighting scenes, room scenes and specific control of each individual lighting load.


Complete Control Mobile App

Button Overview

The following common buttons are found in the Complete Control Mobile app, regardless of how the system was programmed:

Volume/Channel Keys

In this section you find **VOLUME** (*Vol +, Vol -, Mute*) commands as well as **CHANNEL** (*CH+, CH-, Jump*) commands for applicable devices.

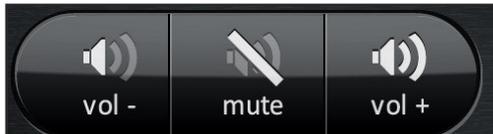

Colored Keys

As more and more devices make use of **COLORED BUTTONS**, this section is dedicated to containing the commands found on devices with color keys.



Numeric Keypad Keys

This section contains **NUMBER** (*0-9*) commands as well as two empty buttons (*to the right and left of 0*) where commands can be placed for applicable devices by the system programmer.



Navigation/Information Keys

This section contains the **5-WAY CURSOR** and **INFORMATION** commands (*Menu, Info, Exit, Guide*) for applicable devices.




Complete Control Mobile App

Button Overview

Transport Keys

In this section you find common **TRANSPORT** commands (*Play, Stop, Skip, etc.*) for applicable devices.

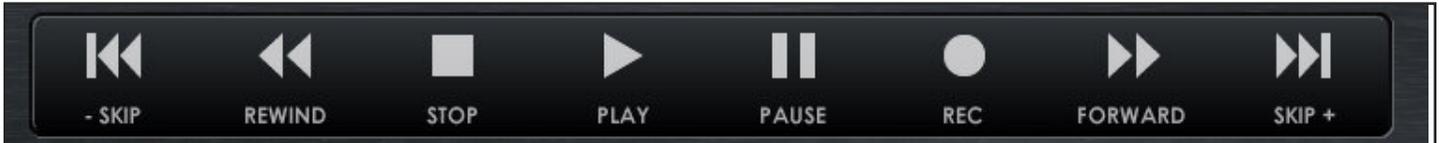

Custom Keys

Depending upon whether you are on the **MAIN** menu or within a **DEVICE** menu, the **Custom Keys** contain different icons/activities.

When in the Main Menu:

This contains selections which could include (*depending upon the system programmer*):

- **Connected Devices** (*like TV or DVD*) that, when selected, displays pages of available commands
- All of the **Activities** possible for the connected devices (*such as Watch TV or Listen to Music*)

When in a Device Menu:

This contains all of the **additional commands** (*that were included by CCP or configured by the system programmer*) that are not represented, in the **Numeric Keypad/Transport Function Section**, for each device.


This is the default for the system, however, any button could be configured (*by the system programmer*) to control ANY function, on ANY connected device included in the Complete Control Program.



Complete Control Mobile App

iPad Portrait and Landscape View

Flip between portrait and landscape when using the iPad. Although the screen changes, the buttons are still available for easy and convenient control of your home entertainment system.

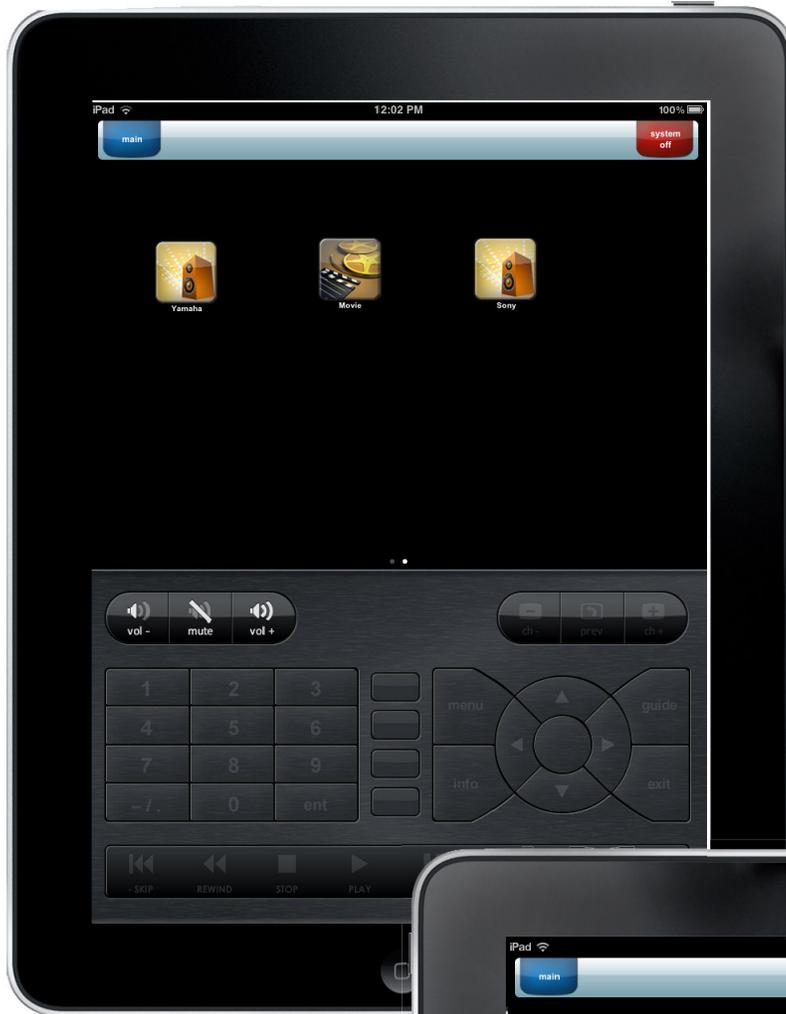

Portrait



Landscape



Complete Control Mobile App

iPhone/iPod touch Portrait and Landscape View

Flip between portrait and landscape when using the iPhone or iPod touch. Although the screen changes, the buttons are still available for easy and convenient control of your home entertainment system.



Portrait




Landscape

Complete Control Mobile App

iPad Navigation - Main Menu

The Complete Control application layout differs between iOS devices but still contains the same button layout. The app provides access to **Volume, Channel, Colored, Navigation, Numeric and Transport Keys**. Select a **Device** or **Activity** from the **Main Menu** to open its command pages.

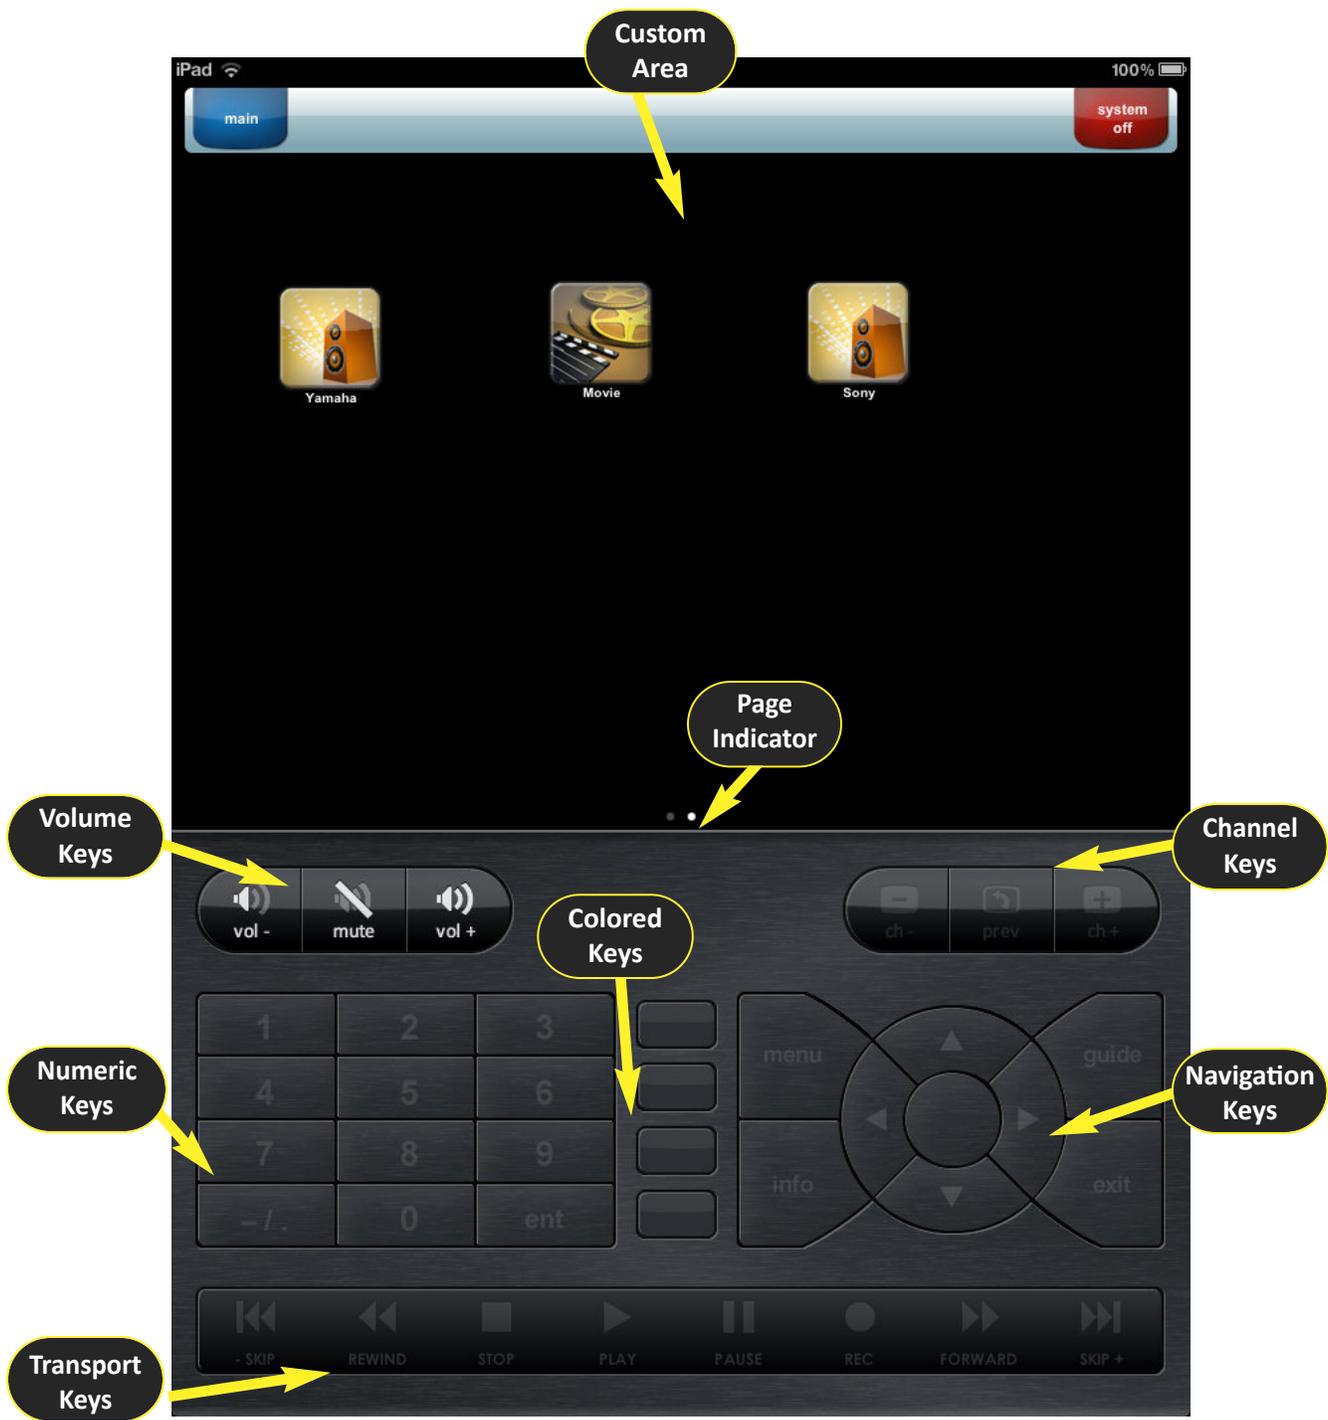

Within the Complete Control application, one may find themselves navigating the MAIN menu or a DEVICE menu. Although both menus have the same basic layout, they typically serve different purposes.

Complete Control Mobile App

iPad Navigation - Device Menu

The device's **Custom Area** contains any action or activity configured by your system programmer. Control the device using its **Volume, Channel, Colored, Navigation, Numeric and Transport Keys**.



Within the Complete Control application, one may find themselves navigating the MAIN menu or a DEVICE menu. Although both menus have the same basic layout, they typically serve different purposes.

Complete Control Mobile App

iPhone/iPod touch Navigation - Main Menu

Select a **Device** or **Activity** from the **Main Menu** to open its command pages.

Access **commands** by switching control between **Navigation, Numeric Keypad, Transport and Custom Keys** (which were configured by your system programmer.) Swipe any screen to access more pages of available devices or activities.



Complete Control Mobile App

iPhone/iPod touch Navigation - Device Menu

The Device pages consist of the button groups shown below: **Navigation/Information Keys**, **Number/Channel Keys**, **Transport Keys** and **Custom Keys**. Press its associated button to switch between screens. The **Custom Keys** contains the device commands configured by your system programmer. Swipe the screen to access more pages of available commands.

Navigation/Information Keys



Numeric/Channel Keys



Transport Keys



Custom Keys



Within the Complete Control application, the DEVICE menus have the same basic layout but they typically serve different purposes. Select between the Navigation, Numeric Keypad, Transport or Custom Keys.

Complete Control Mobile App

Main and Device Menu Descriptions

The **Main** menu, usually reserved for making activity/device choices, opens with the application. The Device menu, usually reserved for controlling specific devices, opens when a device/activity is chosen from the Main menu. For example selecting the CABLE button, from the Main menu, brings up the Cable DEVICE page.

Navigation/Information Keys

In the **Main** menu these **Navigation/Information** functions are usually “grayed out,” signifying they are not in use. This makes sense, since there is no activity/device chosen for these functions to control. However, your system programmer may have “punched through” commands from a specific device to these **Navigation/Information** controls; if this is the case, they are NOT “grayed out” and control the navigation/information functions of the programmed device.

Numeric Keypad Keys

In the **Main** menu, these **Numeric** functions are usually “grayed out,” signifying they are not in use. This makes sense, since there is no activity/device chosen for these functions to control. However, your system programmer may have “punched through” commands from a specific device to these **Numeric** controls; if this is the case, they are NOT “grayed out” and you can use the numeric functions of the programmed device.

Transport Keys

In the **Main** menu, these **Transport** functions are usually “grayed out,” signifying they are not in use. This makes sense, since there is no activity/device chosen for these functions to control. However, your system programmer may have “punched through” commands **from a specific device** to these **Transport** controls; if this is the case, they are NOT “grayed out” and control the transport functions of the programmed device.

Custom Keys

Although this area differs depending upon system programming, it typically gives access to any of the **activities/devices** it is currently controlling. These activities may be accessible directly through an icon in the **Custom Key** area by swiping left or right.

Colored Keys

In the **Main** menu these **Colored Key** functions are “grayed out,” signifying they are not in use. This makes sense, since there is no activity/device chosen for these functions to control.

Volume/Channel Keys

In the **Main** menu, these **Volume/Channel** functions control the programmed device(s) that is being controlled. The system programmer may have “punched through” commands from a specific device to the **channel** keys; if this is the case, they are NOT “grayed out” and control the **channel** functions of the programmed device.

Complete Control Mobile App

Using the App

While using the Complete Control Mobile Application, **swipe** left or right to access pages containing devices (**Main Menu**) or commands (**Device Menu**).


To send a command, press a **Numeric, Volume, Channel, Transport or Navigation/Information** button. Pressing and holding a button sends the command repeatedly until the button is no longer pressed.



Complete Control Mobile App

Settings

The Complete Control Mobile App has several options accessible from the iOS Settings menu within the iPod/iPhone device. To access the settings options, click on the **Settings** icon and scroll down to the App area and click on the **Complete Control Mobile App**. There are two options: **Version** and **Disable Auto-Lock**.

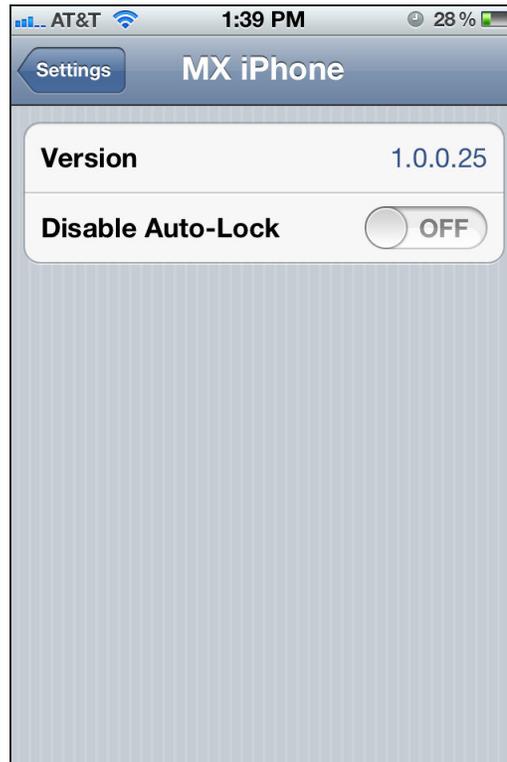

Version:

Identifies the Complete Control Mobile software version currently installed on the iOS device.

Disable Auto-Lock:

The iPod touch/iPhone automatically locks after the amount of time designated in the iOS's **Settings> General> Auto-Lock**. Turning on the Disable Auto Lock feature prevents the iDevice from locking while the Complete Control App is active.

Closing the CCP App:

Ever find that the iOS device freezes up? Well, there is a way to reset the app and return it to normal use.

1. Make sure to **close** the CCP app by pressing the **Home** button.
2. Double tap the **Home** button to open the available apps bar.
3. Press & hold the **CCP app** until it shakes and a **minus (-)** icon is available.
4. Press the **minus (-)** icon to close the app.



500 Mamaroneck Avenue
Harrison, NY 10528
Phone: (914) 835-4484
Fax: (914) 835-4532
www.universalremote.com