


TONE CONTROLS

- After the speaker is installed, please test the speaker using music or content you are familiar with.
- The 700 series speakers allow you to control the amount of treble. The factory setting is in the plus "+" position and gives a full and clear sound in a typical furnished room with absorption from soft materials like carpets, furniture and people. If the room is very reverberant you decrease the tweeter response and high frequency clarity by moving the switch to the minus "-" position.
- The 700 series speakers allow you to also control the woofer crossover response. The factory setting is also in the plus "+" position for a full and clear sound in a typical furnished room. Depending on the room acoustics you might need to subtract some of the mid-bass to obtain better clarity by moving the woofer switch to the minus "-" position. This is convenient in installation areas that have a large amount of reflective surfaces, such as glass, hardwood floors, concrete, etc.
- Please adjust the control(s) until the sound is optimized for the environment
- Place the magnetic grill over the speaker. Make sure it is flush against the ceiling.

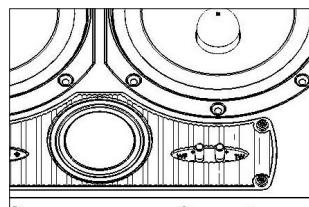

PAINTING

The speaker grill can be painted to match the ceiling color. Only paint the grill when it has been removed from the speaker. Remove the scrim cloth on the back of the grill before painting and reapply after painting. The cloth is adhered using repositionable spray adhesive. No need to add any adhesive when reapplying.

The grill should be painted with great care taken not to clog the fine holes with paint.

Options of painting are:

- Spray paint ('dust') several thin layers instead of a few thick layers.
- Use a 'dry' brush or roller to minimize the amount of paint applied in each layer.

TROUBLESHOOTING

Episode speakers are designed to function trouble-free. Most problems that occur are due to simple issues. If you have trouble, please check the list of simple fixes below. If the problem persists, contact Episode Tech Support at 1.866.838.5052.

NO SOUND

- Verify that there is audio coming from the source selected. Select another source if necessary.
- Ensure that any power amplifiers are turned on and connected properly.
- Check any connections at other devices, such as a volume control. Temporarily bypass the control if needed.
- Check wire connections at each speaker not producing sound for good contact to bare wire, not wire insulation.

WARRANTY

Limited Lifetime Warranty

Episode in-wall, in-ceiling and bookshelf Speakers have a Lifetime Limited Warranty. This warranty includes parts and labor repairs on all components found to be defective in material or workmanship under normal conditions of use. This warranty shall not apply to products which have been abused, modified or disassembled. Products to be repaired under this warranty must be returned to SnapAV or a designated service center with prior notification and an assigned return authorization number (RA).




e p i s o d e

engineered by
Snap
av

OWNER'S MANUAL

>> IN-CEILING LCR SPEAKERS

ES-HT700-ICLCR-5

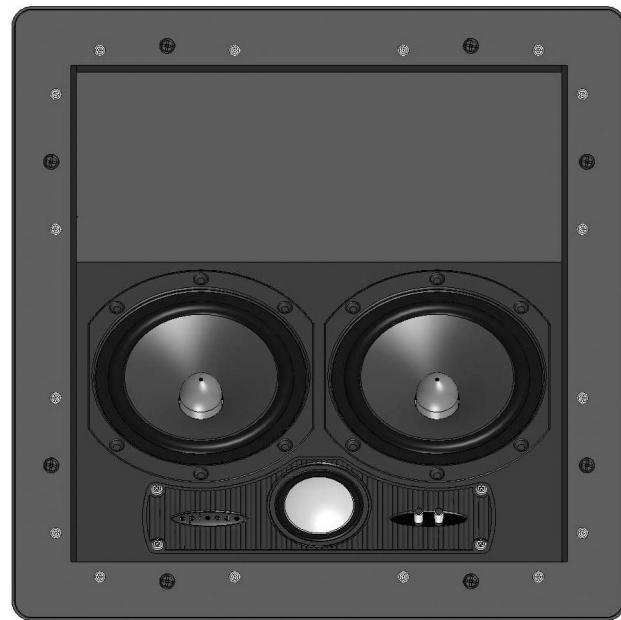

Thank you for purchasing a great product from one of the best sounding speaker lines available today, Episode™. We appreciate your purchase and are committed to providing the highest quality products possible.

The Episode in-ceiling models are a superb choice for almost every type of home theater or home audio installation. They have been designed with advanced technological components that allow for high performance and a lifetime of enjoyment.

IMPORTANT INSTRUCTIONS AND CONSIDERATIONS

- Read and understand all instructions.
- Before beginning installation, carefully plan locations accounting for potential electrical, plumbing or other obstacles.
- Contact a suitable contractor if you are unsure of how to best install.

GENERAL GUIDELINES

Keep speakers about 2 feet away from corners and other surfaces that might interfere with or reflect sound, such as tall furniture.

SPEAKER PLACEMENT

For most applications, the Episode in-ceiling LCR speaker should be placed in the ceiling in the front of the room where the screen is located. Install the speakers with the tweeter and woofers directed towards the listening position.

For Center channel applications, place the Episode LCR in the ceiling directly above the center of the screen.

For Left and Right speaker applications, place the speakers in the ceiling on either side of the screen at equal distances from the center of the screen. Ideally, the two speakers should be spaced 6 to 12 feet apart. Left and Right speakers should also be equal to or less than the distance (about 8 to 20 feet) away from the center of the primary listening position.


When used as a Surround Back speaker, the Episode LCR should be placed to the rear of the listening area and as far from the listening area as the room dimensions allow – this will provide for a more enveloping surround effect.

INSTALLATION

NOTE: The ES-HT700-ICLCR-5 requires a mounting depth of 8" from the bottom of the ceiling.

NEW CONSTRUCTION

Episode speaker installations can be simplified by using Episode new construction brackets (Sold Separately). These are installed prior to drywall, and allow for precise placement and ease the final installation of the speaker.

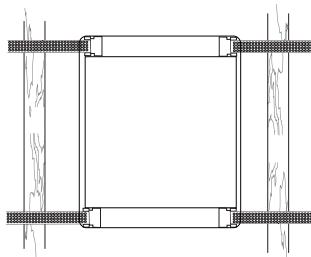


EXISTING CONSTRUCTION

Speaker wire must be run from the equipment or volume control location to each potential speaker location.

- Choose a location for each speaker that is free of obstructions created by joists, HVAC ductwork, electrical wire runs, plumbing or anything else that might not allow for the depth of the speaker or create interference or noise.

- Once you have determined your locations, mark the hole to cut out for the speaker using the supplied template. Don't forget to allow for the size of the speaker bezel if you are choosing to install the speaker near a side wall or other item that could become an obstacle.

- If you are unsure of potential obstacles, carefully cut a small hole at an angle to the inside of the template line as illustrated. This will allow you to 'plug' the hole easily if needed. If the area is clear and is a good location for the speaker, go ahead and cut the edges of the opening at 90 degrees to accommodate the speaker diameter.

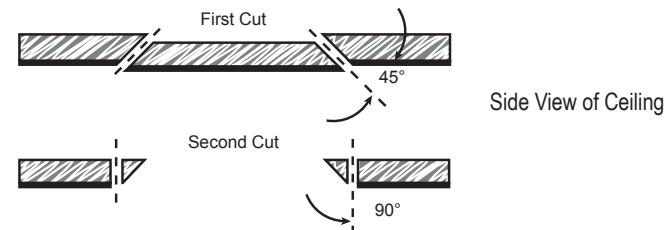

- Strip the insulation on each conductor approximately $\frac{1}{4}$ " and insert into the speaker terminals. Ensure that there are no stray strands of wire protruding from the connectors. Observe proper polarity (+ to + and – to – for each speaker and at the amplifier).
- Insert the speaker into the ceiling and tighten each of the eight screws for the speakers 'dog' legs enough to clamp the speaker against the wall.

OPTIONS

PIVOTING TWEETER ASSEMBLY

- The pivoting tweeter assembly can be directed to focus the sound where you want
- Two common options are:
 - Point it directly at the listening area for a more pointed sound source
 - Reflect it off hard surfaces for a more diffused sound field

