


Outdoor Television


Signature Quick Start Guide

PLANNING THE LOCATION

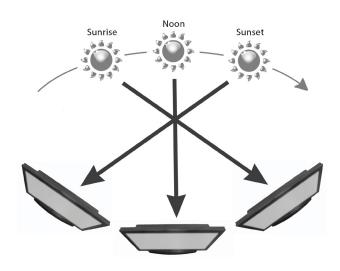



- Be sure to check the sun's location throughout the day and throughout the year.
- The TV should be installed in a location that does not receive direct sunlight on the screen at any time. Direct sunlight can cause dark areas to form on the screen.
- Consider using an articulating mount so the TV can be moved away from the sun if necessary.

SOURCES/WHAT TO WATCH

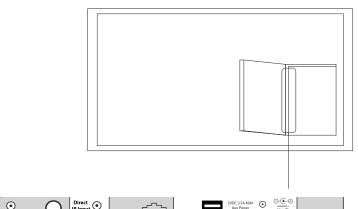

 - Connect the TV to the preferred Media Source.
- Some 3rd party media devices can be stored completely inside media bay depending on the strength of the wireless signal or length of the Wifi Cable.
- For more information on connection types visit www.sunbritetv.com to download the operator's manual.



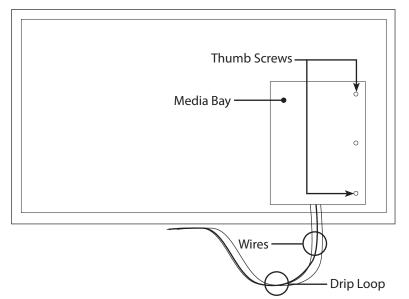

- Ensure all wires are run out the bottom of the media bay before closing securely and leave a drip loop with any exiting cables.
- Connect power to a GFCI certified outlet and use remote to power on TV.
- Press the Menu button and follow the onscreen instructions.
- For more information on programming or for troubleshooting visit www.sunbritetv. com to download the operators manual.

WHAT'S IN THE BOX



Note: Veranda Series TVs come with built in Speakers. Signature and Pro Series do not, and a separate audio source is required for sound. All SunBrite TVs are weatherproof when installed properly; brightness and type of installation location vary by model.



Standard remote with batteries



Welcome Packet

OPTIONAL ACCESSORIES NOT INCLUDED



Standard and Premium SunBrite Soundbars

Note For Professional Installers Only: The default login for local UI integration into control systems is Username: sunbritety, password: sunbritety. You will be prompted to change both upon sign on.

© 2019 SunBriteTV Rev:190708-1100