 
 


Planning the Location

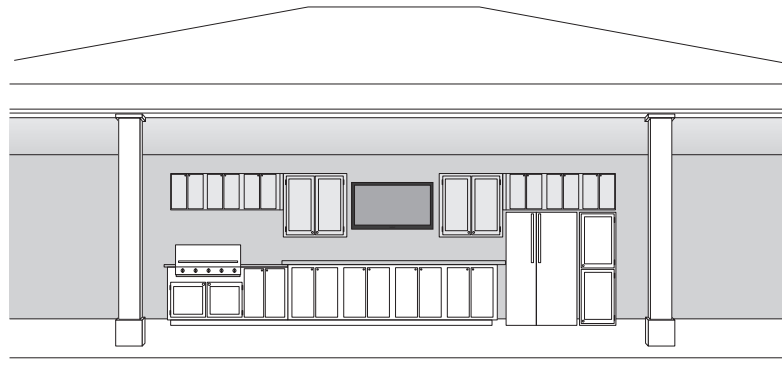

Veranda All-Weather TVs are best viewed in fully shaded environments.

Sources/What to Watch

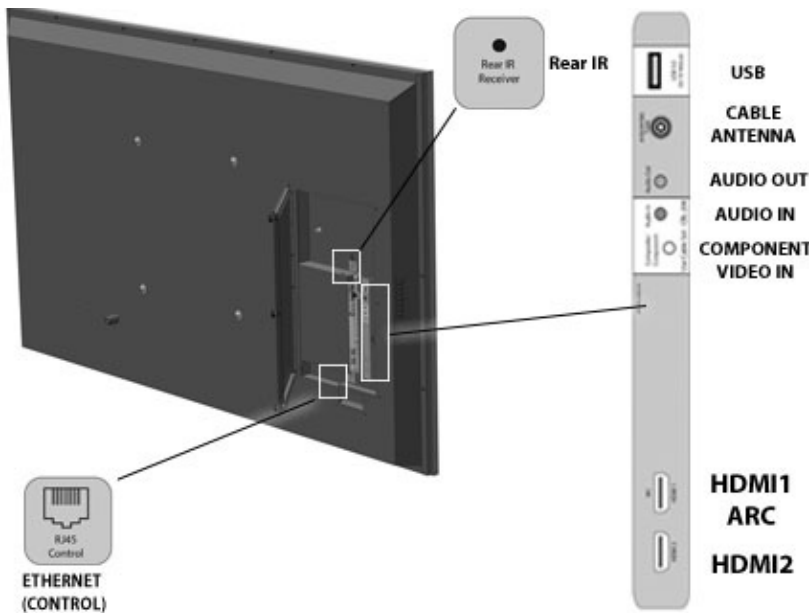

Component input: use the included adapter cables as shown.

Note: The audio cable can also be used for analog audio out.

(Video) Composite input:

Use the Green RCA connector only

 
- Signals can be sent from any source using an HDMI, Component, or digital antenna connection.
- Refer to the operator's manual for detailed instructions.

Weather Proofing

- After all connections are made, all wires must exit the media bay from the bottom.
- Up to 5 wires can exit the media bay while still maintaining the weatherproof feature.

Note: Leave a drip loop as the wires enter the compartment.

- Tighten the thumb screws completely to weatherproof the TV.

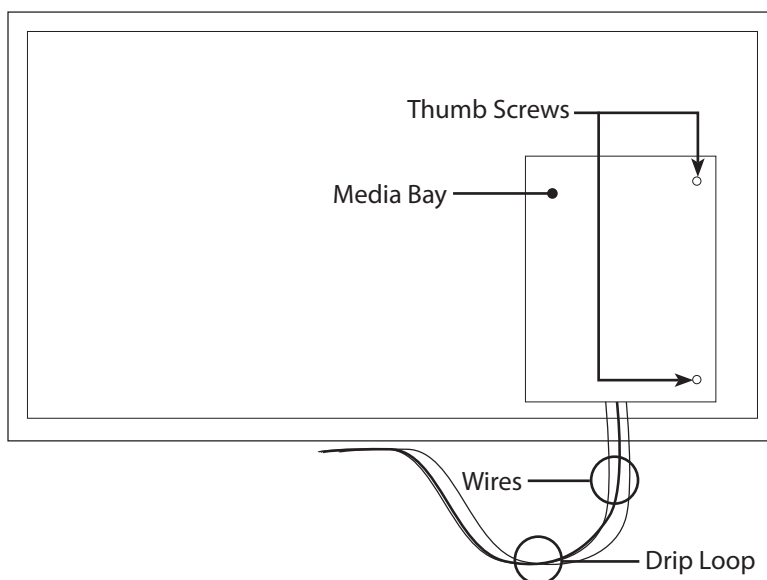

SETUP



- Use the TV remote to access the setup menu and run initial installation.
- Select Language, Location and Time Zone, and default TV settings for the TV location.
- Select the corresponding input source and follow on screen instructions to complete setup.
- Refer to the operator's manual for detailed instructions.

CONTROL

The Veranda can be controlled via the included remote or universal remote.

IR codes are available at: <https://www.sunbrite.tv/support/product-support/product-faq>.