



SnapAV SunBriteTV IP ELAN Driver

V1.2 rev20190611

Overview

This driver integrates a SnapAV SunBriteTV IP into your ELAN control system. The driver was created and tested on a gSC2 series controller using g!Viewer. To use this driver, add the driver to the system, and follow the setup.

Specification

This package includes the following:

- Compiled ELAN Driver (SnapAV_SunBriteTV_IP.EDRVC)
 - Controls hardware device.

IP Connection

The driver communicates to and from the device through an IP connection and must be connected for the driver to function. Please ensure the TV is operating normally outside of the control system before integrating.

Setup

1. Enter the IP Address of the SunBriteTV. Port should be set to 4352.
2. If using newer model sunbriteTVs, please enter the username and password for authentication.
3. If using TV volume, make sure you're setting Volume Control to "THIS ZONE".

