


Installation Manual

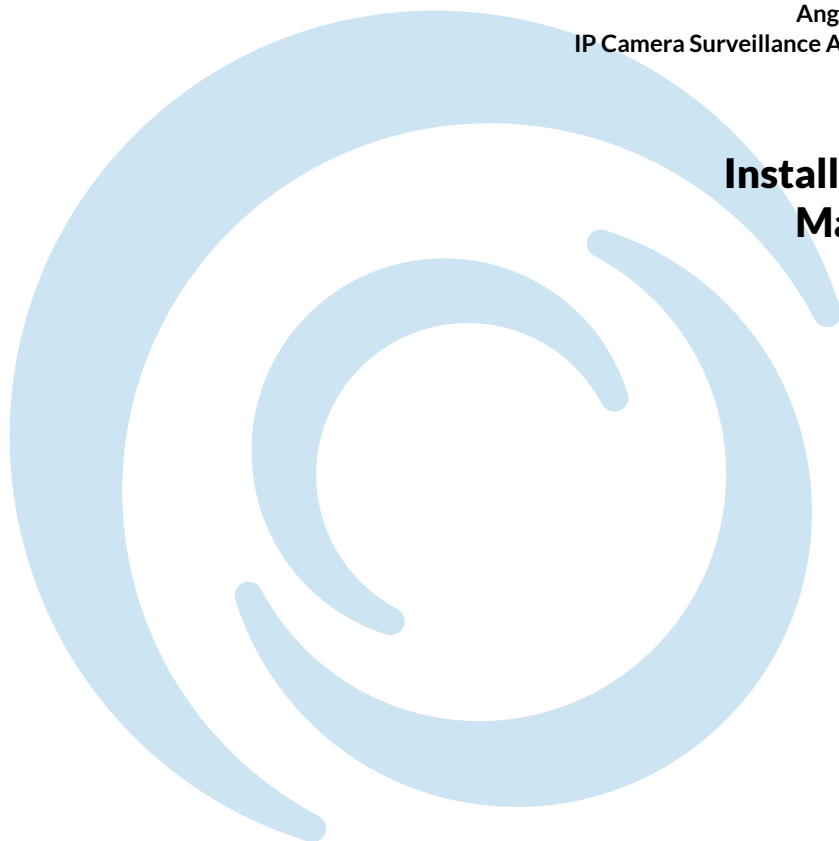

2: Box Contents

Before installing, familiarize yourself with the parts of your mount.

- Angle mount
- Drill template
- 5 wall anchors
- 4 mounting screws (to secure the camera to the angle mount)

Other Required Equipment

- Dome camera
- Drill with 7/32" or 5.5mm bit
- Phillips screwdriver

1: Installation

Before you start, ensure that the hardware is in good condition and all assembly parts are included.

Check that the mounting surface is strong enough to withstand three times the combined weight of this mount and the camera.

Take care that all equipment is powered off during installation.

Important Note: To avoid damaging the surface of your dome camera during installation, keep it away from walls and other objects. Do not remove the protective coating from the dome until after the camera is installed and the dome is in place.

If the product does not assemble properly, please contact technical support.

Compatibility


This can be used with Luma Surveillance 500- and 700-series IP dome cameras.

3: Installing the Mount

Place the enclosed drill template on the mounting surface.

Note that the label TOP points to the thickest portion of the angle mount. Mounting in this manner allows the camera to point straight down. Change the orientation of the drill template to align the camera as desired.

Drill out the holes as marked. If installing on a cement wall, secure the mount in place using the wall anchors. If mounting on a wood surface, use self-piloting wood screws (not included).

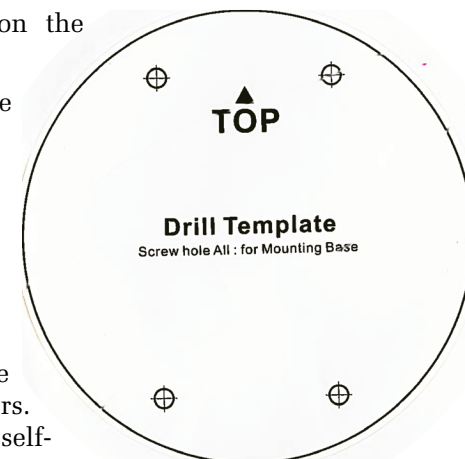


4: Aligning the Cap

The cap mount has several interior posts, however the Luma IP cameras use the three outermost holes.

Install your dome camera using these screw holes.

If you align the cable hole of the camera with the cable hole of the angle mount, you will have a neater install, and the screw holes in the camera and the angle mount will align.

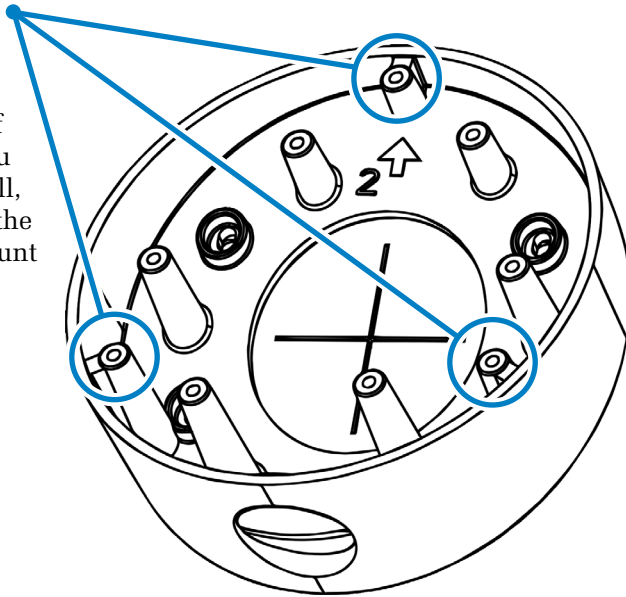

5: Attaching the Camera

Remove the dome from the camera (do not remove the protective cover from the dome at this time).

Thread the camera wires through the housing and through the angle mount.

Attach the camera housing to the angle mount using three of the Phillips screws provided with the cap mount.

Weatherproof the joint between the camera housing and the angle mount.

Support

If you need help, email support@SnapAV.com. For information, instructional videos, support documentation, or ideas, visit our website.

5-Year Limited Warranty

This Luma Surveillance™ product has a 5-Year Limited Warranty. This warranty includes parts and labor repairs on all components found to be defective in material or workmanship under normal conditions of use. This warranty shall not apply to products that have been abused, modified or disassembled. Products to be repaired under this warranty must be returned to a designated service center with an assigned return authorization (RA) number. Contact technical support for an RA number.

Copyright ©2016 Luma Surveillance. All rights reserved.