


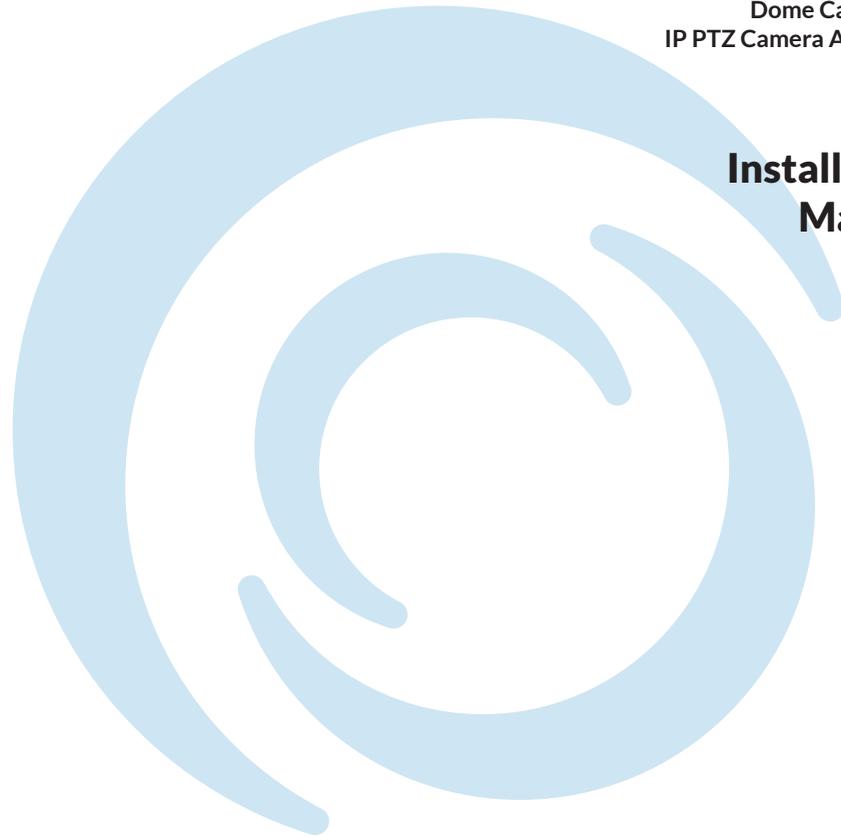

Dome Cap Mount
IP PTZ Camera Accessory

Installation Manual



2: Box Contents

Before installing, familiarize yourself with the parts of your mount.

- Cap mount
- 4 mounting screws
- 1 locking screw

Other Required Equipment

- IP PTZ camera
- Precision flathead screwdriver
- Phillips screwdriver

1: Installation

Before you start, ensure that the hardware is in good condition and all assembly parts are included.

Check that the mount is strong enough to withstand three times the combined weight of this cap and the camera.

Take care that all equipment is powered off during installation.

Important Note: To avoid damaging the surface of your PTZ camera during installation, keep it away from walls and other objects. Do not remove the protective coating from the dome until after the camera is installed and the dome is in place.

If the product does not assemble properly, please contact technical support.

Compatibility


This can be used with Luma Surveillance 500- and 510-series IP PTZ cameras, as well as Luma Surveillance accessories for IP cameras.

In addition, thread adapters allow it to be used with third-party hardware.

3: Aligning the Cap

Install your IP PTZ camera using these screw holes.

Be sure that the front of the camera is aligned with the arrow at the center of the mount.

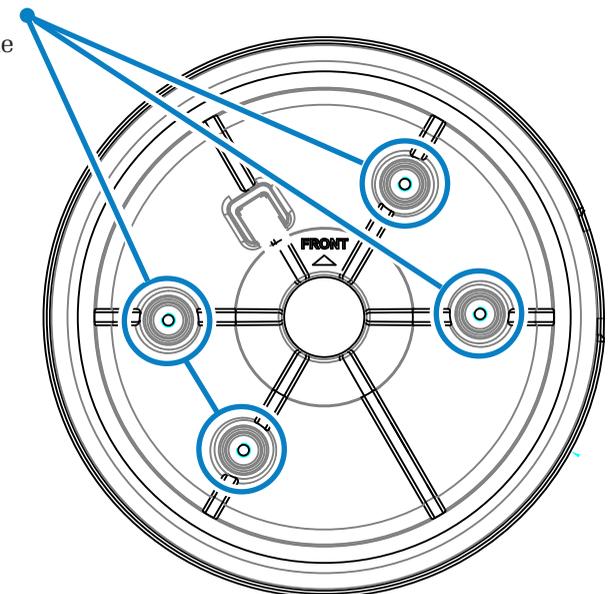


4: Attaching the Camera

Remove the dome from the PTZ camera (do not remove the protective cover from the dome at this time).

Thread the camera wires through the housing and through the top of the cap.

Attach the camera housing to the cap mount using the four Phillips screws provided with the cap mount.

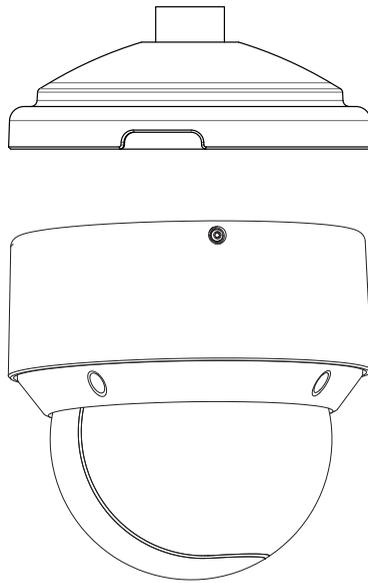

Applications

Your capped IP PTZ is now ready for further installation.

It is designed to be used with the following Luma Surveillance accessories:

- LUM-MNT-LARM and LUM-MNT-LARM arm mounts, for attaching to a wall to provide a greater field of view, and
- LUM-MNT-PND pendant mount, for attaching to a ceiling that has ducting or other items that obscure vision.

If you are using third-party hardware, attach an adapter to the cap if needed. Tighten it, then lock it in place by inserting a locking screw into the small hole at the threads.

Support

If you need help, email support@SnapAV.com. For information, instructional videos, support documentation, or ideas, visit our website.

5-Year Limited Warranty

This Luma Surveillance™ product has a 5-Year Limited Warranty. This warranty includes parts and labor repairs on all components found to be defective in material or workmanship under normal conditions of use. This warranty shall not apply to products that have been abused, modified or disassembled. Products to be repaired under this warranty must be returned to a designated service center with an assigned return authorization (RA) number. Contact technical support for an RA number.

Copyright ©2019 Luma Surveillance. All rights reserved.