

## Speedstream Router Setup

### Overview

Follow these steps for Router Firewall Setup for Wirepath™ DVRs with a Speedstream router. Some of the screens may look different; however the steps will be the same. If you have questions about your specific Speedstream device, please contact technical support.

### Before Beginning


Complete the initial setup of the Wirepath™ DVR by following the instructions in the products owner's manual or the WPS-DVR Quick Start Guide.

The following information from the DVR setup is needed to complete the setup of the router:

- Static IP Address
- Control Port
- Data Port
- HTTP Port


### Setting Up the Router

1. Before logging into the router, connect the DVR to the Network and turn it on.
2. Login to router using login information provided in user manual.

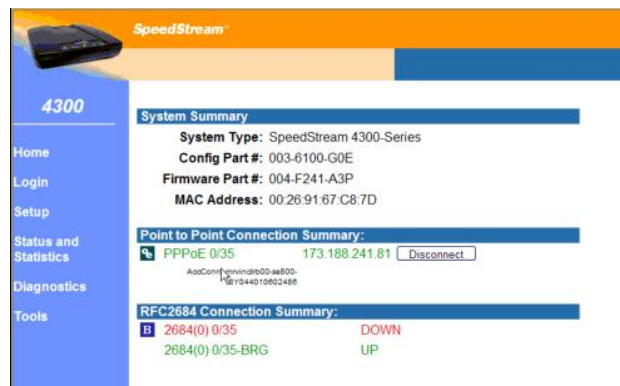


## SpeedStream Router Setup

- On the left, locate and select the **Setup** tab and select **Port Forwarding**.

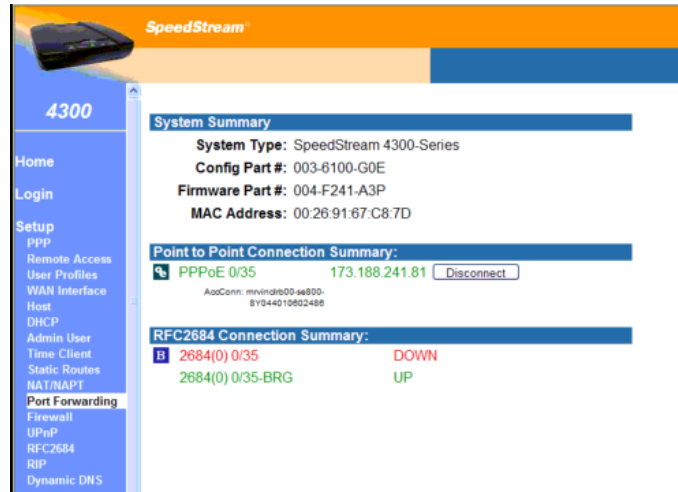

- Under the Add/ Edit Entry section select protocol TCP from the drop down menu and enter **TCP/UDP Ports 67-68**. Select the radio button to **Redirect Selected Protocol Service to IP Address:** and then enter the static IP of the DVR and click **Apply**.

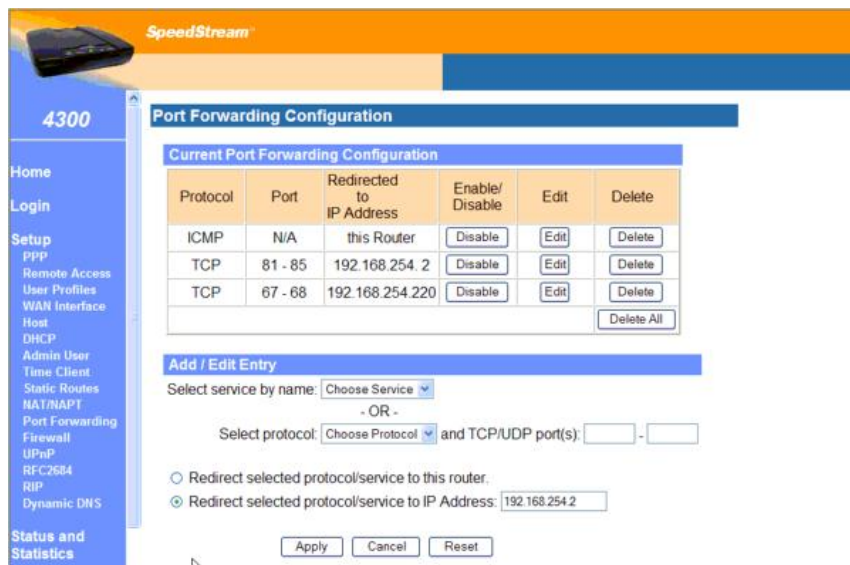

- Repeat step 3 with protocol UDP and **TCP/UDP Ports 67-68**.
- Repeat step 3 with protocol TCP and only **TCP/UDP Port 80-80**
- There should now be either 3 exceptions in the list that you created. Click **Apply** at the bottom of the screen and logout of the router.

## Contacting Technical Support

Phone: (866) 838-5052

Email: [Techsupport@snapav.com](mailto:Techsupport@snapav.com)