



LUMA: NVR Integration with DoorBird IP Video Door Station

CONTACTING TECH SUPPORT

Phone: 866.838.5052 704.909.5229

Email: TechSupport@SnapAV.com

Note: Please reference the **Digital Passport** section of the **Quick Start Guide** for this product to reference how to set up an NVR with Doorbird if you need to return to the client for setup at a different day.

- 1. Open the Doorbird App on an Android or Apple Device.
- 2. Select the **Settings** page and log in to the **Admin** section.

11:10 •••	ପ ଦ	▼⊿ 📋 76%	11:10 •••	0	🕕 💎 🖌 📋 76%
e	👂 Door <mark>Bird</mark>	ி ய		Settings	
	1	1	DEVICES		
			ghewdw0001 SnapAV TED Test		
				Add	
			APP SETTINGS		
		1	Hands-free mode		
			Push2Talk		
		S	LAN only mode 🤨		
💿 Snap	AV TED Test		App security		>
			FURTHER FUNCTION	IALITY	
			Administration		>
			WiFi Setup		>
(0)	0	₹Ç}	((*))	\bigcirc	Ø
•	•	1	•	\bigcirc	•

3. Scroll down to ONVIF and **enable**, then **save** the settings.

11:11	t	ð 🕕 💎 🖌 📋 76%
	Administration	Save
SIP Calls		>
PERIPHERALS		
Settings		>
DOORBIRD CON	NECT	
Onvif		
EXPERT SETTING	SS	
NTP-Server		pool.ntp.org
Relays		>
Button LED		Always on
Button Sound		DoorBird
IR Light		Automatic
((•))	()	Ø
•	\bigcirc	•

- 4. Use an IP scan tool or OvrC Pro to find the IP address of the DoorBird camera, making note of the IP address.
- 5. Log in to the Luma NVR and click **Settings**.



6. Navigate to the **Camera Management** section.

© LUMA	Live View C	configuration		LUM-5	10-NVR-16C	н				
Configure This Computer	IP Camera									
System Settings	IP Camera						Modify C	Sustom P	PoE Passw Activation]
Maintenance	Channel No	Camera Name	IP Address	Channel No.	Management Port	Security	Status	Protocol	Connect	
Security	D1	IPCamera 01	192.168.254.2	1	8000	N/A	Online	LUMA	http://192.168.1.13:65001	~
Camera Management	D2	IPCamera 02	192.168.254.2	2	8000	Weak	Online	LUMA	http://192.168.1.13:65002	
User Management	D3	IPCamera 03	192.168.254.2	3	8000	Weak	Online	LUMA	http://192.168.1.13:65003	
Basic Network Settings	D4	IPCamera 04	192.168.254.5	1	8000	N/A	Offline(IP camera	LUMA	http://192.168.1.13:65004	
Advanced Network Settings	D5	IPCamera 05	192.168.254.6	1	8000	N/A	Offline(IP camera	LUMA	http://192.168.1.13:65005	
Video/Audio	D6	IPCamera 06	192.168.254.7	1	8000	N/A	Offline(IP camera	LUMA	http://192.168.1.13:65006	
Image	D7	IPCamera 07	192.168.254.8	1	8000	N/A	Offline(IP camera	LUMA	http://192.168.1.13:65007	
Events	D8	IPCamera 08	192.168.254.9	1	8000	N/A	Offline(IP camera	LUMA	http://192.168.1.13:65008	
Smart Motion	D9	IPCamera 09	192.168.254.10	1	8000	N/A	Offline(IP camera	LUMA	http://192.168.1.13:65009	
Storage Schedule	D10	IPCamera 10	192.168.254.11	1	8000	N/A	Offline(IP camera	LUMA	http://192.168.1.13:65010	
Storage Management	D11	IPCamera 11	192.168.254.12	1	8000	N/A	Offline(IP camera	LUMA	http://192.168.1.13:65011	
Advanced Settings	D12	IPCamera 12	192.168.254.13	1	8000	N/A	Offline(IP camera	LUMA	http://192.168.1.13:65012	~
	D13	IPCamera 13	192.168.254.14	1	8000	N/A	Offline(IP camera	LUMA	http://192.168.1.13:65013	Ť
	Net Receive Idle	Bandwidth:	147Mbps							

7. Select the channel to assign the DoorBird camera to, then click Modify.

- 8. Set the adding method for the camera to Manual, and select ONVIF as the protocol.
- 9. Enter the IP address of the DoorBird camera.
- 10. Enter the username and password from the **Digital Passport** section of the **Quick Start Guide**, then assign a name to the camera.

Note: The name of the camera is stored in the DoorBird app.

11. Name this channel, then click **OK**.

IP Camera		×
IP Camera Address	192.168.1.14	
Protocol	ONVIF	\checkmark
Management Port	80	
Channel No.	1	
Camera Name	Doorbird	
User Name	ghewdw0001	
Password	•••••	
Confirm	•••••	
Transfer Protocol	Auto	~
Adding Method	Manual	\checkmark
PoE Power	OFF	~
	ОК Са	incel

- 12. Verify that the camera is online by viewing the status in the **Camera Management** section.
- 13. The DoorBird IP Video Door Station is now set up and ready for use.

IMPORTANT NOTES:

• Luma NVRs cannot record motion events from the DoorBird Camera, so be sure to set the storage schedule to **Continuous Record**.

©LUMA	Live View Configuration LUM-510-NVR-16CH
Configure This Computer	Record Schedule Capture
System Settings	Camera Doorbird V
Maintenance	☑ Enable
Security	
Camera Management	
User Management	0 2 4 6 8 10 12 14 16 18 20 22 24
Basic Network Settings	0 2 4 6 8 10 12 14 16 18 20 22 24 📕 Alarm
Advanced Network Settings	Tue Motion or Alarm
Video/Audio	0 2 4 6 8 10 12 14 16 18 20 22 24 Wed
Umage	0 2 4 6 8 10 12 14 16 18 20 22 24 Event
Events	Thu
Smart Motion	0 2 4 6 8 10 12 14 16 18 20 22 24 Fri
Storage Schedule	0 2 4 6 8 10 12 14 16 18 20 22 24
Storage Management	Sat
Advanced Settings	U 2 4 6 8 10 12 14 16 18 20 22 24 Sun
	E Copy to

- When in Grid view, the Doorbird camera will not display. This is due to the lack of a substream, however this does not affect recording.
- Click on Single camera view for that channel and the camera will display.

