

Using the PTZ Controller with Luma Recorders

This bulletin helps you get your Wirepath PTZ controller (WPS-ACC-PTZ-CTRL) to work with your new Luma 8- and 16-channel Luma DVR. The Luma DVR can control the PTZ camera through its own interface, however if you prefer to use the external controller, that's no problem.



Your controller may work fine if you have a newly purchased Luma recorder from a recent production run. Recorders from earlier production runs need to have a DIP switch changed for the controller to work properly.

Open the DVR

Power off the unit, remove the two screws at the back of the unit, and open up the casing.

Make sure you are grounded when working within the recorder.

On the inside, on the motherboard next to the power supply, look for a small red DIP switch, shown below left.

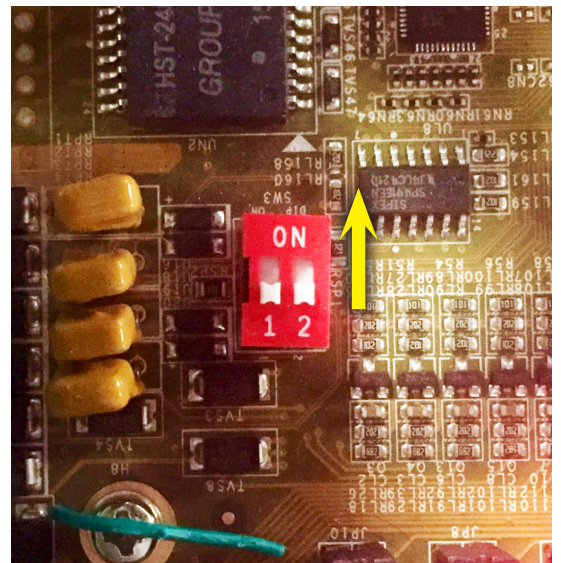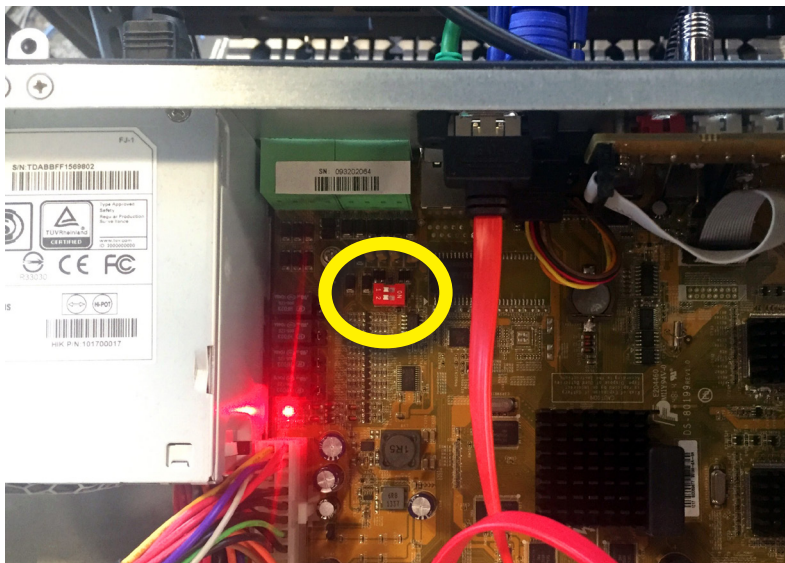

Change the DIP Switch

Change the setting of DIP switch 2 from OFF (down) to ON (up), as shown above right.

Close up the recorder, replace the cover, and power it up.

Your controller should now work fine.