Setup Guide
Doorbell Wired

ring

22-002937-05

Included hardware.

Bag	Hardware
A	(2) 1" Mounting Screws
	(2) Wall Anchors
B	(2) 3/16" Security Screws
C	1x Jumper Cable

Download the Ring app.

The Ring app walks you through setting up and managing your Ring Doorbell.

Search for "Ring" in one of the app stores below, or visit **ring.com/app**

Download on the App Store

GET IT ON Google Play

Set up your Ring Doorbell.

In the Ring app, select **Set Up a Device** and follow the in-app instructions.

Got an existing wired doorbell?

You don't need the Plug-In Adapter. Simply follow the instructions in the Ring app to wire Ring Doorbell to your existing doorbell wires. Use the provided Jumper Cable, which bypasses and disables your existing internal doorbell, providing your Ring with the power it needs to operate.

CAUTION! You'll be working with electrical wires during the install process. If you are uncomfortable or inexperienced with doing so, consult with a licensed electrician.

Remove the faceplate.

Grasp the bottom of the faceplate and pull to remove.

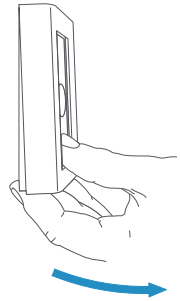

Mark the screw holes.

Using your Ring Doorbell as a template, mark the location of the two mounting holes on your wall.

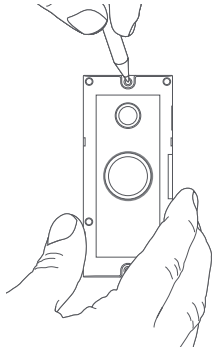

Install the anchors. (optional)

On stucco, brick, or concrete, use a 1/4" (6mm) masonry bit to drill holes in your wall, then insert the included wall anchors.

(If you're installing on wood or siding, you can skip this step.)

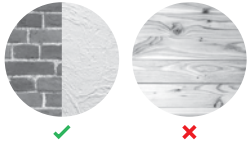

Connect the Plug-In Adapter wires.

Attach the power wires from the Plug-In Adapter to the terminals on the rear of your Doorbell. It doesn't matter which wire connects to which terminal.

DO NOT plug in the power adapter yet.

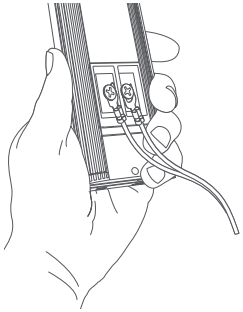

Screw in your Ring Doorbell.

Mount your Ring Doorbell with the two included mounting screws.

If you ran the wire through your wall, be sure to feed any excess wiring into the wall first.

DO NOT USE any screw other than the included mounting screws when securing your Ring Doorbell.

If you are running the wire up your wall (instead of through it), DO NOT over-tighten the screws.

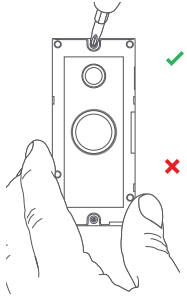

1" **Mounting screw**

3/16" Security screw

Plug in the power adapter.

Choose an outlet as close to your door as possible. It may take a moment for your Ring Doorbell to power on. You'll know it's ready once it lights up and makes a sound.

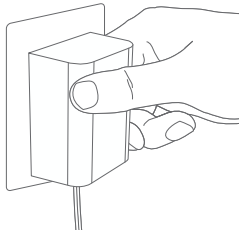

Secure your Ring Doorbell.

Re-attach the faceplate, then use the included screwdriver to insert and tighten one of the 3/16" Security Screws.

CAUTION!
If you use the wrong screws to secure the Ring Doorbell, you could damage the device during installation, create a fire hazard, and be seriously injured.

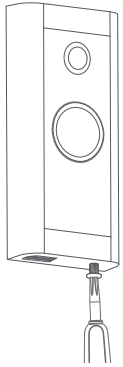

3/16" Security screw

1" Mounting screw

ring

For additional help, visit ring.com/help

Or give us a call:

AU 1 300 205 983

NZ +64 9 887 9871

US 1 800 656 1918

Worldwide +1 310 929 7085

For a list of all our customer support numbers, visit ring.com/callus

For information on our warranty, theft protection, and Ring Protect Plans, see ring.com/legal

© 2024 Ring LLC or its affiliates. Ring and all related marks are trademarks of Ring LLC or its affiliates.