


27.2 in

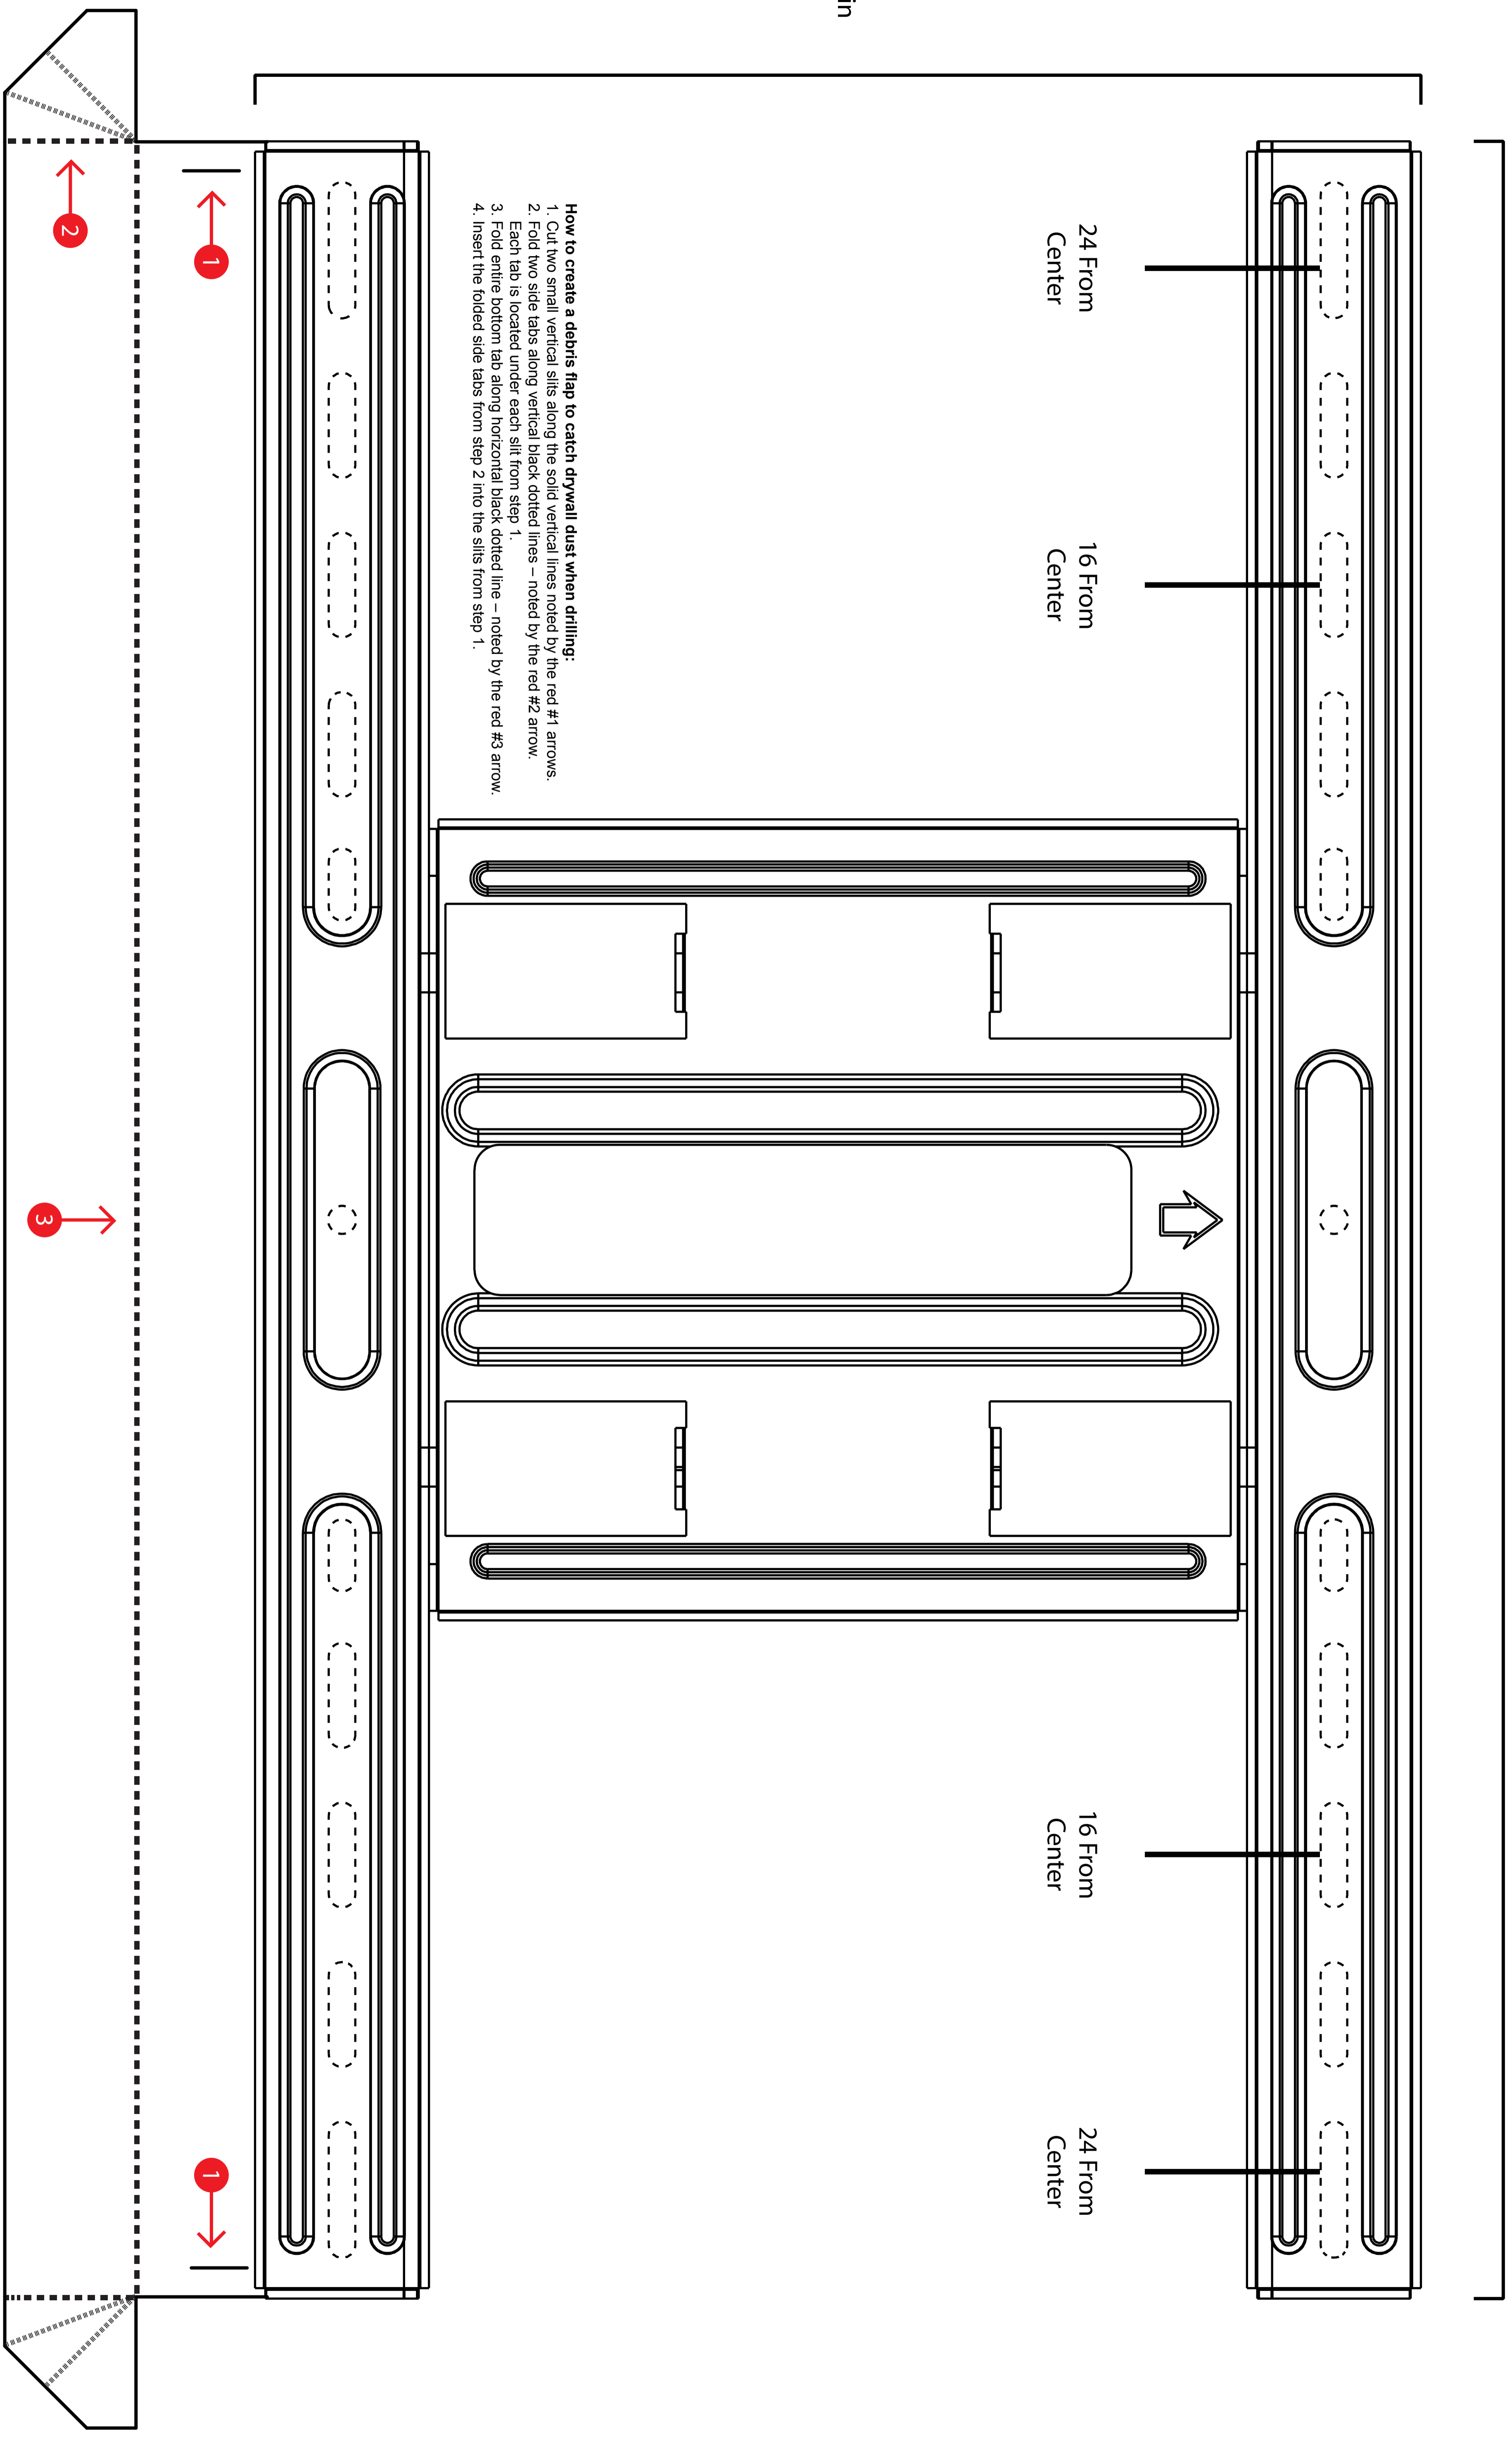

How to create a debris flap to catch drywall dust when drilling:

1. Cut two small vertical slits along the solid vertical lines noted by the red #1 arrows.
2. Fold two side tabs along vertical black dotted lines – noted by the red #2 arrow. Each tab is located under each slit from step 1.
3. Fold entire bottom tab along horizontal black dotted line – noted by the red #3 arrow.
4. Insert the folded side tabs from step 2 into the slits from step 1.