


4.53 in

14.43 in



How to create a debris flap to catch drywall dust when drilling:
 1. Cut two small vertical slits along the solid vertical lines – noted by the red #1 arrows.
 2. Fold two side tabs along vertical black dotted lines – noted by the red #2 arrows.
 3. Fold entire bottom tab along horizontal black dotted line – noted by the red #3 arrow.
 4. Insert the folded side tabs from step 2 into the slits from step 1.

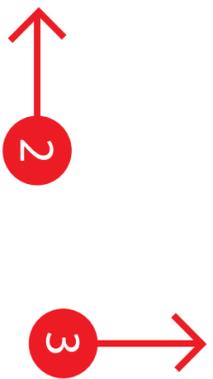