

Pendant Mount Surveillance Accessory for Fisheye Cameras

Installation Manual

Compatibility

This can be used only with the Luma Surveillance 500-series fisheye camera. It does not work with any other Luma camera.

Introduction

Before you start, ensure that the hardware is in good condition and all assembly parts are included.

Check that the mounting surface is strong enough to withstand three times the weight of the mount and camera.

If installing on a cement surface, use the included expansion anchors to install the mount. If installing on a wood surface, use self-tapping wood screws (not included) to secure the mount.

Take care that all equipment is powered off during installation.

Caution! To avoid damaging your camera lens during installation, keep it away from walls and other objects. Do not remove the protective coating from the fisheye until after the camera is installed.


If the product does not assemble properly, contact technical support.

Box Contents

- Base with gasket
- Cap with gasket
- 2 extenders
- 4 cement anchors
- 4 locking screws
- 3 screws to mount the camera

Other Required Equipment

- Fisheye camera
- Phillips screwdriver (for mounting screws)
- Monkey wrench (for cement anchors)
- Small standard screwdriver (for locking screws)

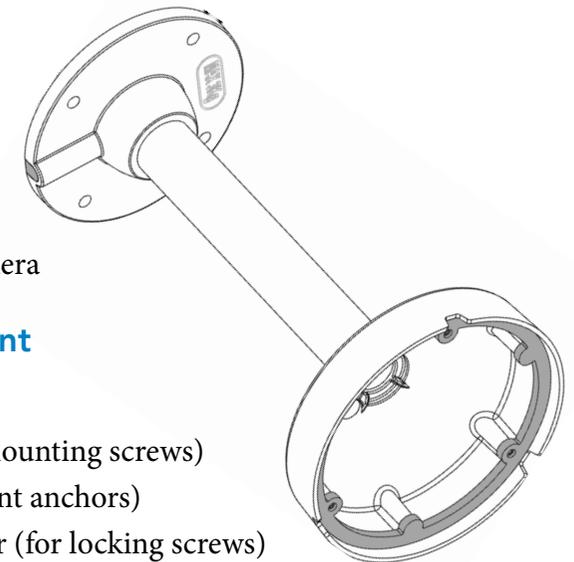

Attach the Camera

Remove the skirt from the fisheye camera. Install an SD card if desired.

Insert the three mounting screws into the cap loosely.



Thread the cables through the cap. Align the camera mounting grooves with the screws, then rotate the camera to lock it into place.



Tighten the mounting screws to secure the camera. Replace the skirt.

Install the Base

You may need to modify the mount gasket before installation.

If you will be running your wires through the side of the base, trim the tab from the rubber gasket so the wires can exit the mount.

If you will be running your wires through the mounting surface, no modifications are necessary.

Drill pilot holes as needed, (as well as a cable hole if desired). If attaching to a wood surface, using standard wood screws to attach the mount base.

If using the expansion bolts, remove the nut, locking washer, and flat washer from each bolt. Insert the expansion bolts into the pilot holes. Align the mount base with the bolts, then reattach the flat washer, locking washer, and nut. Tighten each nut securely.

Add the desired number of extenders, pulling the wires from your surveillance system through each. After adding each extender, insert and tighten a locking screw to secure it.

Connect the fisheye cables to the system, attach the dome to the extender, then insert and tighten a locking screw.

Weatherproofing

While the gaskets provided both help block moisture, we recommend you run a silicone bead between the mount and the mounting surface, as well as around the wire (if you cut the gasket tab for on-wall wire placement).

Support

If you need help, email TechSupport@SnapAV.com. For more information, instructional videos, support documentation, or ideas, visit our website.

5-Year Limited Warranty

This Luma Surveillance™ product has a 5-Year Limited Warranty. This warranty includes parts and labor repairs on all components found to be defective in material or workmanship under normal conditions of use. This warranty shall not apply to products that have been abused, modified or disassembled. Products to be repaired under this warranty must be returned to a designated service center with an assigned return authorization (RA) number. Contact technical support for an RA number.

Copyright ©2018 Luma Surveillance. All rights reserved.