

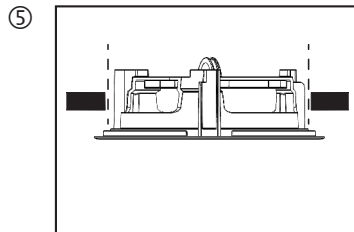
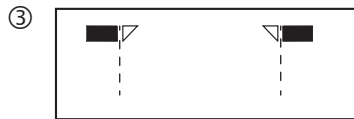


In-Ceiling Cutout

Use this template for the perfect install of your dome camera in-ceiling mount.

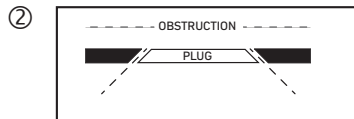

Center
+
Point

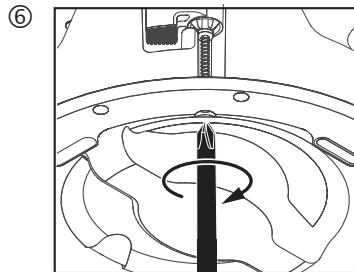

1. Trace the cutout template where the in-ceiling mount is to be installed.
2. Cut the drywall/surface material at a 45° angle so that the hole can be replaced easily if the hole is too close to an obstruction.
3. If there are no obstructions, trim the drywall/surface cut to a 90° angle.
4. Attach the camera to the in-ceiling mount.
5. Insert the camera and mount into the hole created.
6. Engage the dogs by turning the screws clockwise one quarter of a turn. Continue to tighten the dogs until you feel resistance. **Caution: Use a low-torque setting to tighten the dogs.**
7. Place the trim ring onto the mount. Turn it counter-clockwise to tighten.