Instruction Manual VSX-LX504

AV RECEIVER

Pioneer ELITE En

$\left(\right)$	Table of contents	»
$\left(\right)$	Connections	>>>
$\left(\right)$	- Connecting Speakers	≫
	Playback	≫
$\left(\right)$	Setup	»
$\left(\right)$	Troubleshooting	≫
$\left(\right)$	Appendix	≫
(Supplementary Information	»

Contents >> **Connections** >> **Playback** >> **Setup** >>

What's in the box	5
Additional Function (Firmware Update)	6
Update Information of the firmware	6
Operation of added new functions	6
Firmware Update Procedure	7
Part Names	10
Front Panel	10
Display	12
Rear Panel	13
Remote Controller	16

Connections

Connecting speakers	19
Speaker Installation	20
Speaker Connections and "Speaker Setup" Settings	s 47
Connecting a Power Amplifier	67
Speaker combinations	68
Connecting the TV	71
To ARC/eARC TV	72
To Non-ARC TV	73
Connecting Playback Devices	74
Connecting an AV Component with HDMI Jack	
Mounted	74

Connecting an Audio Component74Connecting a Video Camera, etc.77Connecting an AV Component in a Separate Room(Multi-zone Connection)(Multi-zone Connection)74Connecting a TV (ZONE 2)74Connecting a Pre-main Amplifier (ZONE 2)74Connecting ZONE B8Connecting a Pre-main Amplifier, etc. (ZONE 3)84Connecting a Pre-main Amplifier, etc. (ZONE B)8Connecting a Pre-main Amplifier, etc. (ZONE B)8Connecting Antennas84Network Connection8Connecting External Control Devices8IR IN/OUT port812V TRIGGER OUT jack8Connecting the Power Cord8Playback8Basic Operations8BLUETOOTH® Playback8Basic Operations8	Connecting an AV Component without HDMI Jack	
Connecting a Video Camera, etc.7Connecting an AV Component in a Separate Room (Multi-zone Connection)7Connecting a TV (ZONE 2)7Connecting a Pre-main Amplifier (ZONE 2)7Connecting a Pre-main Amplifier (ZONE 3)8Connecting ZONE B8Connecting a Pre-main Amplifier, etc. (ZONE B)8Connecting Antennas8Network Connection8Connecting External Control Devices8IR IN/OUT port812V TRIGGER OUT jack8Connecting the Power Cord8Basic Operations8BLUETOOTH® Playback8Basic Operations8	Mounted	75
Connecting an AV Component in a Separate Room (Multi-zone Connection)74Connecting a TV (ZONE 2)74Connecting a Pre-main Amplifier (ZONE 2)74Connecting a Pre-main Amplifier (ZONE 3)86Connecting ZONE B8Connecting a Pre-main Amplifier, etc. (ZONE B)8Connecting Antennas84Network Connection84Connecting External Control Devices8IR IN/OUT port812V TRIGGER OUT jack84Connecting the Power Cord84Basic Operations84Basic Operations84	Connecting an Audio Component	76
(Multi-zone Connection)74Connecting a TV (ZONE 2)74Connecting a Pre-main Amplifier (ZONE 2)74Connecting a Pre-main Amplifier (ZONE 3)84Connecting ZONE B8Connecting Antennas84Network Connection84Connecting External Control Devices84IR IN/OUT port8412V TRIGGER OUT jack84Playback84Basic Operations84Basic Operations84	Connecting a Video Camera, etc.	77
Connecting a Pre-main Amplifier (ZONE 2)7Connecting a Pre-main Amplifier (ZONE 3)8Connecting ZONE B8Connecting a Pre-main Amplifier, etc. (ZONE B)8Connecting Antennas8Network Connection8Connecting External Control Devices8IR IN/OUT port812V TRIGGER OUT jack8Connecting the Power Cord8Playback8Basic Operations8BLUETOOTH® Playback8Basic Operations8	• •	
Connecting a Pre-main Amplifier (ZONE 3)Connecting ZONE BConnecting a Pre-main Amplifier, etc. (ZONE B)Connecting AntennasConnecting AntennasNetwork ConnectionConnecting External Control DevicesIR IN/OUT port12V TRIGGER OUT jackConnecting the Power CordPlaybackAV Component PlaybackBasic OperationsBasic OperationsBasic OperationsBasic OperationsState OperationsSt	Connecting a TV (ZONE 2)	78
Connecting ZONE B8Connecting a Pre-main Amplifier, etc. (ZONE B)8Connecting Antennas8Network Connection8Connecting External Control Devices8IR IN/OUT port812V TRIGGER OUT jack8Connecting the Power Cord8Playback8Basic Operations8BLUETOOTH® Playback8Basic Operations8Basic Operations8	Connecting a Pre-main Amplifier (ZONE 2)	79
Connecting a Pre-main Amplifier, etc. (ZONE B)8Connecting Antennas83Network Connection83Connecting External Control Devices84IR IN/OUT port8412V TRIGGER OUT jack84Connecting the Power Cord84Playback84Basic Operations84Basic Operations84	Connecting a Pre-main Amplifier (ZONE 3)	80
Connecting Antennas83Network Connection83Connecting External Control Devices84IR IN/OUT port8412V TRIGGER OUT jack84Connecting the Power Cord84Playback84AV Component Playback84Basic Operations84Basic Operations84	Connecting ZONE B	81
Network Connection8Connecting External Control Devices8IR IN/OUT port812V TRIGGER OUT jack8Connecting the Power Cord8Playback8AV Component Playback8Basic Operations8BLUETOOTH® Playback8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8	Connecting a Pre-main Amplifier, etc. (ZONE B)	81
Connecting External Control Devices8IR IN/OUT port812V TRIGGER OUT jack8Connecting the Power Cord8Playback8AV Component Playback8Basic Operations8BLUETOOTH® Playback8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8	Connecting Antennas	82
IR IN/OUT port812V TRIGGER OUT jack8Connecting the Power Cord8Playback8AV Component Playback8Basic Operations8BLUETOOTH® Playback8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8	Network Connection	
12V TRIGGER OUT jack8Connecting the Power Cord8Playback8AV Component Playback8Basic Operations8BLUETOOTH® Playback8Basic Operations8Basic Operations8Basic Operations8Basic Operations8Basic Operations8	Connecting External Control Devices	84
Connecting the Power Cord8Playback8AV Component Playback8Basic Operations8BLUETOOTH® Playback8Basic Operations8Basic Operations8Basic Operations8	IR IN/OUT port	84
PlaybackAV Component Playback8Basic Operations8BLUETOOTH® Playback8Basic Operations8Basic Operations8	12V TRIGGER OUT jack	85
AV Component Playback8Basic Operations8BLUETOOTH® Playback8Basic Operations8	Connecting the Power Cord	86
Basic Operations8BLUETOOTH® Playback8Basic Operations8	Playback	
BLUETOOTH® Playback8Basic Operations8	AV Component Playback	88
Basic Operations 8	Basic Operations	88
	BLUETOOTH [®] Playback	89
Internet Padio 0	Basic Operations	89
	Internet Radio	90

Contents >> **Connections** >> **Playback** >> **Setup** >>

Playing Back	90
Spotify	92
AirPlay®	93
Playing Back on This Unit	93
Playing Back on multiple devices (AirPlay2)	94
DTS Play-Fi [®]	95
Playing Back	95
FlareConnect™	96
Playing Back	96
USB Storage Device	97
Basic Operations	97
Device and Supported Format	99
Playing back files on a PC and NAS (Music Server)	
Windows Media [®] Player settings	100
Playing Back	101
Supported Audio Formats	104
Play Queue	105
Initial Setup	105
Adding Play Queue Information	105
Sort and Delete	106
Playing Back	106
Amazon Music	
Registering this unit with Amazon Music	107

Playing Amazon Music	107
Connecting the Sonos System for Playback	108
Necessary Equipment	108
How to Connect This Unit and Sonos Connect	108
Setting Up	108
Playing Sonos on This Unit	109
Listening To the AM/FM Radio	110
Tuning into a Radio Station	110
Presetting a Radio Station	112
Using RDS (European, Australian and Asian mode	ls)114
Multi-zone	
Playing Back (ZONE 2)	116
Playing Back (ZONE 3)	118
ZONE B Playback	120
Playing Back	120
Convenience functions	121
Using PERSONAL PRESET	121
Adjusting the tone	123
Sleep Timer	125
Listening Mode	126
Selecting a Listening mode	126
Speaker Layouts and Selectable Listening Modes	129
Listening Mode Effects	132

Contents >> **Connections** >> **Playback** >> **Setup** >>

Input Formats and Selectable Listening Modes	136
Inputting Characters	142
Setup	
System Setup	143
Menu list	143
Menu operations	145
Input/Output Assign	146
Speaker	150
Audio Adjust	155
Source	157
Hardware	159
Multi Zone	166
Miscellaneous	168
Advanced MCACC	170
Menu operations	170
Full Auto MCACC	171
Manual MCACC	172
MCACC Data Check	174
Network/Bluetooth	
Menu operations	175
Network	176
Bluetooth	178


AV Adjust	179
Menu operations	179
Web Setup	181
Menu operations	181
Initial Setup with Auto Start-up Wizard	182
Operations	182
Troubleshooting	
When the unit is operating erratically	186

When the unit is operating errat	ically 186
Troubleshooting	188

Appendix

Reducing the Power Consumption in Standby State	197
About HDMI	198
General Specifications	200

What's in the box

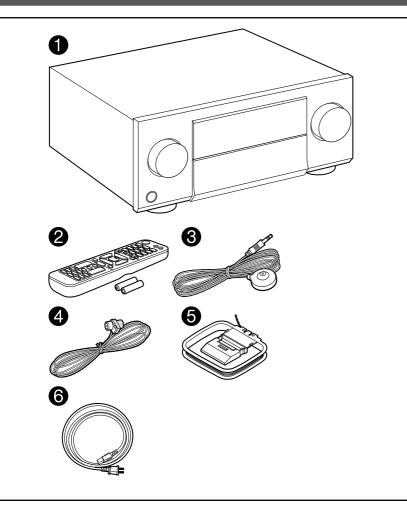

- 1. Main unit (1)
- 2. Remote controller (RC-974R) (1), Batteries (AAA/R03) (2)
- 3. Speaker setup microphone (1)
- Used during Initial Setup.
- 4. Indoor FM antenna (1)
- 5. AM loop antenna (1)
- 6. Power cord (1)
- Quick Start Guide (1)
- *This document is an online instruction manual. It is not included as an accessory.
- Connect speakers with an impedance of 4 Ω to 16 $\Omega.$
- The power cord must be connected only after all other connections are completed.
- We will not accept any responsibility for damage arising from the connection with equipment manufactured by other companies.
- Network services and content that can be used may no longer be available if new functions are added by updating firmware or the service providers terminate their services. Also, available services may differ depending on your area.
- Details on the firmware update will be posted on our website and through other means at a later date.
- The illustrations in this manual use those of North American models unless otherwise mentioned.
- Specifications and appearance are subject to change without prior notice.

Additional Function (Firmware Update)

This unit is equipped with a function to update the firmware via network or USB port when the firmware update is announced after purchase. This enables various functions to be added and operations to be improved.

Depending on the manufacturing timing of the product, the firmware may be switched to the updated one. In such a case, new functions may be added from the start. For how to confirm the latest firmware contents and the firmware version of your product, see the following section.

Update Information of the firmware

For the latest firmware contents and the firmware version, visit our company's website. If the firmware version of your product differs from the latest one, it is recommended to update the firmware.

To confirm the firmware version of your product, press the **t** button on the remote controller to display the Home screen, and refer to "System Setup" - "Miscellaneous" - "Firmware Update" - "Version" ($\rightarrow p168$).

Operation of added new functions

If functions are added or changed from contents described in the Instruction Manual, see the following reference.

Supplementary Information >>>

□ Firmware Update Procedure (→p7)

Firmware Update Procedure

The update may take approx. 20 minutes to complete via network or via USB port. Existing settings are guaranteed in either updating method.

When this unit is connected to the network, notifications of firmware updates may be displayed. To update the firmware, select "Update Now" with the cursors on the remote controller, and press the ENTER button. The unit automatically enters standby mode after "Completed!" is displayed, and the update is completed.

Disclaimer: The program and accompanying online documentation are furnished to you for use at your own risk.

Our company will not be liable and you will have no remedy for damages for any claim of any kind whatsoever concerning your use of the program or the accompanying online documentation, regardless of legal theory, and whether arising in tort or contract.

In no event will our company be liable to you or any third party for any special, indirect, incidental, or consequential damages of any kind, including, but not limited to, compensation, reimbursement or damages on account of the loss of present or prospective profits, loss of data, or for any other reason whatsoever.

Updating the Firmware via Network

- While updating the firmware, do not do the following:
 - Disconnecting and reconnecting cables, USB storage device, speaker setup microphone or headphones, or performing operations on the unit such as turning the power off
 - Accessing this unit from a PC or smartphone using their applications
- · Check that the unit is turned on, and the connection to the Internet is secured.
- Turn off the controller components (PC etc.) connected to the network.
- · Stop any playing Internet radio, USB storage device, or server content.
- If the multi-zone function is active, turn it off.
- If "HDMI CEC" is set to "On", set it to "Off".
 - Press
 to display the Home screen. Next, select "System Setup" "Hardware" "HDMI", press ENTER, select "HDMI CEC" and select "Off".
 - * The descriptions may differ from the actual on-screen displays, however, operations and functions are the same.

Update

1. Press **1**.

The Home screen is displayed on the TV screen.



2. Select "System Setup" - "Miscellaneous" - "Firmware Update" - "Update via NET" with the cursors in order, then press ENTER.



- If "Firmware Update" is grayed out and cannot be selected, wait for a while until it starts up.
- If there is no updatable firmware, "Update via NET" cannot be selected.
- 3. Press ENTER with "Update" selected, and start update.
 - During the update, the TV screen may go black depending on the program to be updated. In such a case, check the progress on the display of the unit. The TV screen will remain black until the update is completed and the power is turned on again.
 - When "Completed!" is displayed, the update is complete.
- 4. Press ^(b) STANDBY/ON on the main unit to turn the unit into standby mode. The process is completed, and your firmware is updated to the latest version.
 - Do not use ⁽⁾ on the remote controller.

If an Error Message is Displayed

If an error occurs, "*-** Error!" is displayed on the display of the unit. ("*" represents an alphanumeric character.) Refer to the following descriptions and check.

Error Code

- ***-01**, ***-10**:
- LAN cable not found. Connect the LAN cable properly.
- *-02, *-03, *-04, *-05, *-06, *-11, *-13, *-14, *-16, *-17, *-18, *-20, *-21:
 - Internet connection error. Check the following:
 - Whether the router is turned on
 - Whether this unit and the router are connected via the network

Unplug and plug the power cords of this unit and the router. This may solve the problem. If you are still unable to connect to the Internet, the DNS server or proxy server may be temporarily down. Check the server operation status with your Internet service provider.

· Others:

After removing the power plug once, insert it to the outlet, and then start the operation from the beginning.

Updating via USB

- While updating the firmware, do not do the following:
 - Disconnecting and reconnecting cables, USB storage device, speaker setup microphone or headphones, or performing operations on the unit such as turning the power off
 - Accessing this unit from a PC or smartphone using their applications
- Prepare a 256 MB or larger USB storage device. The format of USB storage devices supports FAT16 or FAT32 file system format.
 - Media inserted into a USB card reader may not be used for this function.
 - USB storage devices equipped with the security function are not supported.
 - USB hubs and USB devices equipped with the hub function are not supported. Do not connect these devices to the unit.
- · Delete any data stored on the USB storage device.
- Turn off control devices (PC etc.) connected to the network.
- Stop an Internet radio, USB storage device, or server content being played.
- If the multi-zone function is active, turn it off.

- If "HDMI CEC" is set to "On", set it to "Off".

 - * Depending on the USB storage device or its content, long time may be required for loading, the content may not be loaded correctly, or power may not be supplied correctly.
 - * Our company will not be liable whatsoever for any loss or damage of data, or storage failure arising from the use of the USB storage device. Please note this in advance.
 - * The descriptions may differ from the actual on-screen displays, however, operations and functions are the same.

Update

- 1. Connect the USB storage device to your PC.
- 2. Download the firmware file from our company's website to your PC and unzip. Firmware files are named as below.

PIOAVR**** R***.zip

Unzip the file on your PC. The number of unzipped files and folders varies depending on the model.

- 3. Copy all unzipped files and folders to the root folder of the USB storage device.
 - · Make sure to copy the unzipped files.
- 4. Connect the USB storage device to the USB port of this unit.
 - If an AC adapter is supplied with the USB storage device, connect the AC adapter, and use it with a household outlet.
 - If the USB storage device has been partitioned, each section will be treated as an independent device.
- 5. Press 🔁.

The Home screen is displayed on the TV screen.



6. Select "System Setup" - "Miscellaneous" - "Firmware Update" - "Update via USB" with the cursors in order, then press ENTER.



- If "Firmware Update" is grayed out and cannot be selected, wait for a while until it starts up.
- If there is no updatable firmware, "Update via USB" cannot be selected.
- 7. Press ENTER with "Update" selected, and start update.
 - During the update, the TV screen may go black depending on the program to be updated. In such a case, check the progress on the display of the unit. The TV screen will remain black until the update is completed and the power is turned on again.
 - During the update, do not turn the power off, or disconnect or reconnect the USB storage device.
 - When "Completed!" is displayed, the update is complete.
- 8. Disconnect the USB storage device from the unit.
- 9. Press ^(b) STANDBY/ON on the main unit to turn the unit into standby mode. The process is completed, and your firmware is updated to the latest version.
 - Do not use O on the remote controller.

If an Error Message is Displayed

If an error occurs, "*-** Error!" is displayed on the display of the unit. ("*" represents an alphanumeric character.) Refer to the following descriptions and check.

Error Code

• ***-01**, ***-10**:

The USB storage device cannot be recognized. Check if the USB storage device or USB cable is securely inserted to the USB port of the unit. Connect the USB storage device to an external power source if it has its own power supply.


 *-05, *-13, *-20, *-21: The firmware file is not present in the root folder of the USB storage device, or the firmware file is for another model. Retry from the download of the firmware file.

· Others:

After removing the power plug once, insert it to the outlet, and then start the operation from the beginning.

Part Names

Front Panel

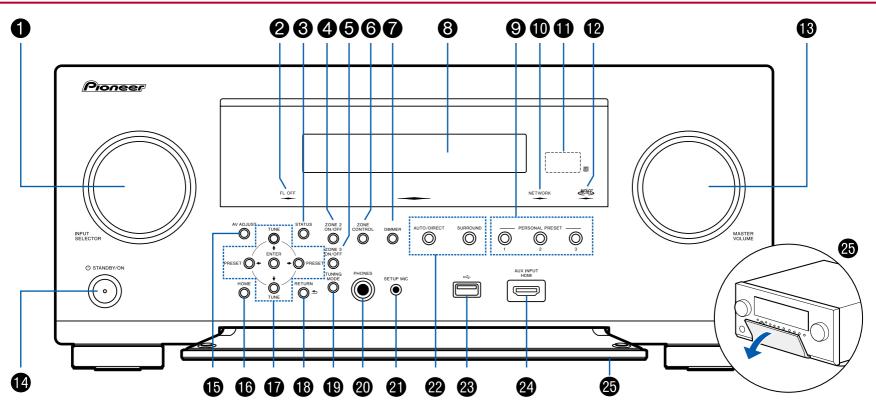

 \Box For details, see (\rightarrow **p11**)

- 1. INPUT SELECTOR dial: Switch the input to be played.
- 2. FL OFF indicator: This lights when you have pressed DIMMER repeatedly to turn the display off.
- 3. STATUS button: Switches the information on the display. ($\rightarrow p128$)
- 4. ZONE 2 ON/OFF button: Turns ZONE 2 ON/OFF. (→p116)
- 5. ZONE 3 ON/OFF button: Turns ZONE 3 ON/OFF. (→p118)
- 6. ZONE CONTROL button: Controls the multi-zone function. (→p115)
- 7. DIMMER button: You can switch the display off or adjust the brightness of the display in three steps.
- 8. Display (→<u>**p12**</u>)
- PERSONAL PRESET 1/2/3 buttons: Registers the current setting conditions such as input selector, listening mode, etc. or call the registered settings. (→p121)
- 10. NETWORK indicator: This lights when "NET" is selected with the input selector and the unit is connected to the network. Lights up when any of the following functions is working or enabled in standby state of this unit. When this indicator is lighting, the power consumption in standby state increases, however, the increase in power consumption is minimized by entering the HYBRID STANDBY mode where only the essential circuits operate. It does not light when ZONE 2/ZONE 3 is on, however.
 - HDMI CEC (→<u>p159</u>)
 - HDMI Standby Through (→p159)
 - USB Power Out at Standby (→p161)
 - Network Standby (→p161)
 - Bluetooth Wakeup ($\rightarrow p161$)
- 11. Remote control sensor: Receives signals from the remote controller.
 - The signal range of the remote controller is within about 16'/5 m, at an angle of 20° on the perpendicular axis and 30° to either side.
- 12. MCACC indicator: This lights when you have enabled the speaker calibration made with MCACC. (→p171, 183)
- 13. MASTER VOLUME
- 14. ^(J) STANDBY/ON button: When the power is turned on, the periphery of the button lights up. It also lights up when ZONE 2/ZONE 3 is turned on.
- 15. AV ADJUST button: Settings such as "HDMI" and "Audio" can be made quickly during play on the TV screen. (→p179)
- 16. HOME button: Displays the Home. (\rightarrow **p145, 170, 175**)


- Cursor buttons (+ / + / +) and ENTER button: Select the item with the cursors and press ENTER to confirm. Use them to tune to stations when using TUNER. (→p110)
- 18. RETURN button: Returns the display to the previous state.
- 19. TUNING MODE button: Switches the tuning mode. (\rightarrow **p110**)
- 20. PHONES jack: Headphones with a standard plug (ø1/4"/6.3 mm) are connected.
- 21. SETUP MIC jack: The supplied speaker setup microphone is connected. (→p171, 183)
- 22. Listening mode button: Switches the listening mode. ($\rightarrow p126$)
- 23. USB port: A USB storage device is connected so that music files stored in it can be played. Supply of power to USB devices while in the standby mode is not supported. (→p97)
- 24. AUX INPUT HDMI jack: Connect a video camera, etc. using an HDMI cable.

(→<u>p77</u>)

25. Front flap

Display

selector.

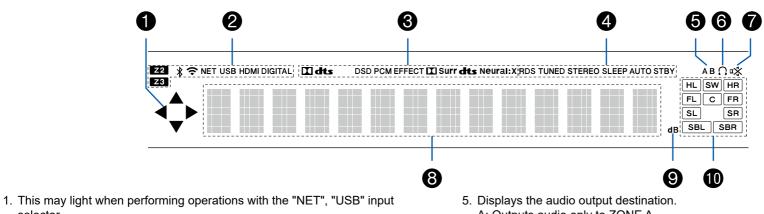

- 2. Lights in the following conditions.
 - Z2/Z3: ZONE 2/ZONE 3 is on.
 - * : Connected by BLUETOOTH.
 - €: Connected by Wi-Fi.

NET: Lights when connected to the network with the "NET" input selector. It will blink if incorrectly connected to the network.

USB: Lights when the "USB" input selector is selected, a USB device is connected and the USB input is selected. It will blink if the USB device is not properly connected.

HDMI: HDMI signals are input and the HDMI input is selected.

DIGITAL: Digital signals are input and the digital input is selected.


- 3. Lights according to the type of input digital audio signal and the listening mode.
- 4. Lights in the following conditions.

RDS (European, Australian and Asian models): Receiving RDS broadcasting. TUNED: Receiving AM/FM radio. STEREO: Receiving FM stereo. SLEEP: Sleep timer is set. (→p160)


AUTO STBY: Auto Standby is set. (\rightarrow **p160**)

- A: Outputs audio only to ZONE A.
- B: Outputs audio only to ZONE B.
- AB: Outputs audio to both ZONE A and ZONE B.
- 6. Lights when headphones are connected.
- 7. Blinks when muting is on.
- 8. Displays various information of the input signals.
- 9. Lights when adjusting the volume.
- 10. Speaker/Channel display: Displays the output channel that corresponds to the selected listening mode.

Rear Panel

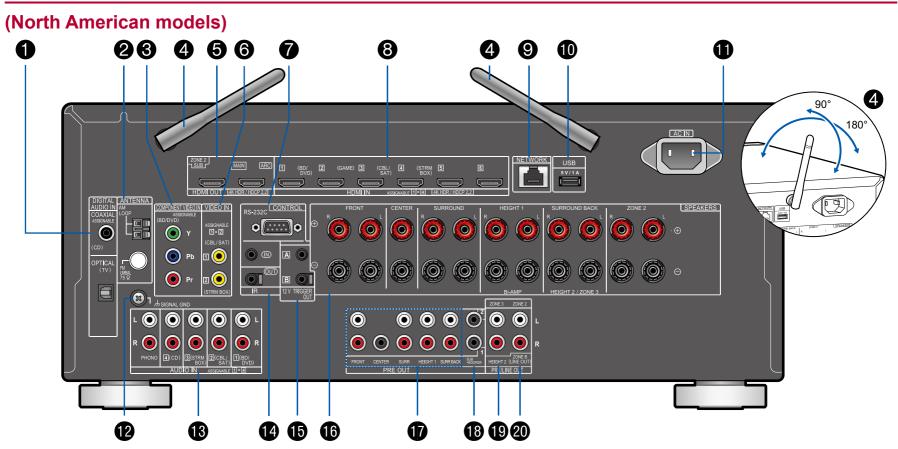

 \Box For details, see ($\rightarrow p15$)

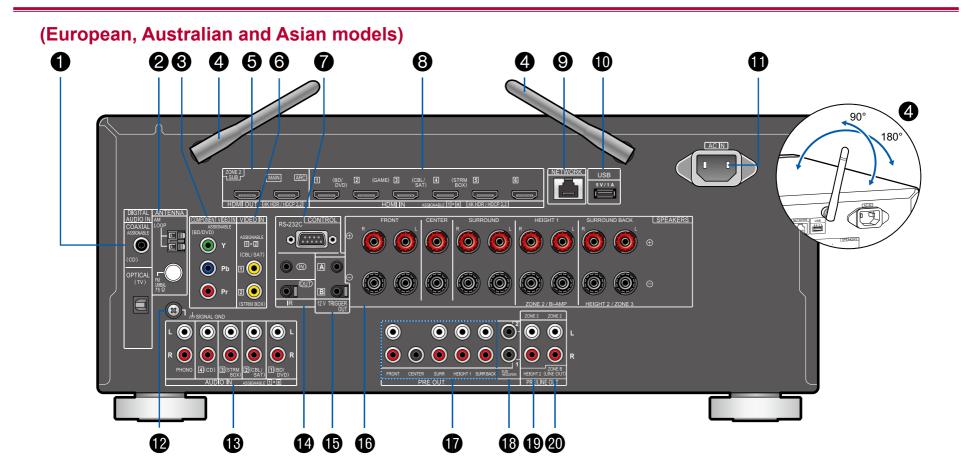

 \Box For details, see ($\rightarrow p15$)


- 1. DIGITAL AUDIO IN OPTICAL/COAXIAL jacks: Input TV or AV component digital audio signals with a digital optical cable or digital coaxial cable.
- 2. ANTENNA AM LOOP/FM UNBAL 75 Ω terminal: The supplied antennas are connected.
- 3. COMPONENT VIDEO IN jacks: Input the AV component video signals with a component video cable. (Compatible only with 480i or 576i resolution.)
- 4. Wireless antenna: Used for Wi-Fi connection or when using a BLUETOOTH enabled device. Adjust their angles according to the connection status.
- 5. HDMI OUT jacks: Transmit video signals and audio signals with an HDMI cable connected to a monitor such as a TV or projector.
- 6. VIDEO IN jacks: Input the AV component video signals with an analog video cable.
- 7. RS-232C port: Connect a home control system equipped with an RS-232C port. For adopting a home control system, contact the specialized stores.
- 8. HDMI IN jacks: Transmit video signals and audio signals with a HDMI cable connected to an AV component.
- 9. NETWORK port: Connect to the network with a LAN cable.
- USB port: A USB storage device is connected so that music files stored in it can be played. (→<u>p97</u>) You can also supply power (5 V/1 A) to USB devices with a USB cable.
- 11. AC IN: The supplied power cord is connected.
- 12. SIGNAL GND terminal: The ground wire of the turntable is connected.
- 13. AUDIO IN jacks: Input AV component audio signal with an analog audio cable.
- 14. IR IN/OUT port: Connect a remote control receiver unit. (\rightarrow **p84**)
- 15. 12V TRIGGER OUT A/B jack: Connect a device equipped with a 12V trigger input jack to enable power link operation between the device and this unit.
 (→p85)
- 16. SPEAKERS terminals: Connect speakers with speaker cables. (North American models support banana plugs. Use a plug 4 mm in diameter. Y plug connection is not supported.)
- 17. PRE OUT jacks: Connect a power amplifier. ($\rightarrow p67$)
- 18. SUBWOOFER PRE OUT jack: Connect a powered subwoofer with a subwoofer cable. Up to two powered subwoofers can be connected. The same signal is output from each of the SUBWOOFER PRE OUT jacks.
- 19. ZONE 3 PRE/LINE OUT jacks: Output audio signals with an analog audio cable connected to a pre-main amplifier or a power amplifier in a separate room (ZONE 3).

HEIGHT 2 PRE OUT jacks: Connect a power amplifier. (→p67)

20. ZONE 2 PRE/LINE OUT jacks: Output audio signals with an analog audio cable connected to a pre-main amplifier or a power amplifier in a separate room (ZONE 2).

ZONE B LINE OUT jacks: Connect to a pre-main amplifier with an analog audio cable, and simultaneously output audio of the same source as that of the speakers (ZONE A) connected to this unit.

Remote Controller

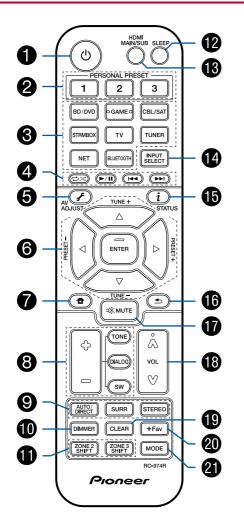

- 1. 心 STANDBY/ON button
- PERSONAL PRESET 1/2/3 buttons: Registers the current setting conditions such as input selector, listening mode, etc. or call the registered settings. (→p121)
- 3. Input selector buttons: Switches the input to be played.
- Play buttons: Used for playback operations for the Music Server (→p100) or USB device (→p97). If the unit is switched to "CEC MODE" using "21. MODE button", an HDMI CEC function-enabled AV component can be operated. (Depending on the device, operation may not be possible.)
- f (AV ADJUST) button: Settings such as "HDMI" and "Audio" can be made quickly during play on the TV screen. (→p179)
- Cursor buttons and ENTER button: Select the item with the cursors and press ENTER to confirm your selection. When the folder or file lists are not shown on one screen on the TV, press ◄ / ► to change the screen.
- 7. \blacksquare button: Displays the Home. (\rightarrow **p145**, **170**, **175**)
- TONE/DIALOG/SW buttons: Adjusts the sound quality of the speakers and volume level of the subwoofer. (→p123)
- 9. LISTENING MODE buttons: Allows you to select the listening mode. (\rightarrow <u>p126</u>)
- 10. DIMMER button: You can switch the display off or adjust the brightness of the display in three steps.
- 11. ZONE 2/ZONE 3 SHIFT button: Controls the multi-zone function. (→p115)
- SLEEP button: Set the sleep timer. Select the time from "30 min", "60 min" and "90 min". (→p125)
- 13. HDMI MAIN/SUB button: Select the HDMI OUT jack to output video signals from "MAIN", "SUB", and "MAIN+SUB".
- 14. INPUT SELECT button: Switches the input to be played.
- 15. i (STATUS) button: Switches the information on the display and is used to operate RDS. (\rightarrow **p114**)
- 16. rightarrow button: Returns the display to the previous state.
- 17. 🕸 button: Temporarily mutes audio. Press again to cancel muting.
- 18. Volume buttons
- 19. CLEAR button: Deletes all characters you have entered when entering text on the TV screen.
- 20. +Fav button: Used to register AM/FM radio stations. ($\rightarrow p112$)


21. MODE button: Switches between automatic tuning and manual tuning for AM/FM stations (→p110). Also, when an HDMI CEC function-enabled AV component is connected to this unit, you can switch "4. Play buttons" between "CEC MODE" and "RCV MODE" (normal mode).

Connections

19
71
74
78
81
82
83
84
86

Connecting speakers


You can select the layout of speakers to be installed from various patterns when using this unit. Use the following flow chart to select the speaker layout that suits your speakers and usage environment. You can check the connection method and default settings.

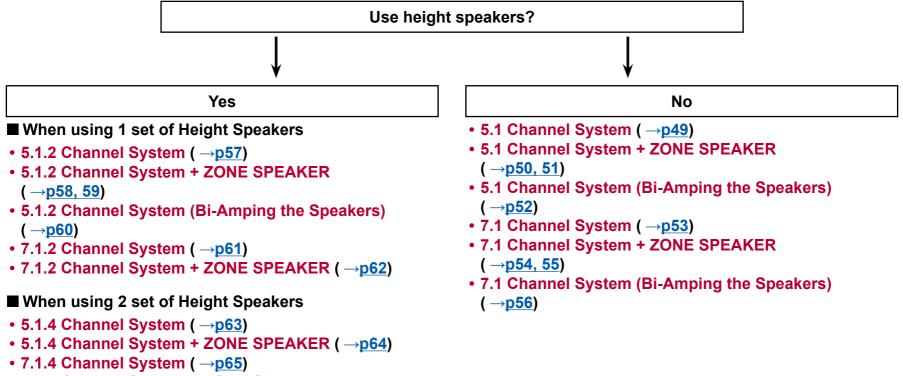

7.1.4 Channel System + ZONE SPEAKER (→p66)

Speaker Installation


5.1 Channel System

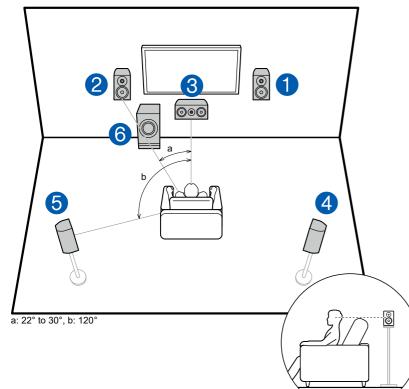

This is a basic 5.1 Channel System. Front speakers output the front stereo sound, and a center speaker outputs the sound of the center of the screen, such as dialogs and vocals. Surround speakers create the back sound field. Powered subwoofer reproduces the bass sound, and creates the rich sound field. The front speakers should be positioned at ear height while the surround speakers should be positioned just above ear height. The center speaker should be set up facing the listening position at an angle. Placing the powered subwoofer between the center speaker and the front speaker gives you a natural sound even when playing music sources.

- 1,2 Front Speakers
- 3 Center Speaker
- 4,5 Surround Speakers
- 6 Powered Subwoofer

7.1 Channel System

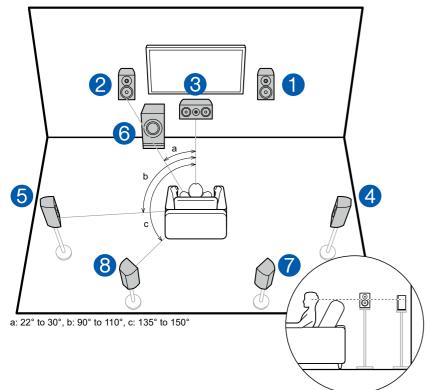

This is a 7.1 Channel System that consists of the basic 5.1 Channel System $(\rightarrow p20)$ and added surround back speakers. Front speakers output the front stereo sound, and a center speaker outputs the sound of the center of the screen, such as dialogs and vocals. Surround speakers create the back sound field. Powered subwoofer reproduces the bass sound, and creates the rich sound field. Surround back speakers improves the sense of envelopment and connectivity of sound in the back sound field, and provides a more real sound field.

The front speakers should be positioned at ear height while the surround speakers should be positioned just above ear height. The center speaker should be set up facing the listening position at an angle. Placing the powered subwoofer between the center speaker and the front speaker gives you a natural sound even when playing music sources. The surround back speakers should be positioned at ear height.


- If surround back speakers are installed, be sure to install surround speakers as well.
- 1,2 Front Speakers
- 3 Center Speaker
- 4,5 Surround Speakers
- 6 Powered Subwoofer
- 7,8 Surround Back Speakers

5.1.2 Channel System

A 5.1.2 Channel System is a speaker layout consisting of the basic 5.1 Channel System ($\rightarrow p20$) and added height speakers. Select the height speakers that suit your speakers and usage environment from the following three types.

- □ Front High Speakers/Rear High Speakers Installation Example (→p23)
- □ Ceiling Speakers Installation Example (→p24)
- □ Dolby Enabled Speakers (Dolby Speakers) Installation Example (→p25)

Front High Speakers/Rear High Speakers Installation Example

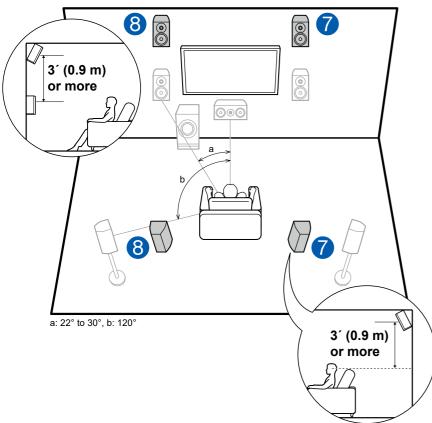


This is a system with the basic 5.1 channel system ($\rightarrow p20$) consisting of front speakers, a center speaker, surround speakers and a powered subwoofer, and added front high speakers or rear high speakers combined. Installing the height speakers will enrich the sound field feeling in the upper space. Front high speakers or rear high speakers should be installed at least 3'/0.9 m higher than the front speakers.

Front high speakers should be installed directly above the front speakers, and the distance between the rear high speakers should match the distance between the front speakers. In both cases, the speakers should be set up facing the listening position at an angle.

7,8 Height Speakers Choose one of the following:

- Front High Speakers
- Rear High Speakers

Ceiling Speakers Installation Example

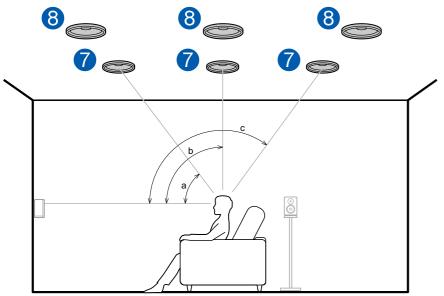

a: 30° to 55°, b: 65° to 100°, c: 125° to 150°


This is a system with the basic 5.1 channel system ($\rightarrow p20$) consisting of front speakers, a center speaker, surround speakers and a powered subwoofer, and added top front speakers or top middle speakers or top rear speakers combined. Installing the height speakers will enrich the sound field feeling in the upper space. Install the top front speakers on the ceiling anterior to the seating position, top middle speakers on the ceiling directly above the seating position, and top rear speakers on the ceiling posterior to the seating position. The distance between each pair should match the distance between the front speakers.

• Dolby Laboratories recommends the setups of these types of height speakers to obtain the best Dolby Atmos effect.

7,8 Height Speakers Choose one of the following:

- Top Front Speakers
- Top Middle Speakers
- Top Rear Speakers

Dolby Enabled Speakers (Dolby Speakers) Installation Example

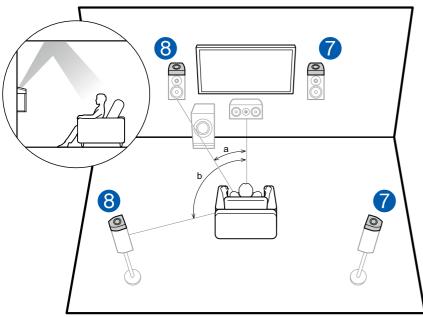

a: 22° to 30°, b: 120°

This is a system with the basic 5.1 channel system ($\rightarrow p20$) consisting of front speakers, a center speaker, surround speakers and a powered subwoofer, and added Dolby enabled speakers (front) or Dolby enabled speakers (surround) combined. Dolby enabled speakers are special speakers designed to face the ceiling, so that the sound is heard from overhead by bouncing the sound off the ceiling. Installing the height speakers will enrich the sound field feeling in the upper space.

Install them either on the front speakers or on the surround speakers.

7,8 Height Speakers

Choose one of the following:


- Dolby Enabled Speakers (Front)
- Dolby Enabled Speakers (Surround)

7.1.2 Channel System

A 7.1.2 Channel System is a speaker layout consisting of the 7.1 Channel System ($\rightarrow \underline{p21}$) and added height speakers. Select the height speakers that suit your speakers and usage environment from the following three types.

- □ Front High Speakers/Rear High Speakers Installation Example (→p27)
- □ Ceiling Speakers Installation Example (→p28)
- □ Dolby Enabled Speakers (Dolby Speakers) Installation Example (→p29)

Front High Speakers/Rear High Speakers Installation Example

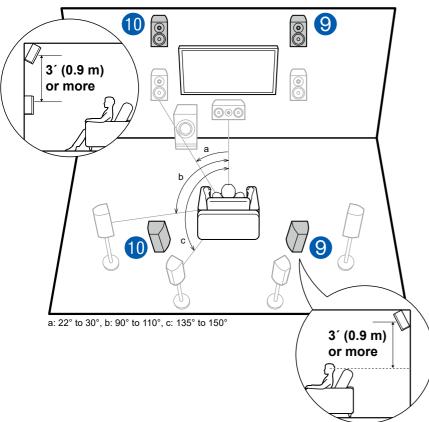


This is a system with the 7.1 channel system (\rightarrow p21) consisting of front speakers, a center speaker, surround speakers, surround back speakers and a powered subwoofer, and added front high speakers or rear high speakers combined. Installing the height speakers will enrich the sound field feeling in the upper space. Front high speakers or rear high speakers should be installed at least 3'/0.9 m higher than the front speakers.

Front high speakers should be installed directly above the front speakers, and the distance between the rear high speakers should match the distance between the front speakers. In both cases, the speakers should be set up facing the listening position at an angle.

9,10 Height Speakers Choose one of the following:

- Front High Speakers
- · Rear High Speakers

Ceiling Speakers Installation Example

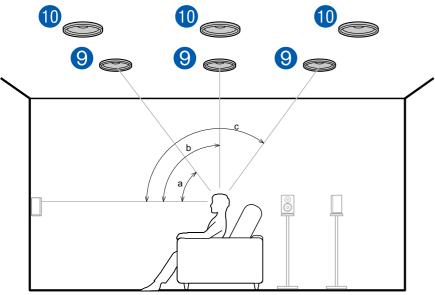

a: 30° to 55°, b: 65° to 100°, c: 125° to 150°


This is a system with the 7.1 channel system (\rightarrow p21) consisting of front speakers, a center speaker, surround speakers, surround back speakers and a powered subwoofer, and added top front speakers or top middle speakers or top rear speakers combined. Installing the height speakers will enrich the sound field feeling in the upper space. Install the top front speakers on the ceiling anterior to the seating position, top middle speakers on the ceiling directly above the seating position, and top rear speakers on the ceiling posterior to the seating position. The distance between each pair should match the distance between the front speakers.

• Dolby Laboratories recommends the setups of these types of height speakers to obtain the best Dolby Atmos effect.

9,10 Height Speakers Choose one of the following:

- · Top Front Speakers
- Top Middle Speakers
- · Top Rear Speakers

Dolby Enabled Speakers (Dolby Speakers) Installation Example

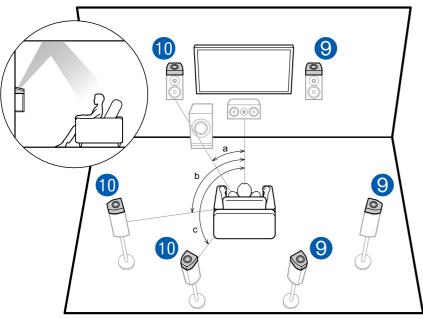

a: 22° to 30°, b: 90° to 110°, c: 135° to 150°

This is a system with the 7.1 channel system (\rightarrow p21) consisting of front speakers, a center speaker, surround speakers, surround back speakers and a powered subwoofer, and added Dolby enabled speakers (front), Dolby enabled speakers (surround) or Dolby enabled speakers (surround back) combined. Dolby enabled speakers are special speakers designed to face the ceiling, so that the sound is heard from overhead by bouncing the sound off the ceiling. Installing the height speakers will enrich the sound field feeling in the upper space.

Install them either on the front speakers, on the surround speakers or on the surround back speakers.

9,10 Height Speakers

Choose one of the following:


- Dolby Enabled Speakers (Front)
- Dolby Enabled Speakers (Surround)
- Dolby Enabled Speakers (Surround Back)

5.1.4 Channel System

A 5.1.4 Channel System is a speaker layout combining 2 sets of the height speakers, 1 set of left and right at the front and 1 set of left and right at the rear, to the basic 5.1 Channel System ($\rightarrow p20$). Installing the height speakers will enrich the sound field feeling in the upper space. Combination of 2 height speakers can be selected from following.

- □ Combination example when Top Front Speakers are used at the front (→p31)
- □ Combination example when Top Middle Speakers are used at the front (\rightarrow p33)
- □ Combination example when Front High Speakers are used at the front (→p34)
- ❑ Combination example when Dolby Enabled Speakers (Front) are used at the front (→p36)



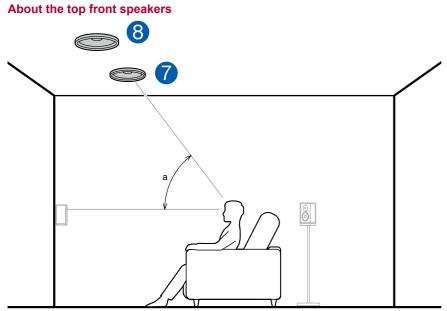




The top front speakers are installed on the ceiling at front of the listening position, and the width between the left and right speakers is optimal to match the one for the front speakers. When the top front speakers are used in front, the combination of the height speakers at the rear can be selected from the following 3 examples shown at the right.

7,8 Top Front Speakers

(Example 1) Use top rear speakers at the rear

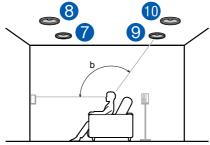


b: 125° to 150°

The top rear speakers are installed on the ceiling at rear of the listening position, and the width between the left and right speakers is optimal to match the one for the front speakers.

9,10 Top Rear Speakers


(Example 2) Use rear high speakers at the rear

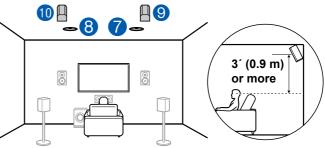

The width between the rear high speakers should match the one for the front speakers, and they should be installed minimum of 3'/0.9 m higher than the front speakers, and tilted so they will point toward the listener.

9,10 Rear High Speakers

(Example 3) Use Dolby Enabled Speakers (Surround) at the rear

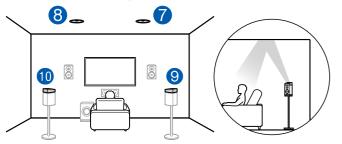


The Dolby enabled speakers are the special speaker that the sound is emitted toward the ceiling, and have the effect the sound to come from above by reflecting the sound on the ceiling.

The Dolby enabled speakers (surround) are installed on top of the surround speakers.

9,10 Dolby Enabled Speakers (Surround)




About the top middle speakers

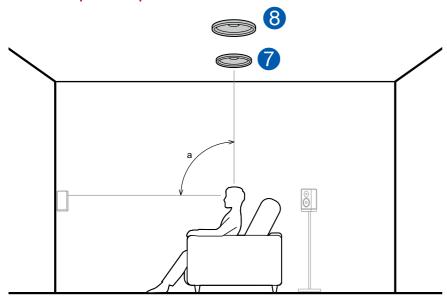

a: 65° to 100°

The top middle speakers are installed on the ceiling immediately above the listening position, and the width between the left and right speakers is optimal to match the one for the front speakers. When the top middle speakers are used in front, the rear high speakers in the figure at the right can be used at the rear.

7,8 Top Middle Speakers

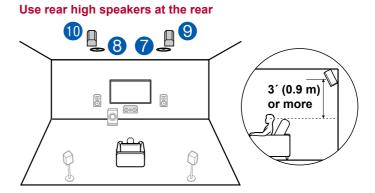


The width between the rear high speakers should match the one for the front speakers, and they should be installed minimum of 3'/0.9 m higher than the front speakers, and tilted so they will point toward the listener.

9,10 Rear High Speakers



About the front high speakers

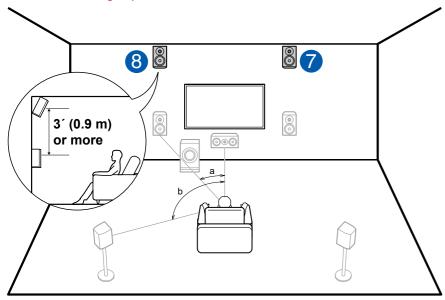


a: 22° to 30°, b: 120°

Install the front high speakers immediately above the front speakers minimum of 3'/0.9 m higher, and tilted so they will point toward the listener. When the front high speakers are used in front, the combination of the height speakers at the rear can be selected from the following 4 examples shown at the right.

7,8 Front High Speakers


(Example 1) Use rear high speakers at the rear

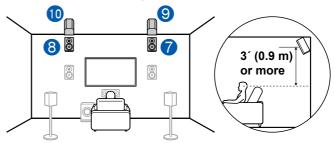

The width between the rear high speakers should match the one for the front speakers, and they should be installed minimum of 3'/0.9 m higher than the front speakers, and tilted so they will point toward the listener.

9,10 Rear High Speakers

(Example 2) Use top middle speakers at the rear

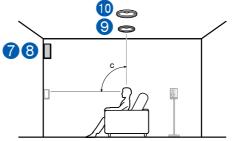


c: 65° to 100°

The top middle speakers are installed on the ceiling immediately above the listening position, and the width between the left and right speakers is optimal to match the one for the front speakers.

9,10 Top Middle Speakers

(Example 3) Use top rear speakers at the rear

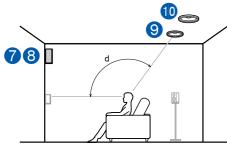

d: 125° to 150°

The top rear speakers are installed on the ceiling at rear of the listening position, and the width between the left and right speakers is optimal to match the one for the front speakers.

9,10 Top Rear Speakers

(Example 4) Use Dolby Enabled Speakers (Surround) at the rear




The Dolby enabled speakers are the special speaker that the sound is emitted toward the ceiling, and have the effect the sound to come from above by reflecting the sound on the ceiling.

The Dolby enabled speakers (surround) are installed on top of the surround speakers.

9,10 Dolby Enabled Speakers (Surround)

Combination example when Dolby Enabled Speakers (Front) are used at the front

About the Dolby enabled speakers (front)

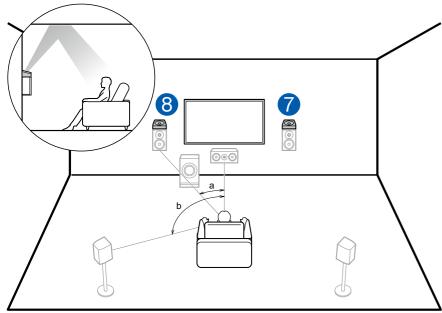


a: 22° to 30°, b: 120°

The Dolby enabled speakers are the special speaker that the sound is emitted toward the ceiling, and have the effect the sound to come from above by reflecting the sound on the ceiling.

The Dolby enabled speakers (front) are installed on top of the front speakers. When the Dolby enabled speakers (front) are used in front, the combination of the height speakers at the rear can be selected from the following 3 examples shown at the right.

7,8 Dolby Enabled Speakers (Front)

(Example 1) Use top rear speakers at the rear

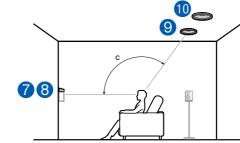


c: 125° to 150°

The top rear speakers are installed on the ceiling at rear of the listening position, and the width between the left and right speakers is optimal to match the one for the front speakers.

9,10 Top Rear Speakers


(Example 2) Use rear high speakers at the rear

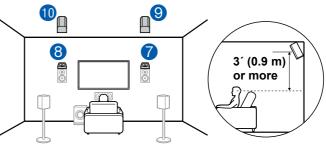

The width between the rear high speakers should match the one for the front speakers, and they should be installed minimum of 3'/0.9 m higher than the front speakers, and tilted so they will point toward the listener.

9,10 Rear High Speakers

(Example 3) Use Dolby Enabled Speakers (Surround) at the rear

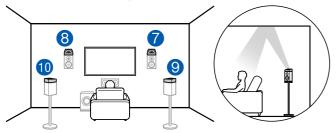

The Dolby enabled speakers are the special speaker that the sound is emitted toward the ceiling, and have the effect the sound to come from above by reflecting the sound on the ceiling.

The Dolby enabled speakers (surround) are installed on top of the surround speakers.


9,10 Dolby Enabled Speakers (Surround)

7.1.4 Channel System

A 7.1.4 Channel System is a speaker layout combining 2 sets of the height speakers, 1 set of left and right at the front and 1 set of left and right at the rear, to the basic 7.1 Channel System (\rightarrow p21). Installing the height speakers will enrich the sound field feeling in the upper space. Combination of 2 height speakers can be selected from following.

- □ Combination example when Top Front Speakers are used at the front (→p39)
- □ Combination example when Top Middle Speakers are used at the front (\rightarrow p41)
- □ Combination example when Front High Speakers are used at the front (\rightarrow <u>p42</u>)
- ❑ Combination example when Dolby Enabled Speakers (Front) are used at the front (→p45)



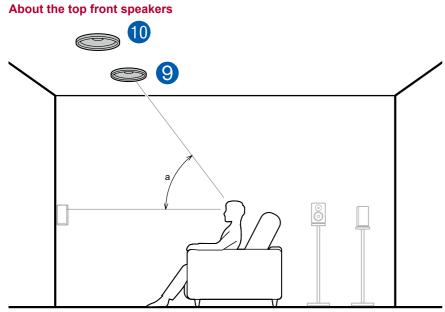


a: 30° to 55°

The top front speakers are installed on the ceiling at front of the listening position, and the width between the left and right speakers is optimal to match the one for the front speakers. When the top front speakers are used in front, the combination of the height speakers at the rear can be selected from the following 4 examples shown at the right.

9,10 Top Front Speakers

(Example 1) Use top rear speakers at the rear

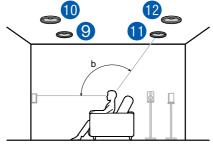

b: 125° to 150°

The top rear speakers are installed on the ceiling at rear of the listening position, and the width between the left and right speakers is optimal to match the one for the front speakers.


11,12 Top Rear Speakers

(Example 2) Use rear high speakers at the rear

The width between the rear high speakers should match the one for the front speakers, and they should be installed minimum of 3'/0.9 m higher than the front speakers, and tilted so they will point toward the listener.

11,12 Rear High Speakers

(Example 3) Use Dolby Enabled Speakers (Surround) at the rear

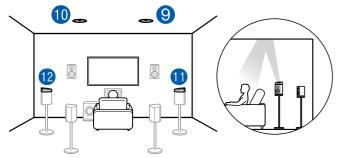


The Dolby enabled speakers are the special speaker that the sound is emitted toward the ceiling, and have the effect the sound to come from above by reflecting the sound on the ceiling.

The Dolby enabled speakers (surround) are installed on top of the surround speakers.

11,12 Dolby Enabled Speakers (Surround)

(Example 4) Use Dolby Enabled Speakers (Surround Back) at the rear

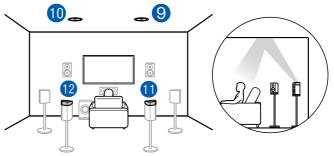


The Dolby enabled speakers are the special speaker that the sound is emitted toward the ceiling, and have the effect the sound to come from above by reflecting the sound on the ceiling.

The Dolby enabled speakers (surround back) are installed on top of the surround back speakers.

11,12 Dolby Enabled Speakers (Surround Back)




About the top middle speakers

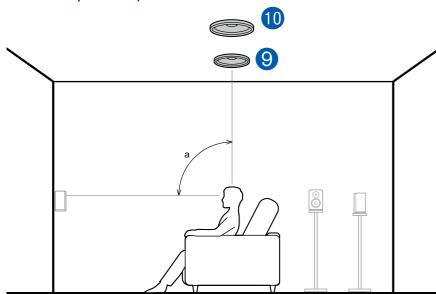

a: 65° to 100°

The top middle speakers are installed on the ceiling immediately above the listening position, and the width between the left and right speakers is optimal to match the one for the front speakers. When the top middle speakers are used in front, the rear high speakers in the figure at the right can be used at the rear.

9,10 Top Middle Speakers

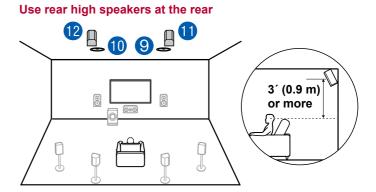


The width between the rear high speakers should match the one for the front speakers, and they should be installed minimum of 3'/0.9 m higher than the front speakers, and tilted so they will point toward the listener.

11,12 Rear High Speakers



About the front high speakers

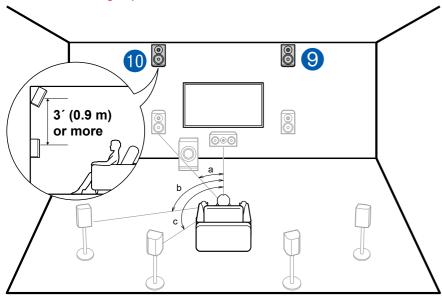


a: 22° to 30°, b: 90° to 110°, c: 135° to 150°

Install the front high speakers immediately above the front speakers minimum of 3'/0.9 m higher, and tilted so they will point toward the listener. When the front high speakers are used in front, the combination of the height speakers at the rear can be selected from the following 5 examples shown at the right.

9,10 Front High Speakers


(Example 1) Use rear high speakers at the rear

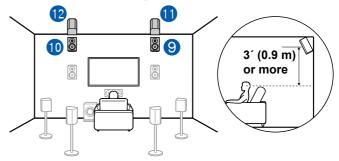

The width between the rear high speakers should match the one for the front speakers, and they should be installed minimum of 3'/0.9 m higher than the front speakers, and tilted so they will point toward the listener.

11,12 Rear High Speakers



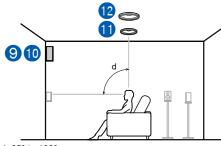


d: 65° to 100°

The top middle speakers are installed on the ceiling immediately above the listening position, and the width between the left and right speakers is optimal to match the one for the front speakers.

11,12 Top Middle Speakers

(Example 3) Use top rear speakers at the rear

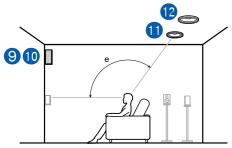


e: 125° to 150°

The top rear speakers are installed on the ceiling at rear of the listening position, and the width between the left and right speakers is optimal to match the one for the front speakers.

11,12 Top Rear Speakers

(Example 4) Use Dolby Enabled Speakers (Surround) at the rear

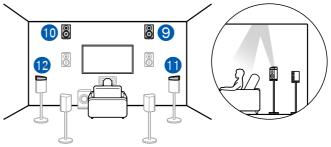


The Dolby enabled speakers are the special speaker that the sound is emitted toward the ceiling, and have the effect the sound to come from above by reflecting the sound on the ceiling.

The Dolby enabled speakers (surround) are installed on top of the surround speakers.

11,12 Dolby Enabled Speakers (Surround)

(Example 5) Use Dolby Enabled Speakers (Surround Back) at the rear

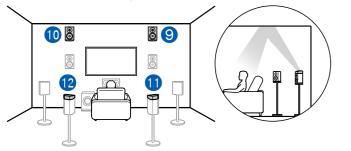


The Dolby enabled speakers are the special speaker that the sound is emitted toward the ceiling, and have the effect the sound to come from above by reflecting the sound on the ceiling.

The Dolby enabled speakers (surround back) are installed on top of the surround back speakers.

11,12 Dolby Enabled Speakers (Surround Back)

Combination example when Dolby Enabled Speakers (Front) are used at the front

About the Dolby enabled speakers (front)

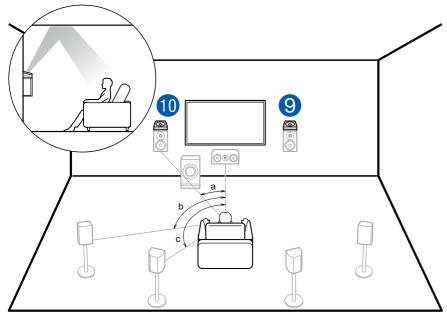


a: 22° to 30°, b: 90° to 110°, c: 135° to 150°

The Dolby enabled speakers are the special speaker that the sound is emitted toward the ceiling, and have the effect the sound to come from above by reflecting the sound on the ceiling.

The Dolby enabled speakers (front) are installed on top of the front speakers. When the Dolby enabled speakers (front) are used in front, the combination of the height speakers at the rear can be selected from the following 4 examples shown at the right.

9,10 Dolby Enabled Speakers (Front)

(Example 1) Use top rear speakers at the rear

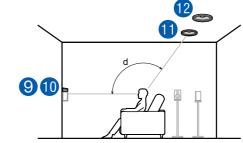


d: 125° to 150°

The top rear speakers are installed on the ceiling at rear of the listening position, and the width between the left and right speakers is optimal to match the one for the front speakers.

11,12 Top Rear Speakers


(Example 2) Use rear high speakers at the rear

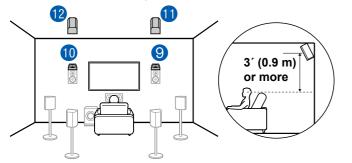

The width between the rear high speakers should match the one for the front speakers, and they should be installed minimum of 3'/0.9 m higher than the front speakers, and tilted so they will point toward the listener.

11,12 Rear High Speakers

(Example 3) Use Dolby Enabled Speakers (Surround) at the rear

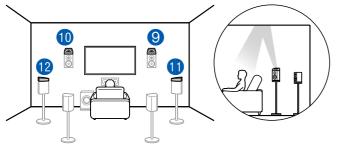


The Dolby enabled speakers are the special speaker that the sound is emitted toward the ceiling, and have the effect the sound to come from above by reflecting the sound on the ceiling.

The Dolby enabled speakers (surround) are installed on top of the surround speakers.

11,12 Dolby Enabled Speakers (Surround)

(Example 4) Use Dolby Enabled Speakers (Surround Back) at the rear

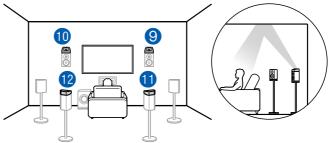

The Dolby enabled speakers are the special speaker that the sound is emitted toward the ceiling, and have the effect the sound to come from above by reflecting the sound on the ceiling.

The Dolby enabled speakers (surround back) are installed on top of the surround back speakers.

11,12 Dolby Enabled Speakers (Surround Back)


Speaker Connections and "Speaker Setup" Settings

Connections

■ (Note) Speaker Impedance


Connect speakers with an impedance of 4 Ω to 16 Ω . If any of the speakers to be connected has an impedance of 4 Ω or more and less than 6 Ω , set "Speaker Impedance" to "40hms" for "Speaker Setup" in the Initial Setup section ($\rightarrow p182$). When setting "Speaker Impedance" from the System Setup menu, press the **b** button on the remote controller to display the Home screen, and select "System Setup" - "Speaker" - "Configuration", then set "Speaker Impedance" ($\rightarrow p151$) to "40hms".

■ Connect the Speaker Cables

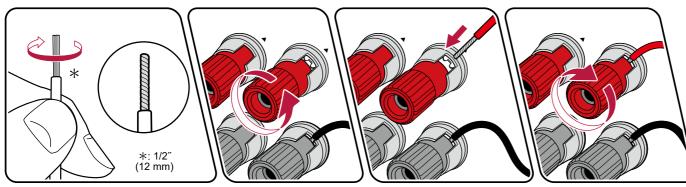

Make correct connection between the unit's jacks and speaker's jacks (+ side to + side, and - side to - side) for each channel. If the connection is wrong, a bass sound will not be reproduced properly due to reverse phase. Twist the wires exposed from the tip of the speaker cable so that the wires do not stick out of the speaker terminal when connecting. If the exposed wires touch the rear panel, or the + side and - side wires touch each other, a malfunction may occur.




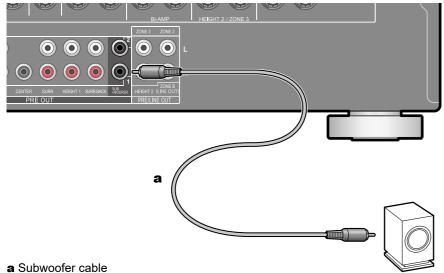

■ Connect the Subwoofer

Connect a powered subwoofer with this unit using a subwoofer cable. Up to two powered subwoofers can be connected. The same signal is output from each SUBWOOFER PRE OUT jack.

5.1 Channel System

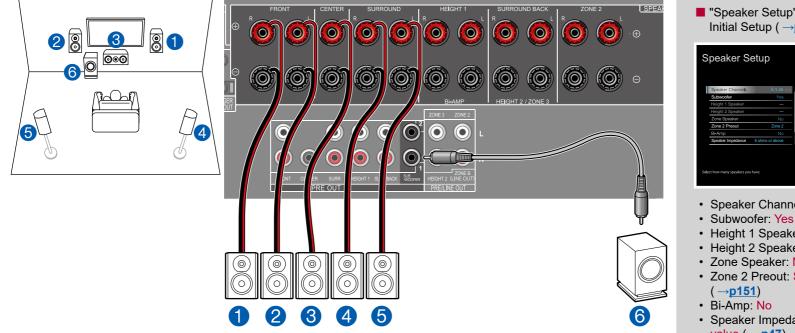


This is a basic 5.1 Channel System. For details of the speaker layout, refer to "Speaker Installation" ($\rightarrow p20$).

"Speaker Setup" settings during Initial Setup ($\rightarrow p183$)



- Speaker Channels: 5.1 ch
- · Height 1 Speaker: ---
- · Height 2 Speaker: ---
- Zone Speaker: No
- Zone 2 Preout: Set any value
- Speaker Impedance: Set any value (\rightarrow p47)

5.1 Channel System + ZONE SPEAKER (North American models)

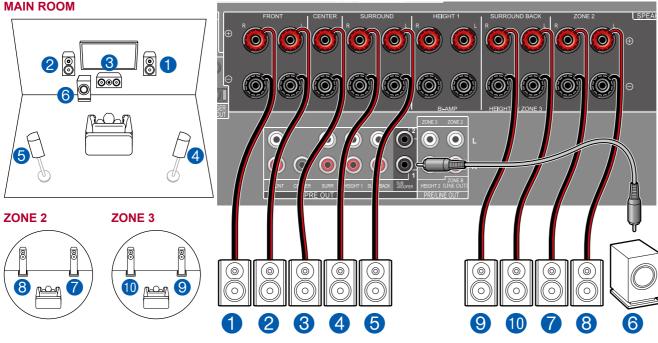

MAIN ROOM: This is a basic 5.1 Channel System. For details of the speaker layout, refer to "Speaker Installation" $(\rightarrow p20)$.

ZONE 2/ZONE 3: You can enjoy 2-ch audio in the separate room (ZONE 2/ZONE 3) while performing 5.1-ch playback in the main room (where this unit is located). The same source can be played back in the main room and ZONE 2/ZONE 3 simultaneously. Also, different sources can be played back in both rooms.

To output audio from an externally connected AV component to ZONE 3, use an analog audio cable for connection. Note that ZONE 3 output is not possible with the connection using a HDMI cable, digital coaxial cable, or digital optical cable.

■ "Speaker Setup" settings during Initial Setup (→<u>p183</u>)




- Speaker Channels: 5.1 ch
- Subwoofer: Yes
- Height 1 Speaker: ---
- Height 2 Speaker: ---
- Zone Speaker: Zone 2 or Zone 2/Zone 3
- Zone 2 Preout: Zone 2
- Bi-Amp: No
- Speaker Impedance: Set any value (→p47)



Setup

To output the video and audio of the HDMI input to ZONE 2, from the Home screen, set "System Setup" - "Input/Output Assign" -"TV Out/OSD" - "Zone 2 HDMI" $(\rightarrow p146)$ to "Use". **5.1** Channel System + ZONE SPEAKER (European, Australian and Asian models)

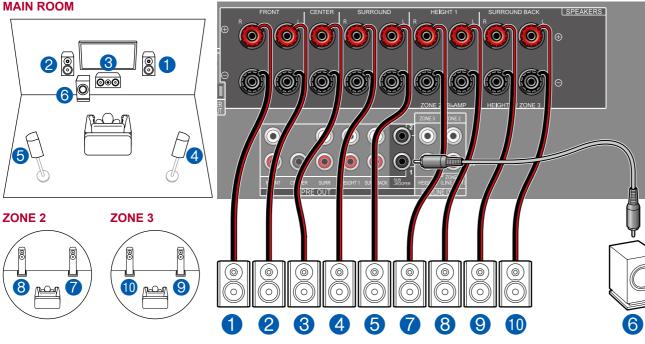

MAIN ROOM: This is a basic 5.1 Channel System. For details of the speaker layout, refer to "Speaker Installation" $(\rightarrow p20)$.

ZONE 2/ZONE 3: You can enjoy 2-ch audio in the separate room (ZONE 2/ZONE 3) while performing 5.1-ch playback in the main room (where this unit is located). The same source can be played back in the main room and ZONE 2/ZONE 3 simultaneously. Also, different sources can be played back in both rooms.

To output audio from an externally connected AV component to ZONE 3, use an analog audio cable for connection. Note that ZONE 3 output is not possible with the connection using a HDMI cable, digital coaxial cable, or digital optical cable.

■ "Speaker Setup" settings during Initial Setup (→<u>p183</u>)




- Speaker Channels: 5.1 ch
- Subwoofer: Yes
- Height 1 Speaker: ---
- · Height 2 Speaker: ---
- Zone Speaker: Zone 2 or Zone 2/Zone 3
- Zone 2 Preout: Zone 2
- Bi-Amp: No
- Speaker Impedance: Set any value (→p47)



Setup

To output the video and audio of the HDMI input to ZONE 2, from the Home screen, set "System Setup" - "Input/Output Assign" -"TV Out/OSD" - "Zone 2 HDMI" $(\rightarrow p146)$ to "Use".

■ 5.1 Channel System (Bi-Amping the Speakers)

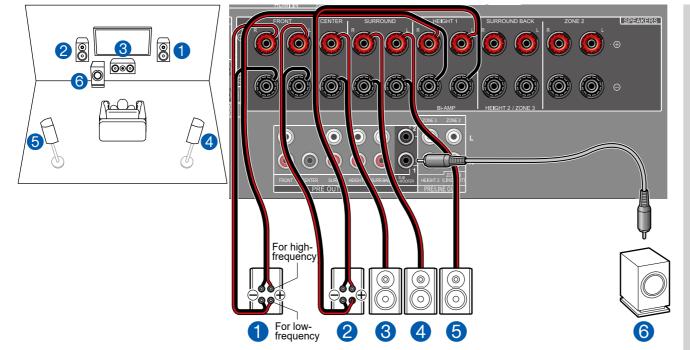


■ "Speaker Setup" settings during Initial Setup (→<u>p183</u>)



- Speaker Channels: 5.1 ch
- Subwoofer: Yes
- Height 1 Speaker: ---
- Height 2 Speaker: ---
- Zone Speaker: No
- Zone 2 Preout: Set any value (→p151)
- Bi-Amp: Yes
- Speaker Impedance: Set any value (→p47)


You can configure a 5.1 Channel System ($\rightarrow p20$) by connecting front speakers that support Bi-Amping connection. The Bi-Amping connection can improve the quality of the low and high pitched ranges. Be sure to remove the jumper bar connecting between the woofer jacks and tweeter jacks of the Bi-Amping supported speakers. Refer to the instruction manual of your speakers as well.

7.1 Channel System

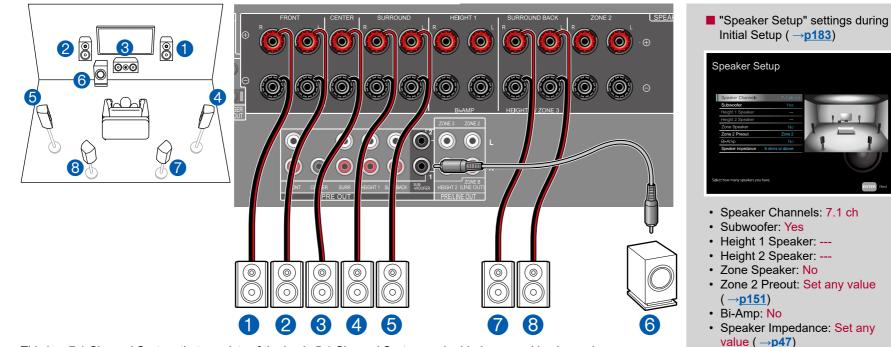

This is a 7.1 Channel System that consists of the basic 5.1 Channel System and added surround back speakers. For details of the speaker layout, refer to "Speaker Installation" ($\rightarrow p21$).

7.1 Channel System + ZONE SPEAKER (North American models)

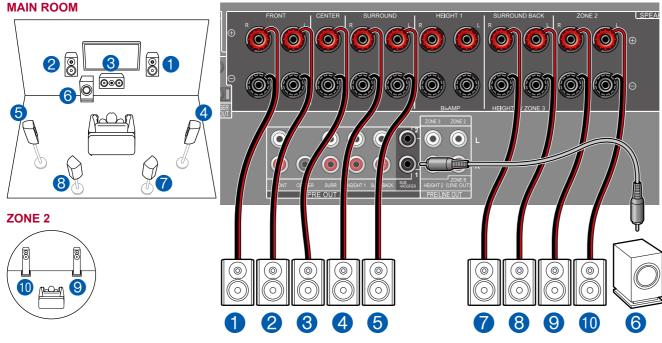

MAIN ROOM: This is a 7.1 Channel System that consists of the basic 5.1 Channel System and added surround back speakers. For details of the speaker layout, refer to "Speaker Installation" ($\rightarrow p21$).

ZONE 2: You can enjoy 2-ch audio in the separate room (ZONE 2) while performing playback in the main room (where this unit is located). The same source can be played back in the main room and ZONE 2 simultaneously. Also, different sources can be played back in both rooms.

■ "Speaker Setup" settings during Initial Setup (→<u>p183</u>)




- Speaker Channels: 7.1 ch
- Subwoofer: Yes
- Height 1 Speaker: ---
- · Height 2 Speaker: ---
- Zone Speaker: Zone 2
- Zone 2 Preout: Zone 2
- Bi-Amp: No
- Speaker Impedance: Set any value (→p47)



Setup

To output the video and audio of the HDMI input to ZONE 2, from the Home screen, set "System Setup" - "Input/Output Assign" -"TV Out/OSD" - "Zone 2 HDMI" $(\rightarrow p146)$ to "Use". **7.1** Channel System + ZONE SPEAKER (European, Australian and Asian models)

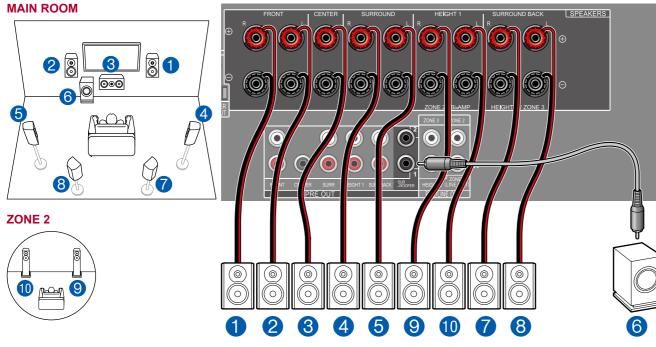

MAIN ROOM: This is a 7.1 Channel System that consists of the basic 5.1 Channel System and added surround back speakers. For details of the speaker layout, refer to "Speaker Installation" ($\rightarrow p21$).

ZONE 2: You can enjoy 2-ch audio in the separate room (ZONE 2) while performing playback in the main room (where this unit is located). The same source can be played back in the main room and ZONE 2 simultaneously. Also, different sources can be played back in both rooms.

■ "Speaker Setup" settings during Initial Setup (→<u>p183</u>)




- Speaker Channels: 7.1 ch
- Subwoofer: Yes
- Height 1 Speaker: ---
- Height 2 Speaker: ---
- Zone Speaker: Zone 2
- Zone 2 Preout: Zone 2
- Bi-Amp: No
- Speaker Impedance: Set any value (→p47)



Setup

To output the video and audio of the HDMI input to ZONE 2, from the Home screen, set "System Setup" - "Input/Output Assign" -"TV Out/OSD" - "Zone 2 HDMI" $(\rightarrow p146)$ to "Use".

■ 7.1 Channel System (Bi-Amping the Speakers)

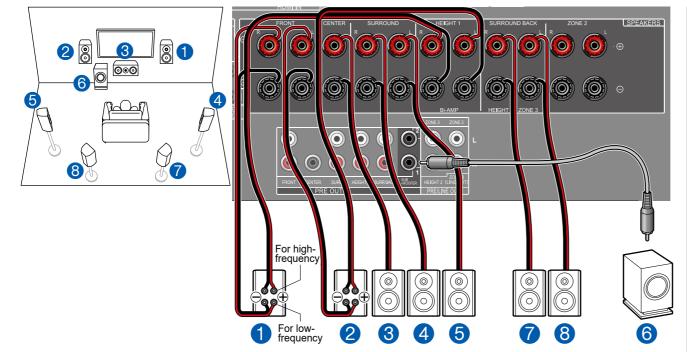


You can configure a 7.1 Channel System ($\rightarrow p21$) by connecting front speakers that support Bi-Amping connection. The Bi-Amping connection can improve the quality of the low and high pitched ranges. Be sure to remove the jumper bar connecting between the woofer jacks and tweeter jacks of the Bi-Amping supported speakers. Refer to the instruction manual of your speakers as well. ■ "Speaker Setup" settings during Initial Setup (→<u>p183</u>)



- Speaker Channels: 7.1 ch
- Subwoofer: Yes
- Height 1 Speaker: ---
- Height 2 Speaker: ---
- Zone Speaker: No
- Zone 2 Preout: Set any value (→p151)
- Bi-Amp: Yes
- Speaker Impedance: Set any value (→p47)

5.1.2 Channel System

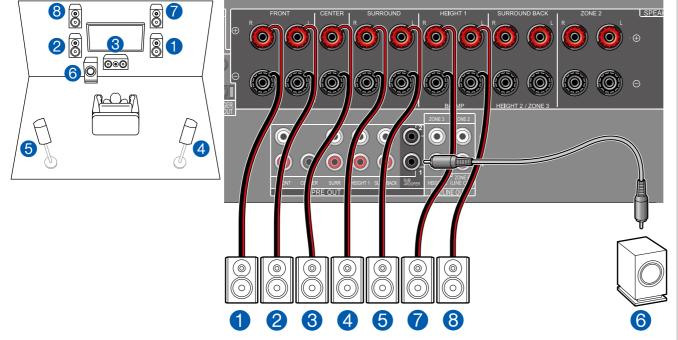

■ "Speaker Setup" settings during Initial Setup (→<u>p183</u>)




- Speaker Channels: 5.1.2 ch
- Subwoofer: Yes
- Height 1 Speaker: Select the type of height speaker actually installed.
- Height 2 Speaker: ---
- Zone Speaker: No
- Zone 2 Preout: Set any value (→p151)
- Bi-Amp: No
- Speaker Impedance: Set any value (→p47)

This is a combination of the 5.1 Channel System and front high speakers. A front high speaker is a type of height speaker. You can select only one set of height speakers from the following three types for connection.

- □ Front High Speakers/Rear High Speakers Installation Example (→p23)
- \Box Ceiling Speakers Installation Example ($\rightarrow p24$)

□ Dolby Enabled Speakers (Dolby Speakers) Installation Example (→p25)

5.1.2 Channel System + ZONE SPEAKER (North American models)

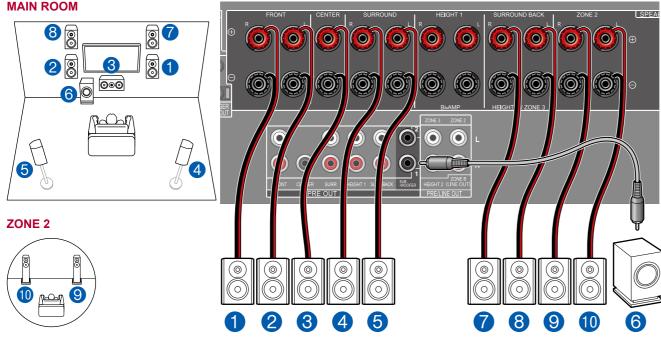

MAIN ROOM: This is a combination of the 5.1 Channel System and front high speakers. A front high speaker is a type of height speaker. You can select only one set of height speakers from the following three types for connection.

□ Front High Speakers/Rear High Speakers Installation Example (→p23)

 \Box Ceiling Speakers Installation Example ($\rightarrow \underline{p24}$)

□ Dolby Enabled Speakers (Dolby Speakers) Installation Example (\rightarrow <u>p25</u>)

ZONE 2: You can enjoy 2-ch audio in the separate room (ZONE 2) while performing playback in the main room (where this unit is located). The same source can be played back in the main room and ZONE 2 simultaneously. Also, different sources can be played back in both rooms.

■ "Speaker Setup" settings during Initial Setup (→<u>p183</u>)




- Speaker Channels: 5.1.2 ch
- Subwoofer: Yes
- Height 1 Speaker: ---
- Height 2 Speaker: Select the type of height speaker actually installed.
- Zone Speaker: Zone 2
- Zone 2 Preout: Zone 2
- Bi-Amp: No
- Speaker Impedance: Set any value (→p47)



Setup

To output the video and audio of the HDMI input to ZONE 2, from the Home screen, set "System Setup" - "Input/Output Assign" -"TV Out/OSD" - "Zone 2 HDMI" $(\rightarrow p146)$ to "Use". **5.1.2** Channel System + ZONE SPEAKER (European, Australian and Asian models)

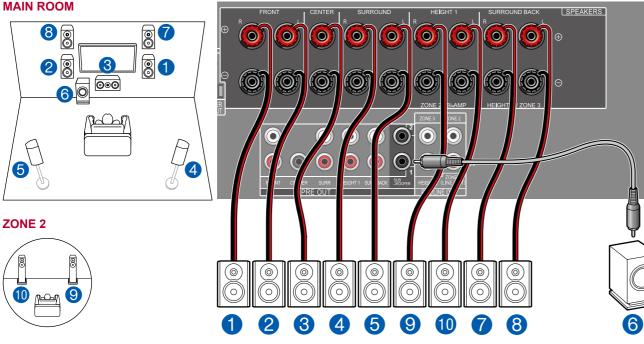

■ "Speaker Setup" settings during Initial Setup (→<u>p183</u>)



- Speaker Channels: 5.1.2 ch
- Subwoofer: Yes
- Height 1 Speaker: ---
- Height 2 Speaker: Select the type of height speaker actually installed.
- Zone Speaker: Zone 2
- Zone 2 Preout: Zone 2
- Bi-Amp: No
- Speaker Impedance: Set any value (→p47)



Setup

To output the video and audio of the HDMI input to ZONE 2, from the Home screen, set "System Setup" - "Input/Output Assign" -"TV Out/OSD" - "Zone 2 HDMI" $(\rightarrow p146)$ to "Use".

MAIN ROOM: This is a combination of the 5.1 Channel System and front high speakers. A front high speaker is a type of height speaker. You can select only one set of height speakers from the following three types for connection.


□ Front High Speakers/Rear High Speakers Installation Example (→p23)

 \Box Ceiling Speakers Installation Example ($\rightarrow p24$)

□ Dolby Enabled Speakers (Dolby Speakers) Installation Example (\rightarrow <u>p25</u>)

ZONE 2: You can enjoy 2-ch audio in the separate room (ZONE 2) while performing playback in the main room (where this unit is located). The same source can be played back in the main room and ZONE 2 simultaneously. Also, different sources can be played back in both rooms.

■ 5.1.2 Channel System (Bi-Amping the Speakers)

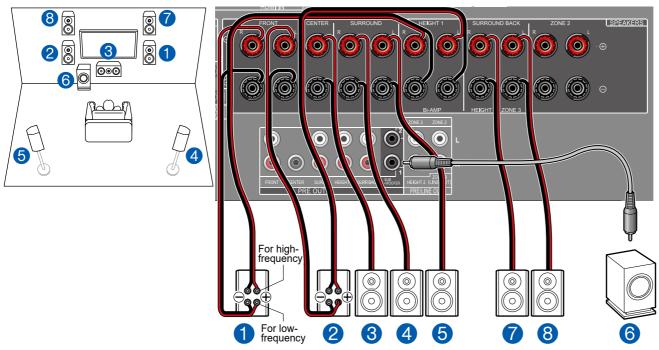

■ "Speaker Setup" settings during Initial Setup (→<u>p183</u>)



- Speaker Channels: 5.1.2 ch
- Subwoofer: Yes
- Height 1 Speaker: ---
- Height 2 Speaker: Select the type of height speaker actually installed.
- Zone Speaker: No
- Zone 2 Preout: Set any value (→p151)
- Bi-Amp: Yes
- Speaker Impedance: Set any value (→p47)

This is a combination of the 5.1 Channel System and front high speakers. A front high speaker is a type of height speaker. You can select only one set of height speakers from the following three types for connection.


□ Front High Speakers/Rear High Speakers Installation Example (\rightarrow <u>p23</u>)

 \Box Ceiling Speakers Installation Example ($\rightarrow \underline{p24}$)

□ Dolby Enabled Speakers (Dolby Speakers) Installation Example (→p25)

You can configure a 5.1.2 Channel System by connecting front speakers that support Bi-Amping connection. The Bi-Amping connection can improve the quality of the low and high pitched ranges. Be sure to remove the jumper bar connecting between the woofer jacks and tweeter jacks of the Bi-Amping supported speakers. Refer to the instruction manual of your speakers as well.

7.1.2 Channel System

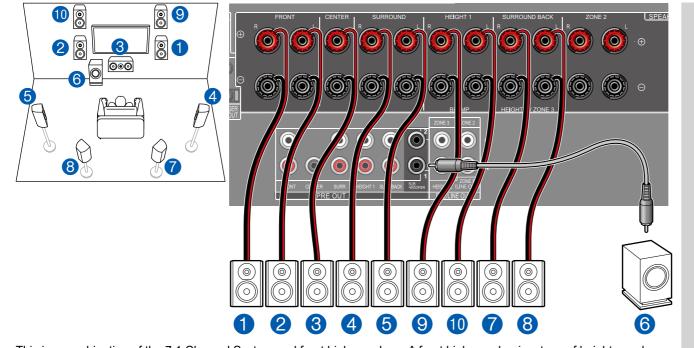

This is a combination of the 7.1 Channel System and front high speakers. A front high speaker is a type of height speaker. You can select only one set of height speakers from the following three types for connection.

□ Front High Speakers/Rear High Speakers Installation Example (\rightarrow <u>p27</u>)

□ Ceiling Speakers Installation Example (→ p28)


□ Dolby Enabled Speakers (Dolby Speakers) Installation Example (→p29)

■ "Speaker Setup" settings during Initial Setup (→<u>p183</u>)



- Speaker Channels: 7.1.2 ch
- Subwoofer: Yes
- Height 1 Speaker: Select the type of height speaker actually installed.
- · Height 2 Speaker: ---
- Zone Speaker: No
- Zone 2 Preout: Set any value (→p151)
- Bi-Amp: No
- Speaker Impedance: Set any value (→p47)

7.1.2 Channel System + ZONE SPEAKER (For North American models only)

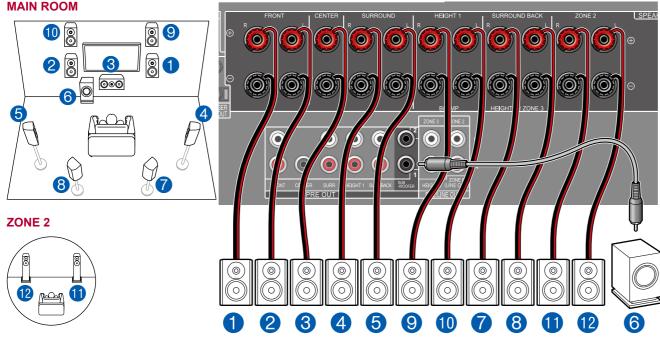

MAIN ROOM: This is a combination of the 7.1 Channel System and front high speakers. A front high speaker is a type of height speaker. You can select only one set of height speakers from the following three types for connection.

□ Front High Speakers/Rear High Speakers Installation Example (→p27)

□ Ceiling Speakers Installation Example (→p28)

□ Dolby Enabled Speakers (Dolby Speakers) Installation Example (→p29)

ZONE 2: You can enjoy 2-ch audio in the separate room (ZONE 2) while performing playback in the main room (where this unit is located). The same source can be played back in the main room and ZONE 2 simultaneously. Also, different sources can be played back in both rooms.

• While ZONE 2 playback is being performed, Height 1 speakers installed in the main room cannot play audio.

■ "Speaker Setup" settings during Initial Setup (→<u>p183</u>)




- Speaker Channels: 7.1.2 ch
- Subwoofer: Yes
- Height 1 Speaker: Select the type of height speaker actually installed.
- · Height 2 Speaker: ---
- Zone Speaker: Zone 2
- Zone 2 Preout: Zone 2
- Bi-Amp: No
- Speaker Impedance: Set any value (→p47)



Setup

To output the video and audio of the HDMI input to ZONE 2, from the Home screen, set "System Setup" - "Input/Output Assign" -"TV Out/OSD" - "Zone 2 HDMI" $(\rightarrow p146)$ to "Use".

5.1.4 Channel System

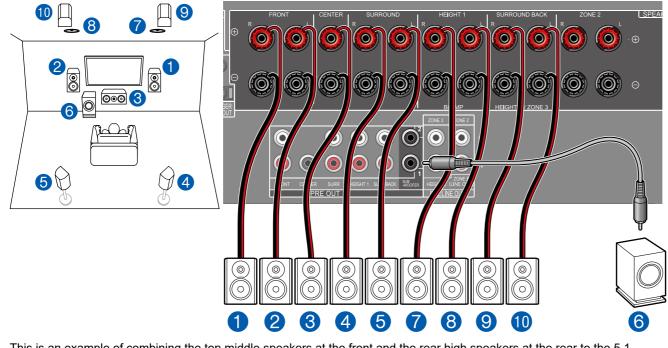

■ "Speaker Setup" settings during Initial Setup (→<u>p183</u>)




- Speaker Channels: 5.1.4 ch
- Subwoofer: Yes
- Height 1 Speaker: Select the type of height speaker actually installed.
- Height 2 Speaker: Select the type of height speaker actually installed.
- Zone Speaker: No
- Zone 2 Preout: Set any value (→p151)
- Bi-Amp: No
- Speaker Impedance: Set any value (→p47)

This is an example of combining the top middle speakers at the front and the rear high speakers at the rear to the 5.1 Channel System. The height speakers in front can be selected from following 4 types. The height speakers that can be combined at the rear differ depending on the height speakers used at the front.

- \Box Combination example when Top Front Speakers are used at the front (\rightarrow **p31**)
- \Box Combination example when Top Middle Speakers are used at the front (\rightarrow **p33**)
- \Box Combination example when Front High Speakers are used at the front ($\rightarrow p34$)
- □ Combination example when Dolby Enabled Speakers (Front) are used at the front (→p36)

5.1.4 Channel System + ZONE SPEAKER (For North American models only)

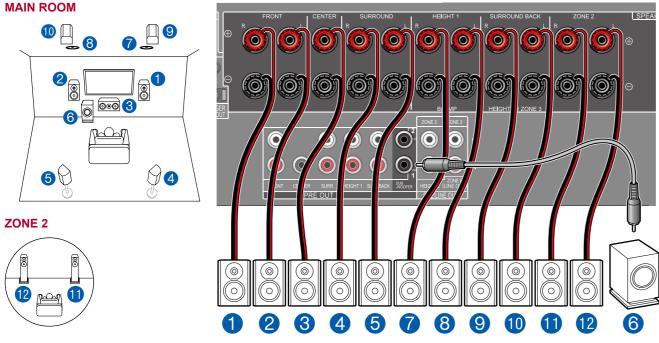

■ "Speaker Setup" settings during Initial Setup (→<u>p183</u>)



- Speaker Channels: 5.1.4 ch
- Subwoofer: Yes
- Height 1 Speaker: Select the type of height speaker actually installed.
- Height 2 Speaker: Select the type of height speaker actually installed.
- Zone Speaker: Zone 2
- Zone 2 Preout: Zone 2
- Bi-Amp: No
- Speaker Impedance: Set any value (→p47)



Setup


To output the video and audio of the HDMI input to ZONE 2, from the Home screen, set "System Setup" - "Input/Output Assign" -"TV Out/OSD" - "Zone 2 HDMI" $(\rightarrow p146)$ to "Use".

MAIN ROOM: This is an example of combining the top middle speakers at the front and the rear high speakers at the rear to the 5.1 Channel System. The height speakers in front can be selected from following 4 types. The height speakers that can be combined at the rear differ depending on the height speakers used at the front.

- \Box Combination example when Top Front Speakers are used at the front (\rightarrow **p31**)
- \Box Combination example when Top Middle Speakers are used at the front (\rightarrow <u>p33</u>)
- \Box Combination example when Front High Speakers are used at the front (\rightarrow <u>p34</u>)
- \Box Combination example when Dolby Enabled Speakers (Front) are used at the front (\rightarrow <u>p36</u>)

ZONE 2: You can enjoy 2-ch audio in the separate room (ZONE 2) while performing playback in the main room (where this unit is located). The same source can be played back in the main room and ZONE 2 simultaneously. Also, different sources can be played back in both rooms.

• While ZONE 2 playback is being performed, Height 1 speakers installed in the main room cannot play audio.

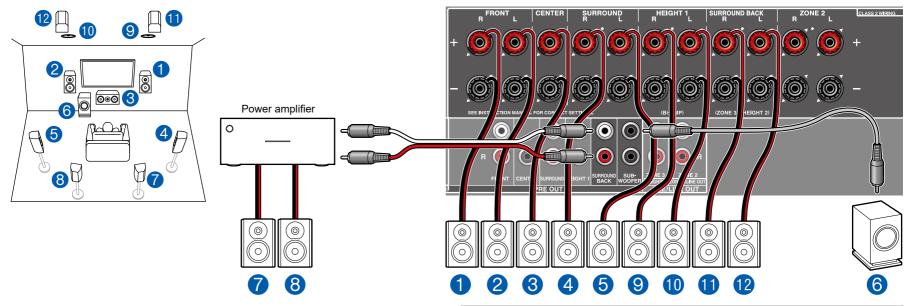

7.1.4 Channel System

This is an example of combining the top middle speakers at the front and the rear high speakers at the rear to the 7.1 Channel System. The height speakers in front can be selected from following 4 types. The height speakers that can be combined at the rear differ depending on the height speakers used at the front. □ Combination example when Top Front Speakers are used at the front


(→<u>p39</u>)

- □ Combination example when Top Middle Speakers are used at the front (→<u>p41</u>)
- □ Combination example when Front High Speakers are used at the front $(\rightarrow \underline{p42})$
- □ Combination example when Dolby Enabled Speakers (Front) are used at the front (→<u>p45</u>)

■ "Speaker Setup" settings during Initial Setup (→p183)

- Speaker Channels: 7.1.4 ch
- Subwoofer: Yes
- Height 1 Speaker: Select the type of height speaker actually installed.
- Height 2 Speaker: Select the type of height speaker actually installed.
- Zone Speaker: No
- Zone 2 Preout: Set any value (→p151)
- Bi-Amp: No
- Speaker Impedance: Set any value (→p47)

7.1.4 Channel System + ZONE SPEAKER (For North American models only)

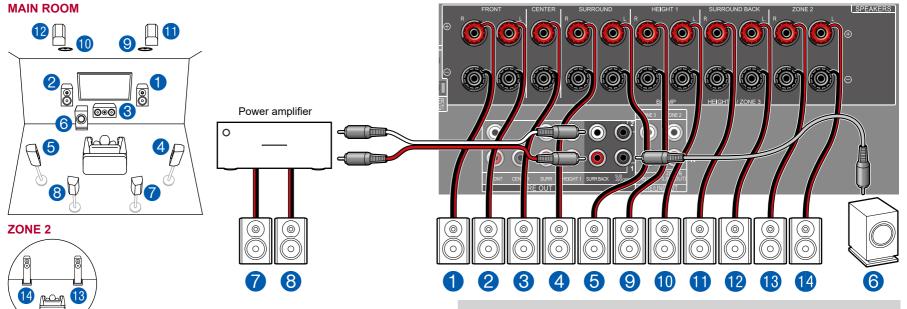

MAIN ROOM: This is an example of combining the top middle speakers at the front and the rear high speakers at the rear to the 7.1 Channel System. The height speakers in front can be selected from following 4 types. The height speakers that can be combined at the rear differ depending on the height speakers used at the front. Combination example when Top Front Speakers are used at the front (\rightarrow p39) Combination example when Top Middle Speakers are used at the front (\rightarrow p41) Combination example when Front High Speakers are used at the front (\rightarrow p42) Combination example when Dolby Enabled Speakers (Front) are used at the front (\rightarrow p45) **ZONE 2:** You can enjoy 2-ch audio in the separate room (ZONE 2) while performing playback in the main room (where this unit is located). The same source can be played back in the main rooms.

• While ZONE 2 playback is being performed, Height 1 speakers installed in the main room cannot play audio.

■ "Speaker Setup" settings during Initial Setup (→p183)




- Speaker Channels: 7.1.4 ch
- Subwoofer: Yes
- Height 1 Speaker: Select the type of height speaker actually installed.
- Height 2 Speaker: Select the type of height speaker actually installed.
- Zone Speaker: Zone 2
- Zone 2 Preout: Zone 2
- Bi-Amp: No
- Speaker Impedance: Set any value (→p47)

To output the video and audio of the HDMI input to ZONE 2, from the Home screen, set "System Setup" - "Input/Output Assign" - "TV Out/OSD" - "Zone 2 HDMI" (\rightarrow **p146**) to "Use".

Setup

Connecting a Power Amplifier

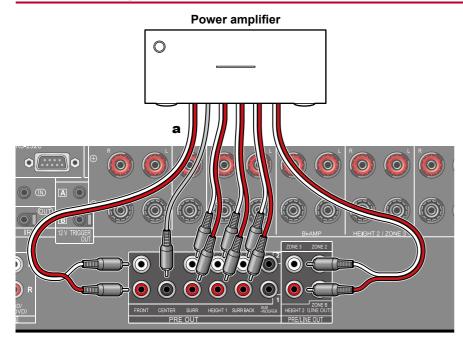

You can connect a power amplifier to the unit and use the unit as a pre-amplifier in order to produce a large volume that cannot be output with the unit only. Connect the speakers to the power amplifier. For details, refer to the power amplifier's instruction manual.

• Connect as shown on the left using the PRE OUT jacks.



Setup

• Set "System Setup" - "Speaker" - "Configuration" - "Speaker Channels" in accordance to the number of channels for the connected speakers.

Speaker combinations

• Up to two powered subwoofers can be connected in either combination.

(North American models)

Speaker Channels	FRONT	CENTER	SURROUND	SURROUND BACK	HEIGHT 1	HEIGHT 2	Bi-AMP (*3)	ZONE 2 (*3) (ZONE SPEAKER)	ZONE 3 (*3) (ZONE SPEAKER)
2.1 ch	v						✓	v	✓
3.1 ch	~	✓					✓	✓	✓
4.1 ch	 ✓ 		~				✓	v	v
5.1 ch	~	✓	~				✓	✓	✓
6.1 ch (*1)	 ✓ 		~	v			✓	v	
7.1 ch (*1)	~	✓	~	~			✓	✓	
2.1.2 ch (*2)	v				✓ (*4) (*5)		✓ (*5)	✓ (*4)	✓ (*4)
3.1.2 ch (*2)	~	v			✓ (*4) (*5)		✓ (*5)	✓ (*4)	✓ (*4)
4.1.2 ch (*2)	~		~		✓ (*4) (*5)		v (*5)	✓ (*4)	✓ (*4)
5.1.2 ch (*2)	~	✓	~		✓ (*4) (*5)		✓ (*5)	✓ (*4)	✓ (*4)
6.1.2 ch (*1)	~		~	~	✓ (*6)			✓ (*6)	
7.1.2 ch (*1)	~	✓	~	~	✓ (*6)			✓ (*6)	
4.1.4 ch (*1)	~		~		✓ (*6)	v		✓ (*6)	
5.1.4 ch (*1)	~	v	~		✓ (*6)	v		✓ (*6)	
6.1.4 ch (*1)	~		~	✓ (*7)	✓ (*6)	 ✓ 		✓ (*6)	
7.1.4 ch (*1)	~	v	~	✓ (*7)	✓ (*6)	~		✓ (*6)	

(*1) The "Connecting a Pre-main Amplifier (ZONE 3)" (→p80) function cannot be used.

(*2) When using Bi-AMP or ZONE 2 (ZONE SPEAKER), the "Connecting a Pre-main Amplifier (ZONE 3)" (→p80) function cannot be used. However, if a power amplifier is connected to the ZONE 3 PRE/LINE OUT jacks in the "Connecting a Pre-main Amplifier (ZONE 3)" (→p80) function, ZONE 2 (ZONE SPEAKER) and ZONE 3 (ZONE SPEAKER) can be used.

(*3) The Bi-AMP and ZONE speakers cannot be used simultaneously.

(*4) When using the ZONE 2 speakers (except when the ZONE 3 is used), it is necessary to connect the height speakers to the SURROUND BACK terminal. When using both the ZONE 2 speakers and the ZONE 3 speakers, the Height 1 speakers cannot be used simultaneously with the ZONE speakers.

(*5) When using the Bi-AMP speakers, it is necessary to connect the Bi-AMP speakers to the HEIGHT 1 terminals, and the height speaker to the SURROUND BACK terminals.

(*6) Height 1 speakers cannot be used simultaneously with the ZONE speakers.

(*7) Use an analog audio cable to connect the power amplifier to the PRE OUT SURROUND BACK jacks, then connect the surround back speakers to the power amplifier.

About the HEIGHT 1/HEIGHT 2

When connecting 2 sets of the height speakers, the combination of the height speakers that can be selected is as follows.

- Height 1 Speaker: Top Middle, Height 2 Speaker: Rear High
- Height 1 Speaker: Front High; Height 2 Speaker: One of Rear High/Top Middle/Top Rear/Dolby Enabled Speaker (Surround)/Dolby Enabled Speaker (Surround Back)
- Height 1 Speaker: Top Front or Dolby Enabled Speaker (Front), Height 2 Speaker: One of Rear High/Top Rear/Dolby Enabled Speaker (Surround)/Dolby Enabled Speaker (Surround Back)

When only 1 set of the height speakers is connected, 1 from the height speakers types can be selected.

(European, Australian and Asian models)

Speaker Channels	FRONT	CENTER	SURROUND	SURROUND BACK	HEIGHT 1	HEIGHT 2	Bi-AMP (*3)	ZONE 2 (*3) (ZONE SPEAKER)	ZONE 3 (*3) (ZONE SPEAKER)
2.1 ch	~						~	v	v
3.1 ch	~	✓					✓	v	v
4.1 ch	v		~				✓	v	v
5.1 ch	~	✓	~				✓	v	v
6.1 ch (*1)	~		v	v			✓	v	
7.1 ch (*1)	~	~	~	~			~	✓	
2.1.2 ch (*2)	~				✓ (*4) (*5)		✓ (*5)	✓ (*4)	
3.1.2 ch (*2)	~	v			✓ (*4) (*5)		✓ (*5)	✓ (*4)	
4.1.2 ch (*2)	~		~		🖌 (*4) (*5)		✓ (*5)	✓ (*4)	
5.1.2 ch (*2)	~	v	~		✓ (*4) (*5)		✓ (*5)	✓ (*4)	
6.1.2 ch (*1)	~		~	~	~				
7.1.2 ch (*1)	~	v	~	~	~				
4.1.4 ch (*1)	~		~		~	 ✓ 			
5.1.4 ch (*1)	~	v	~		~	~			
6.1.4 ch (*1)	~		~	v (*6)	~	~			
7.1.4 ch (*1)	\checkmark	~	\checkmark	✓ (*6)	~	\checkmark			

(*1) The "Connecting a Pre-main Amplifier (ZONE 3)" (→p80) function cannot be used.

(*2) When using Bi-AMP or ZONE 2 (ZONE SPEAKER), the "Connecting a Pre-main Amplifier (ZONE 3)" (→p80) function cannot be used.

(*3) The Bi-AMP and ZONE speakers cannot be used simultaneously.

(*4) When using the ZONE 2 speakers, it is necessary to connect the height speakers to the SURROUND BACK terminal.

(*5) When using the Bi-AMP speakers, it is necessary to connect the Bi-AMP speakers to the HEIGHT 1 terminals, and the height speaker to the SURROUND BACK terminals.

(*6) Use an analog audio cable to connect the power amplifier to the PRE OUT SURROUND BACK jacks, then connect the surround back speakers to the power amplifier.

About the HEIGHT 1/HEIGHT 2

When connecting 2 sets of the height speakers, the combination of the height speakers that can be selected is as follows.


- Height 1 Speaker: Top Middle, Height 2 Speaker: Rear High
- Height 1 Speaker: Front High; Height 2 Speaker: One of Rear High/Top Middle/Top Rear/Dolby Enabled Speaker (Surround)/Dolby Enabled Speaker (Surround Back)
- Height 1 Speaker: Top Front or Dolby Enabled Speaker (Front), Height 2 Speaker: One of Rear High/Top Rear/Dolby Enabled Speaker (Surround)/Dolby Enabled Speaker (Surround Back)

When only 1 set of the height speakers is connected, 1 from the height speakers types can be selected.


Connecting the TV

Connect this unit between a TV and AV component. Connecting this unit with the TV can output the video and audio signals of the AV component to the TV, or play the audio of the TV on this unit. Connection with the TV differs depending on whether the TV supports the ARC (Audio Return Channel) function or eARC (Enhanced Audio Return Channel) function. The ARC function and eARC function transmit the audio signals of the TV via an HDMI cable, and plays the audio of the TV on this unit. To check if the TV supports the ARC function and eARC function, refer to the instruction manual of the TV, etc.

 The eARC function is a newly added function for HDMI 2.1. This is an expanded function from the existing ARC function, and is able to send audio formats such as Dolby TrueHD and DTS-HD Master Audio that cannot be sent with the ARC function, from an eARC-compatible TV to this unit. (→p198)

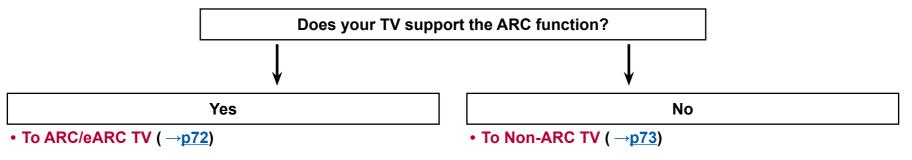

To ARC/eARC TV

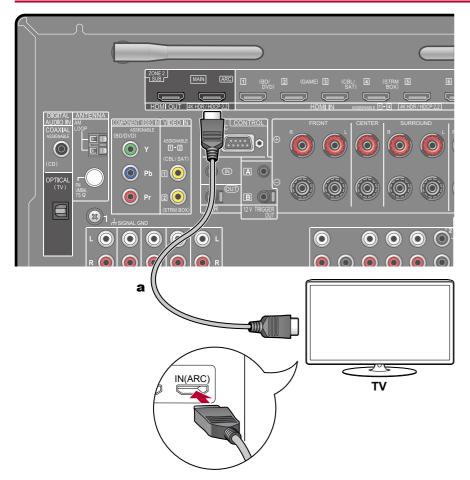

a HDMI cable

If the TV supports the ARC (Audio Return Channel) function (*), use only the HDMI cable to connect with the TV. Use the ARC-compatible HDMI IN jack of the TV for connection. You connect the HDMI cable to the port labeled OUT on the receiver side.

- Another TV or projector can be connected to the HDMI OUT SUB jack. Switch between MAIN and SUB using the HDMI MAIN/SUB button (→p16) on the remote controller or "AV Adjust" (→p179). Note that this jack is not ARCcompatible.
- If devices with different resolutions are connected to HDMI OUT MAIN jack and SUB jack, images are output with the lower resolution.
- If a 4K high-quality video is played, use a Premium High Speed HDMI Cable or Premium High Speed HDMI Cable with Ethernet whose package has a "PREMIUM Certified Cable" label.




Setup

- Settings are required to use the ARC function. Select "Yes" for "4. ARC Setup" in Initial Setup (→p182). If "No, Skip" is selected, settings are required in the System Setup menu after Initial Setup is completed. Press the the button on the remote controller to display the Home screen, then set "System Setup" "Hardware" "HDMI" "Audio Return Channel (eARC supported)" to "On". (→p160)
- For detailed settings for TV connection, CEC function and audio output, refer to the instruction manual of the TV.

(*) ARC function: This function transmits the audio signals of the TV via an HDMI cable, and plays the audio of the TV on this unit. Connection to an ARC-compatible TV is complete with one HDMI cable. To check if the TV supports the ARC function, refer to the instruction manual of the TV, etc.

To Non-ARC TV

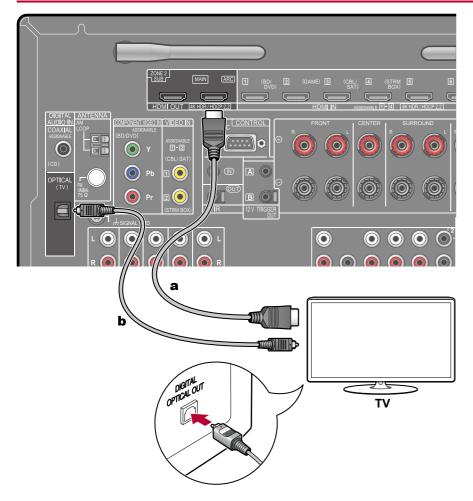

If the TV does not support the ARC (Audio Return Channel) function (*), connect an HDMI cable and digital optical cable.


- If you use a cable set-top box, etc. connected to the input jack of this unit to watch TV (without using a TV's built-in tuner), connection with a digital optical cable or analog audio cable is not required.
- Another TV or projector can be connected to the HDMI OUT SUB jack. Switch between MAIN and SUB using the HDMI MAIN/SUB button (→p16) on the remote controller or "AV Adjust" (→p179). Note that this jack is not ARCcompatible.
- If devices with different resolutions are connected to HDMI OUT MAIN jack and SUB jack, images are output with the lower resolution.
- If a 4K high-quality video is played, use a Premium High Speed HDMI Cable or Premium High Speed HDMI Cable with Ethernet whose package has a "PREMIUM Certified Cable" label.

(*) ARC function: This function transmits the audio signals of the TV via an HDMI cable, and plays the audio of the TV on this unit. Connection to an ARC-compatible TV is complete with one HDMI cable. To check if the TV supports the ARC function, refer to the instruction manual of the TV, etc.

a HDMI cable, **b** Digital optical cable

Connecting Playback Devices

Connecting an AV Component with HDMI Jack Mounted

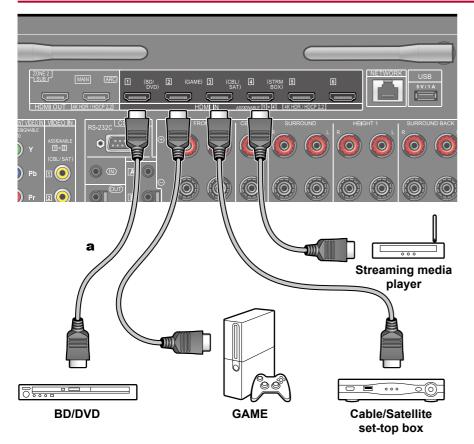

This is a connection example of an AV component equipped with an HDMI jack. When connecting with an AV component that conforms to the CEC (Consumer Electronics Control) standard, you can use the HDMI CEC function (*) that enables linking with input selectors, etc. and the HDMI Standby Through function that can transmit video and audio signals of the AV component to the TV even if this unit is in standby mode.

 If a 4K high-quality video is played, use a Premium High Speed HDMI Cable or Premium High Speed HDMI Cable with Ethernet whose package has a "PREMIUM Certified Cable" label.




Setup

- The HDMI CEC function and HDMI Standby Through function are automatically enabled if you select "Yes" for "4. ARC Setup" in Initial Setup (→p182). If "No, Skip" is selected, settings are required in the System Setup menu after Initial Setup is completed. Settings are made in "System Setup" "Hardware" "HDMI" in Home displayed by pressing on the remote controller. (→p159)
- To enjoy digital surround sound including Dolby Digital, set the audio output of the connected Blu-ray Disc player etc. to the Bitstream output.

(*)The HDMI CEC function: This function enables various linking operations with CEC-compliant devices, such as switching input selectors interlocking with a CEC-compliant player, switching audio output between TV and this unit or adjusting the volume using the remote controller of a CEC-compliant TV, and automatically switching this unit to standby when the TV is turned off.

Connecting an AV Component without HDMI Jack Mounted

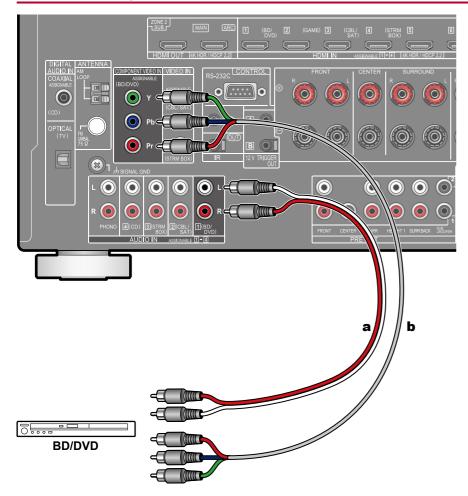

This is a connection example of an AV component unequipped with an HDMI jack. Select cables that match the jacks of the AV component for connection. For example, when video input is connected to the BD/DVD jack, connect the audio input to BD/DVD jack, too. Thus, video input jacks and audio input jacks should have the same name for connection. Note that video signals input to the VIDEO IN jack or the COMPONENT VIDEO IN jack are converted to HDMI video signals, and then output from the HDMI OUT jack.

- To enjoy digital surround playback in formats such as Dolby Digital, you need to make a connection for audio signals with a digital coaxial cable or a digital optical cable.
- According to the illustration, changing the input assignment (→p147) enables connection to jacks other than the BD/DVD jack.




Setup

- The COMPONENT VIDEO IN jacks are compatible only with 480i or 576i resolution. When connecting to the COMPONENT VIDEO IN jacks, set the output resolution of the player to 480i or 576i. If there is no option such as 480i, select interlace. If your player does not support 480i or 576i output, use the VIDEO IN jack.
- To enjoy digital surround sound including Dolby Digital, set the audio output of the connected Blu-ray Disc player etc. to the Bitstream output.

a Analog audio cable, b Component video cable

Connecting an Audio Component

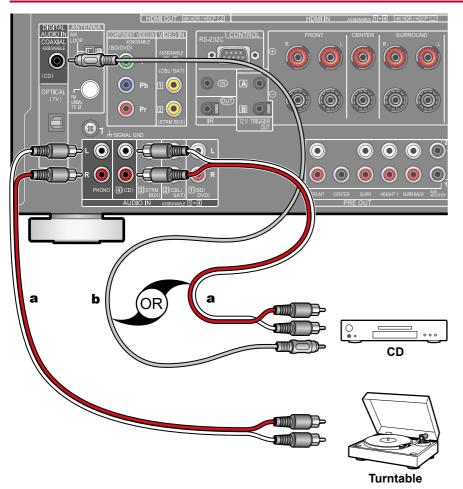

This is a connection example of an audio component. Connect a CD player using a digital coaxial cable or analog audio cable. You can also connect a turntable that has an MM-type cartridge to the PHONO jack.


 If the turntable has a built-in phono equalizer, connect it to any of the AUDIO IN jacks other than the PHONO jack. Further, if the turntable uses an MC type cartridge, install a phono equalizer compatible with the MC type cartridge between the unit and the turntable, and then connect it to any of the AUDIO IN jacks other than the PHONO jack.



If the turntable has a ground wire, connect it to the GND terminal of this unit.

a Analog audio cable , b Digital coaxial cable

Connecting a Video Camera, etc.

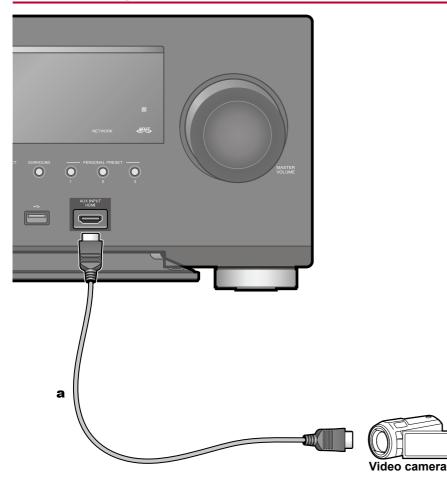


Connect a video camera, etc. to the AUX INPUT HDMI jack on the front panel using an HDMI cable.

a HDMI cable

Connecting an AV Component in a Separate Room (Multi-zone Connection)

Connecting a TV (ZONE 2)

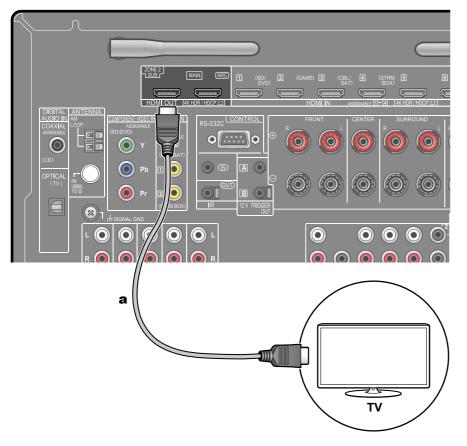

While a disc is played on a Blu-ray Disc player in the main room (where this unit is located), you can play the video and audio of the same Blu-ray Disc player or another AV component on the TV equipped with an HDMI IN jack in a separate room (ZONE 2). The TV in the separate room can play only the video of devices connected to the HDMI IN1 to IN3 jacks of this unit.


• The audio from externally connected AV components can be output only when the signal is 2ch PCM audio. It may also be necessary to convert the audio output of the AV component to PCM output.



Setup

 When video and audio via HDMI input are output to ZONE 2, set "Input/Output Assign" - "TV Out / OSD" - "Zone 2 HDMI" (→p146) to "Use" on the System Setup menu.

Connecting a Pre-main Amplifier (ZONE 2)

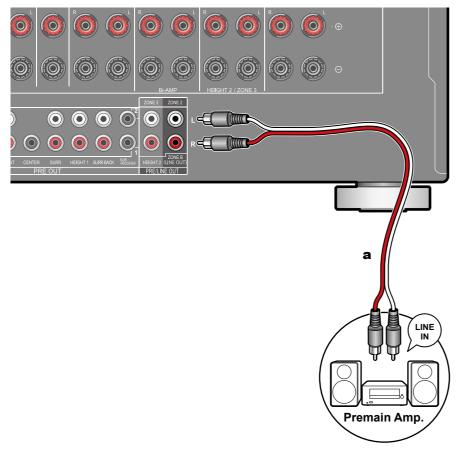

You can enjoy 2-ch audio in the separate room (ZONE 2) while performing playback in the main room (where this unit is located). Connect the ZONE 2 PRE/ LINE OUT jacks of the unit and the LINE IN jacks of the pre-main amplifier or power amplifier in a separate room with an analog audio cable. The same source can be played back in the main room and ZONE 2 simultaneously. Also, different sources can be played back in both rooms.


To output audio from an externally connected AV component to ZONE
 2, connect it to any of HDMI IN1 to IN3 jacks. If the AV component is not equipped with an HDMI jack, use a digital coaxial cable, digital optical cable or analog audio cable. Also, the audio from externally connected AV components can be output to ZONE 2 only when the audio is analog or 2ch PCM signal. When the AV component is connected to this unit with a digital coaxial cable or digital optical cable, change the audio output of the AV component to the PCM output.



Setup

- When connecting the power amplifier, set "Multi Zone" "Zone 2" "Output Level" (→p166) to "Variable" on the System Setup menu. If it is not set, a large volume is output and the power amplifie, speakers, etc. may be damaged.

Connecting a Pre-main Amplifier (ZONE 3)

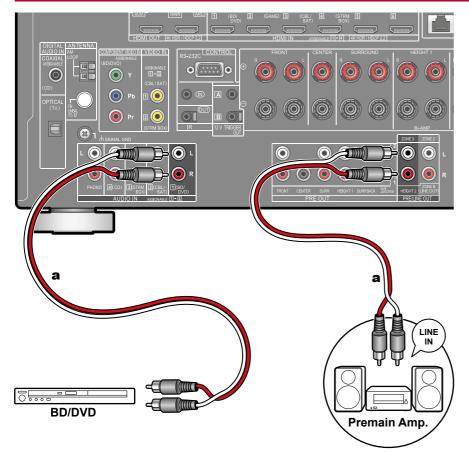

You can enjoy 2-ch audio in the separate room (ZONE 3) while performing playback in the main room (where this unit is located). Use an analog cable to connect the ZONE 3 PRE/LINE OUT jack of this unit and the LINE IN jack of the pre-main amplifier or power amplifier in the separate room. The same source can be played back in the main room and ZONE 3 simultaneously. Also, different sources can be played back in both rooms.

 To output audio from an externally connected AV component to ZONE 3, use an analog audio cable for connection. Note that ZONE 3 output is not possible with the connection using a HDMI cable, digital coaxial cable, or digital optical cable.



Setup

 This function can be used when any of the combinations among 2.1 ch, 3.1 ch, 4.1 ch, 5.1 ch, 2.1.2 ch*, 3.1.2 ch*, 4.1.2 ch* and 5.1.2 ch* in "Speaker combinations"(→p68) is used.


Note this function cannot be used if Bi-AMP or ZONE 2 (ZONE SPEAKER) is used in speaker combinations with "*" mark.

(For North American models only) Note that if a power amplifier is connected to the ZONE 3 PRE/LINE OUT jacks, ZONE 2 (ZONE SPEAKER) and ZONE 3 (ZONE SPEAKER) can be used.

 When connecting the power amplifier, set "Multi Zone" - "Zone 3" - "Output Level" (→p167) to "Variable" on the System Setup menu. If it is not set, a large volume is output and the power amplifier, speakers, etc. may be damaged.

Connecting ZONE B

Connecting a Pre-main Amplifier, etc. (ZONE B)

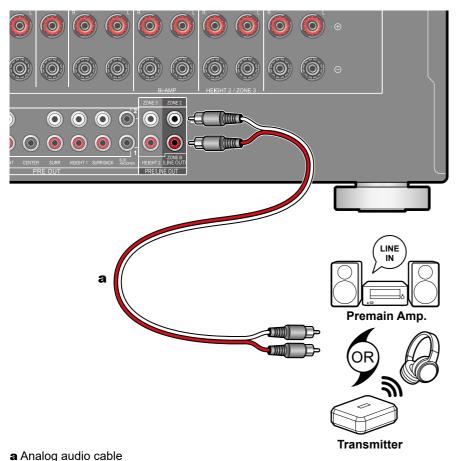


While performing playback through speakers (ZONE A) connected to the unit, you can enjoy the audio of the same source at the same time with the pre-main amplifier or the transmitter of the wireless headphones connected to the ZONE B LINE OUT jack. Use an analog audio cable to connect the ZONE B LINE OUT jack of this unit and the LINE IN jack of the pre-main amplifier or the transmitter of the wireless headphones.

For playback, press the f button on the remote controller to display "AV Adjust", and select the audio output destination. ($\rightarrow p120$)




Setup

Connecting Antennas

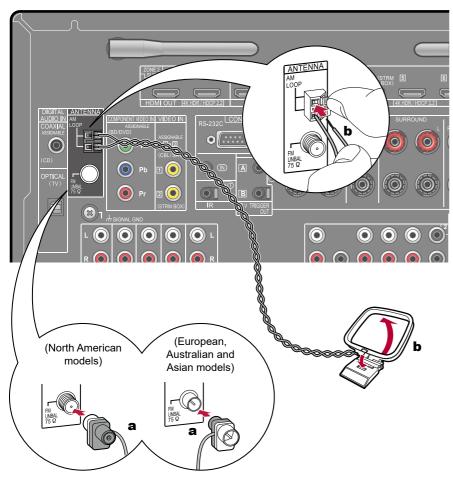

Connect the antenna to this unit, and set up the antenna at the best position for listening while receiving radio signals. Attach the indoor FM antenna to the wall using push pins or adhesive tape.

a Indoor FM antenna, **b** AM loop antenna

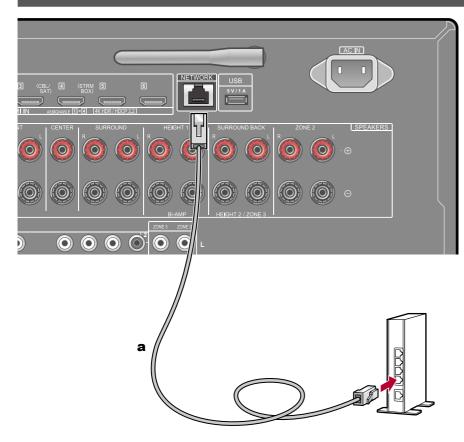


Network Connection

This unit can be connected to the network using a wired LAN or Wi-Fi (wireless LAN). You can enjoy network functions such as Internet radio by network connection. If connection is made by the wired LAN, connect the router and the NETWORK jack with the LAN cable as shown in the illustration. To connect by Wi-Fi, select "Wireless" for "5. Network Connection" in Initial Setup (\rightarrow p184), select your desired setting method, and then follow the on-screen instructions. To configure the setting on the System Setup menu after the completion of Initial Setup, press the **1** button on the remote controller to display the Home screen, and select "Network/ Bluetooth" - "Network" to make the setting. (\rightarrow p176) For the Wi-Fi connection, stand the wireless antenna for use.

a LAN cable

Connecting External Control Devices


IR IN/OUT port

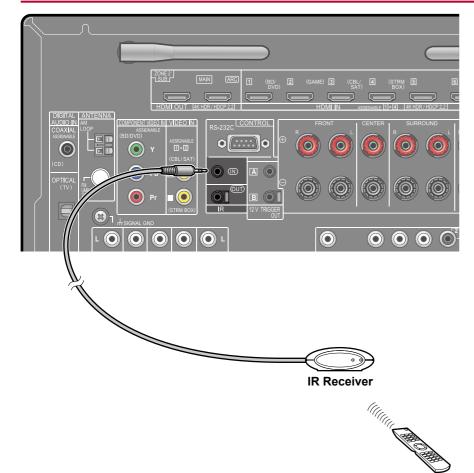

When connecting a remote control receiver unit consisting of an IR Receiver, etc. to this unit, operation using the remote controller is possible even if the remote control signal is difficult to reach (due to installation in the cabinet, etc.). It is also possible to operate this unit from other room such as ZONE 2 with a remote controller, or operate other devices with the remote controller by connecting other devices to this unit. For adopting a remote control receiver unit, contact the specialized stores.

• For the type of cable required for connection, refer to the operation manual, etc. of the remote control receiver unit.

12V TRIGGER OUT jack

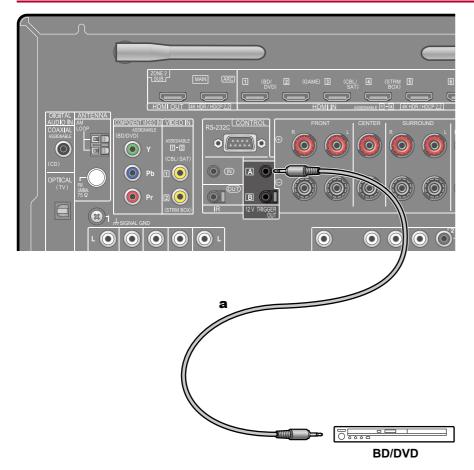


When connecting a device equipped with a TRIGGER IN jack such as a BD/DVD player to this unit, the device can be turned on or set to standby by interlocking the operation on this unit. When the desired input is selected on the unit, power link operation will be activated with a control signal of maximum 12 V/100 mA from the 12V TRIGGER OUT A jack or maximum 12 V/25 mA when using the 12V TRIGGER OUT B jack. You can select the zone to output the control signal by setting each of the inputs.

• For connection, use a monaural mini plug cable (ø1/8"/3.5 mm) without resistance. Do not use a stereo mini plug cable.

a Monaural mini plug cable (ø1/8"/3.5 mm)

Connecting the Power Cord

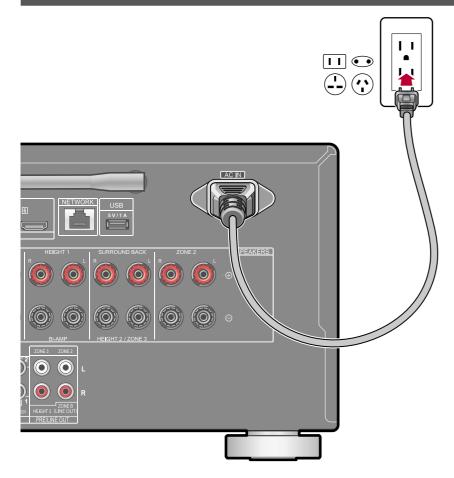

Connect the power cord after all the connections are completed.

• This unit includes a removable power cord. Be sure to connect the power cord to the AC IN of the unit first, and then connect it to the outlet. Always disconnect the outlet side first when disconnecting the power cord.

a Power cord

Playback


AV Component Playback	88
BLUETOOTH [®] Playback	89
Internet Radio	90
Spotify	92
AirPlay [®]	93
DTS Play-Fi [®]	95
FlareConnect™	96
USB Storage Device	97
Playing back files on a PC and NAS (Music Server)	100
Play Queue	105
Amazon Music	107
Connecting the Sonos System for Playback	108
Listening To the AM/FM Radio	110
Multi-zone	115
ZONE B Playback	120
Convenience functions	121
Listening Mode	126
Inputting Characters	142

AV Component Playback

You can play the audio from AV components, such as Blu-ray disc players through this unit.

• When a TV is connected to the HDMI OUT SUB jack, use the HDMI MAIN/SUB button or "AV Adjust" (→p179) to switch between MAIN and SUB.

Basic Operations

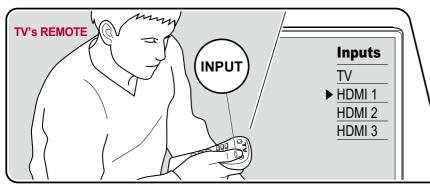



Perform the following procedure when this unit is on.

- 1. Switch the input on the TV to the input connected to the unit.
- 2. Press the input selector whose name is the same as that of the jack to which the player is connected.

For example, press BD/DVD to play the player connected to the BD/DVD jack. Press TV to listen the sound of the TV. To play a device connected to the CD, USB, PHONO, HDMI5, HDMI6 jack or the AUX INPUT HDMI jack on the front panel, press INPUT SELECT repeatedly to select the input.

- When the CEC link function works, the input switches automatically when a CEC compliant TV or player is connected to this unit using HDMI connection.
- 3. Start play on the AV component.

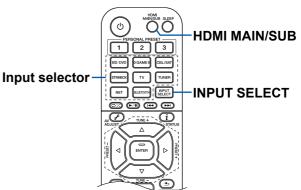


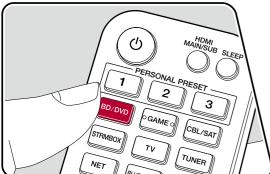

BLUETOOTH® Playback

You can wirelessly play the audio on a BLUETOOTH-enabled device, such as a smartphone.

Basic Operations

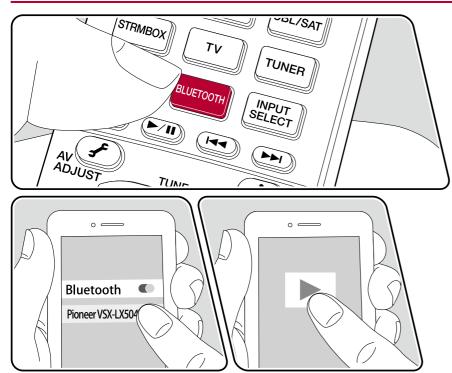

Perform the following procedure when this unit is on.

Pairing

1. When you press the BLUETOOTH button, "Now Pairing..." is displayed on this unit's display, and the pairing mode is enabled.

Now Pairing...

- 2. Enable (turn on) the BLUETOOTH function of the BLUETOOTH-enabled device, and then select this unit from among the devices displayed. If a password is requested, enter "0000".
 - This unit is displayed as "Pioneer VSX-LX504 XXXXXX". This display can be changed with the Friendly Name function (→p176) or the Pioneer Remote App (can be used with the iOS or Android™).
 - To connect another BLUETOOTH-enabled device, press and hold the BLUETOOTH button until "Now Pairing..." is displayed, and then perform step 2. This unit can store the pairing information of up to 8 paired devices.
 - The coverage area is approx. 48'/15 m. Note that connection is not always guaranteed with all BLUETOOTH-enabled devices.

Playing Back

- 1. Perform the connection procedure on the BLUETOOTH-enabled device.
- 2. Playing the music file.

The input on this unit automatically switches to "BLUETOOTH". Turn up the volume of the BLUETOOTH-enabled device to an appropriate level.


• Due to the characteristics of BLUETOOTH wireless technology, the sound produced on this unit may slightly be behind the sound played on the BLUETOOTH-enabled device.

Internet Radio

By connecting this unit to an Internet-connected network, you can enjoy Internet radio services, such as TuneIn Radio, etc.

- To play Internet radio services, the network needs to be connected to the Internet.
- Depending on the Internet radio service, a user registration may be required on your PC beforehand. For details of each service, visit the website of each service.


Playing Back

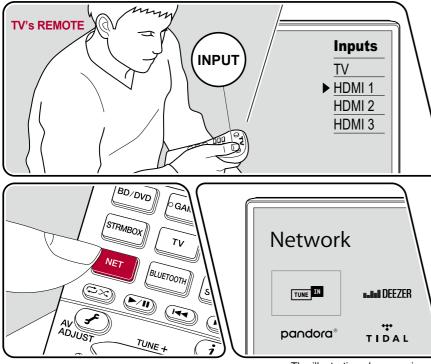

The illustration shows an image.

Perform the following procedure when this unit is on.

- 1. Switch the input on the TV to the input connected to the unit.
- 2. Pressing NET will display the Network Functions list screen on the TV.
- 3. Select your preferred Internet radio service using cursor, and press ENTER to confirm the selection.
- 4. Following the on-screen instructions, select a radio station and program using cursor, and then press ENTER to play.
- To return to the previous screen, press ₅.

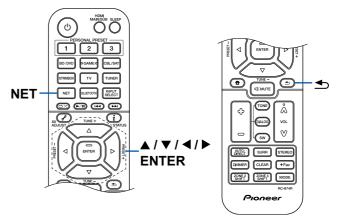

Internet Radio Service Menu

You can bookmark specific stations, or delete stations that have been bookmarked. The displayed menu varies according to the service being selected. The menu icon $\overline{\cdots}$ is displayed while a station is being played. When only this icon is displayed, pressing ENTER will display the menu on the screen. When multiple icons are displayed, select the $\overline{\cdots}$ icon with the cursor, and press ENTER.

Regarding the TuneIn Radio Account

If you create an account on the Tuneln Radio website (tunein.com), and log in it from this unit, your favorite radio stations or programs you have followed on the website are automatically added to your "My Presets" on this unit. "My Presets" is displayed on the next level in the hierarchical structure of Tuneln Radio. To display a radio station added to "My Presets", you need log into Tuneln Radio from the unit. To log in, select "Login" - "I have a Tuneln account" in the "Tuneln Radio" top list on the unit, and then enter your user name and password.

 If you select "Login" on this unit, a registration code is displayed. By using this code, you can associate the device on the My Page section of the TuneIn Radio website so that you can log in from "Login" - "Login with a registration code" without entering the user name and password.

Spotify




Use your phone, tablet or computer as a remote control for Spotify. Go to spotify.com/connect to learn how.

AirPlay®

By connecting this unit to the same network as iOS devices, such as iPhone®, iPod touch® and iPad®, you can enjoy music files on iOS devices wirelessly.

- Update the OS version on your iOS device to the latest version.
- Depending on the iOS version, operation screens or operation procedures on the iOS device may be different. For details, refer to the operating instructions for the iOS device.


Playing Back on This Unit

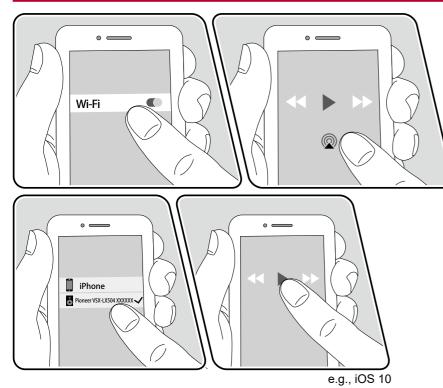

- 1. Connect the iOS device to the access point where this unit is connected via network.
- 2. Tap the AirPlay icon @ on the play screen of the music play application on the iOS device, and select this unit from the displayed devices.
- 3. Play the music file on the iOS device.
- If "System Setup" "Hardware" "Power Management" "Network Standby" is set to "Off " in the Home, manually turn the unit on and then press NET on the remote controller. In the factory default setting, the Network Standby function (→p161) is set to On.
- Due to the characteristics of AirPlay wireless technology, the sound produced on this unit may slightly be behind the sound played on the AirPlay-enabled device.

You can also play the music files on a PC with iTunes (Ver. 10.2 or later) equipped. Confirm that this unit and the PC are connected to the same network beforehand. Then, press NET on this unit. Next, click the AirPlay icon O in iTunes, select this unit from the displayed devices, and start play of a music file.

Playing Back on multiple devices (AirPlay2)

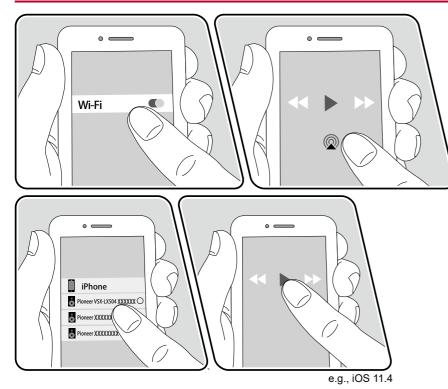

This unit supports AirPlay2. If the version of the iOS device is iOS11.4 or later, you can play the music of the iOS device on this unit and other devices that support AirPlay2.

- 1. Connect the iOS device to the access point where this unit is connected via network.
- 2. Tap the AirPlay icon @ on the play screen of the music play application on the iOS device, and select this unit and AirPlay2-supported devices to play from the displayed devices.
 - AirPlay2-supported devices are displayed with white circle on the right side.
 - Multiple AirPlay2-supported devices can be selected.
 - The volume can be adjusted on individual devices.
- 3. Play the music file on the iOS device.
- If "System Setup" "Hardware" "Power Management" "Network Standby" is set to "Off " in the Home, manually turn the unit on and then press NET on the remote controller. In the factory default setting, the Network Standby function (→p161) is set to On.
- Due to the characteristics of AirPlay wireless technology, the sound produced on this unit may slightly be behind the sound played on the AirPlay-enabled device.

You can also play the music files on a PC with iTunes (Vere. 12.8 or later) equipped. Confirm that this unit and the PC are connected to the same network beforehand. Then, press NET on this unit. Next, click the AirPlay icon O in iTunes, select this unit and AirPlay2-supported devices to play from the displayed devices, and start play of a music file.

DTS Play-Fi®



https://play-fi.com/

When connecting this unit to the same network as mobile devices, such as a smartphone and tablet, you can enjoy music played on the mobile device wirelessly. Music from a streaming distribution service or music in the music library on a mobile device can be played. This function also supports a playlist on iTunes. Also, connecting multiple speakers supporting DTS Play-Fi on the same network will enable "Group playback" that plays the same music in separate rooms at home. To enjoy this function, download Pioneer Music Control App (available on iOS or Android[™]).



Playing Back

1. Download Pioneer Music Control App using your mobile device. http://intl.pioneer-audiovisual.com/playfi/app_p.html



- 2. Connect the mobile device to the network where this unit is connected.
- 3. Starting up Pioneer Music Control App will automatically display compatible devices.
- 4. Select this device from the compatible devices. Then, a list of applications such as a music streaming distribution service is displayed. Select the content to play, and perform operation according to the on-screen instructions.
- If "System Setup" "Hardware" "Power Management" "Network Standby" is set to "Off " in the Home, manually turn the unit on and then press NET on the remote controller. In the factory default setting, the Network Standby function (→p161) is set to On.
- For detailed operation and FAQ, visit the following URL. http://intl.pioneer-audiovisual.com/playfi/info_p.html
- To use a music streaming distribution service, user registration may be required.
- This unit does not support the following DTS Play-Fi functions.
 - Spotify
 - Wireless Surround Sound
 - Line In Rebroadcast
 - Internet Radio
 - Critical Listening
 - L/R Stereo Speaker Pairing
- Some of the settings in the "Setup menu" cannot be changed on this unit. To change those settings, cancel the connection of this unit from the application.
- Listening modes cannot be selected during playback.


FlareConnect[™]



When downloading Pioneer Remote App (available on iOS or Android[™]) to mobile devices, such as a smartphone and tablet, you can enjoy the group playback that plays the same music on multiple audio products supporting the FlareConnect function. You can play audio from external playback devices connected to each product, music from an Internet radio or network audio service such as a music streaming distribution service, and music in the music library on a mobile device.

Playing Back

- Connect this unit and other devices supporting FlareConnect to the same network.
- 2. Download Pioneer Remote App from App Store or Google Play™ Store.
- 3. Connect the mobile device to the network where this unit is connected.
- 4. Starting up Pioneer Remote App will automatically recognize compatible devices.
- 5. Select the screen of the compatible device to operate, and tap the Group icon at the bottom of the screen.
- 6. Add a check mark for the audio product on which you want to play the same music.
- 7. Select the content to play, and operate according to the on-screen instructions.
- If "System Setup" "Hardware" "Power Management" "Network Standby" is set to "Off " in the Home, manually turn the unit on and then press NET on the remote controller. In the factory default setting, the Network Standby function (→p161) is set to On. For other devices, check their respective instruction manuals.

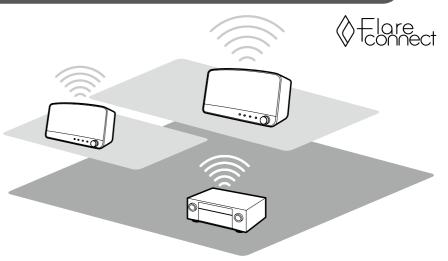


The illustration shows an image.

USB Storage Device

You can play music files stored on a USB storage device.


Basic Operations

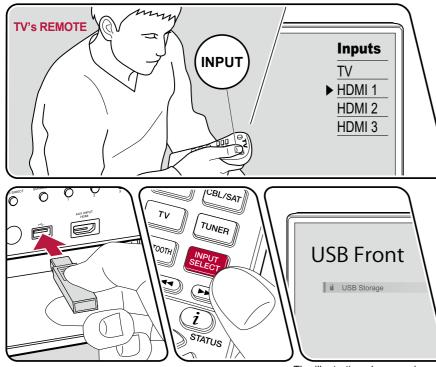


The illustration shows an image.

Perform the following procedure when this unit is on.

- 1. Switch the input on the TV to the input connected to the unit.
- 2. Plug your USB storage device with the music files into the USB port either on the front panel or rear panel of this unit.
- 3. Press INPUT SELECT and select "USB Front" or "USB Rear".
 - If the "USB" indicator blinks on the display, check whether the USB storage device is plugged in properly.
 - Do not unplug the USB storage device while "Connecting..." is being displayed on the display. This may cause data corruption or malfunction.
- 4. Press ENTER in the next screen. The list of folders and music files on the USB storage device is displayed. Select the folder with the cursors, and press ENTER to confirm your selection.
- 5. Select the music file with the cursors, and then press ENTER to start playback.

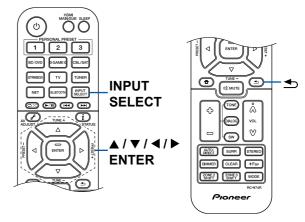

- To return to the previous screen, press ₅.
- To display an album title, artist name and album art of a file in WAV format, make the folder structure and file names as shown below when saving music files. The album art can be displayed by saving a .jpg file to display on the screen in the folder of bottom level. Note that a large volume of .jpg file may take time to be displayed, or may not be displayed.

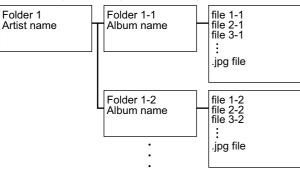

- Characters that cannot be displayed on this unit appear with "*"
- The USB port of this unit complies with the USB 2.0 standard. The transfer speed may be insufficient for some content you play, and sound interruptions, etc. may occur.
- Note that operation is not always guaranteed for all USB storage devices.
- This unit can use USB storage devices that comply with the USB mass storage class standard. Also the format of USB storage devices supports FAT16 or FAT32 file system format.

Device and Supported Format (\rightarrow **<u>p99</u>)**

Device and Supported Format

USB Storage Device Requirements

- This unit can use USB storage devices that comply with the USB mass storage class standard.
- The format of USB storage devices supports FAT16 or FAT32 file system format.
- If the USB storage device has been partitioned, each section will be treated as an independent device.
- Up to 20,000 tracks per folder are supported, and folders can be nested up to 16 levels deep.
- USB hubs and USB storage devices with hub functions are not supported. Do not connect these devices to the unit.
- USB storage devices with security functions are not supported on this unit.
- If an AC adapter is supplied with the USB storage device, connect the AC adapter, and use it with a household outlet.
- Media inserted to the USB card reader may not be available in this function. Furthermore, depending on the USB storage device, proper reading of the contents may not be possible.
- In use of a USB storage device, Our company accepts no responsibility whatsoever for the loss or modification of data stored on a USB storage device, or malfunction of the USB storage device. We recommend that you back up the data stored on a USB storage device before using it with this unit.

Supported Audio Formats

This unit supports the following music file formats. Note that sound files that are protected by copyright cannot be played on this unit.

MP3 (.mp3/.MP3):

- Supported formats: MPEG-1/MPEG-2 Audio Layer 3
- Supported sampling rates: 44.1 kHz, 48 kHz
- Supported bitrates: Between 8 kbps and 320 kbps, and VBR

WMA (.wma/.WMA):

- Supported sampling rates: 44.1 kHz, 48 kHz
- Supported bitrates: Between 5 kbps and 320 kbps, and VBR
- WMA Pro/Voice/WMA Lossless formats are not supported.

WAV (.wav/.WAV):

WAV files contain uncompressed PCM digital audio.

- Supported sampling rates: 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz
- Quantization bit: 8 bit, 16 bit, 24 bit

AIFF (.aiff/.aif/.AIFF/.AIF):

AIFF files contain uncompressed PCM digital audio.

- Supported sampling rates: 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz
- Quantization bit: 8 bit, 16 bit, 24 bit

AAC (.aac/.m4a/.mp4/.3gp/.3g2/.AAC/.M4A/.MP4/.3GP/.3G2):

- Supported formats: MPEG-2/MPEG-4 Audio
- Supported sampling rates: 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz
- · Supported bitrates: Between 8 kbps and 320 kbps, and VBR

FLAC (.flac/.FLAC):

- Supported sampling rates: 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz
- Quantization bit: 8 bit, 16 bit, 24 bit

Apple Lossless (.m4a/.mp4/.M4A/.MP4):

- Supported sampling rates: 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz
- Quantization bit: 16 bit, 24 bit

DSD (.dsf/.dff/.DSF/.DFF):

- Supported formats: DSF/DSDIFF
- Supported sampling rates: 2.8 MHz, 5.6 MHz, 11.2 MHz
- When playing files recorded with VBR (Variable bit-rate), the playback time may not be displayed correctly.
- This unit supports the gapless playback of the USB storage device in the following conditions.

When continuously playing WAV, FLAC and Apple Lossless files with the same format, sampling frequency, the number of channels and quantization bit rate.

Playing back files on a PC and NAS (Music Server)

Streaming play of music files stored on PCs or NAS devices connected to the same network as this unit is supported.

• The network servers supported by this unit are PCs that incorporate players equipped with the server functions such as Windows Media[®] Player 11 or 12, or NASes supporting the home network function. When using Windows Media[®] Player 11 or 12, you need to make the settings beforehand. Note that with PCs, only music files registered in the library of Windows Media[®] Player can be played.

Windows Media® Player settings

On Windows Media® Player 11


- 1. Turn on your PC, and start Windows Media® Player 11.
- 2. In the "Library" menu, select "Media Sharing" to display a dialog box.
- 3. Select the "Share my media" check box, and then click "OK" to display the compatible devices.
- 4. Select this unit, and then click "Allow".
 - When it is clicked, the corresponding icon is checked.
- 5. Click "OK" to close the dialog.
- Depending on the version of Windows Media[®] Player, the names of items to select may differ from the above description.

On Windows Media® Player 12

- 1. Turn on your PC, and start Windows Media® Player 12.
- 2. In the "Stream" menu, select "Turn on media streaming" to display a dialog box.
 - If the media streaming is already turned on, select "More streaming options..." in the "Stream" menu to display the list of playback devices in the network, and then go to step 4.
- 3. Click "Turn on media streaming" to display the list of playback devices in the network.
- 4. Select this unit in "Media streaming options" and check that it is set to "Allow".
- 5. Click "OK" to close the dialog.
- Depending on the version of Windows Media[®] Player, the names of items to select may differ from the above description.

□ Playing Back (\rightarrow **p101**)

Playing Back

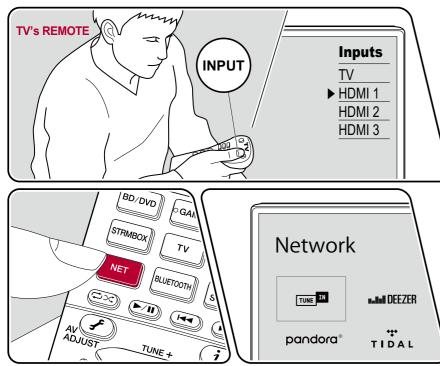


The illustration shows an image.

Perform the following procedure when this unit is on.

- 1. Switch the input on the TV to the input connected to the unit.
- 2. Start the server (Windows Media[®] Player 11, Windows Media[®] Player 12, or NAS device) containing the music files to play.
- 3. Make sure that the PC or NAS is properly connected to the same network as this unit.
- 4. Press NET to display the network service list screen.
 - If the "NET" indicator on the display blinks, the unit is not properly connected to the network. Check the connection.

Network			
1000	DEEZER	© FolaWilect	AirPlay
pandora'	TIDAL	But in	Music Server
Spotify	music	Play-Fi	🖅 Play Queue

- 5. With the cursors, select "Music Server", and then press ENTER.
- 6. Select the target server with the cursors, and press ENTER to display the items list screen.
 - · This unit cannot access pictures and videos stored on servers.

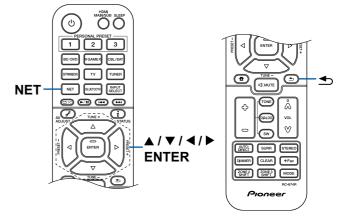

- Depending on the server sharing settings, contents stored on the server may not be displayed.
- 7. With the cursors, select the music file to play, and then press ENTER to start playback.
 - If "No Item" is displayed on the screen, check whether the network is properly connected.
- To return to the previous screen, press . .
- For music files on a server, up to 20,000 tracks per folder are supported, and folders can be nested up to 16 levels deep.
- Depending on the type of media server, the unit may not recognize it, or may not be able to play its music files.

Searching music files to select

If the server you use supports search functions, the following search function can be used.

Perform the following procedure with available servers displayed using Music Server.

- 1. With ▲ / ▼, select the server containing music files you want to play, and select ENTER.
- 2. With ▲ / ▼, select the Search folder, and press ENTER. The Search folder contains the following three folders.
 - "Search by Artist": Select this when searching by artist name.
 - "Search by Album": Select this when searching by album title.
 - "Search by Track": Select this when searching by track title.
- 3. With \blacktriangle / \blacktriangledown , select the folder, and press ENTER.
- 4. Input a character string to search for, and press ENTER. Then, the search result is displayed.
- 5. With \blacktriangle / \bigtriangledown , select the music files to play, and select ENTER.

Controlling Remote Playback from a PC

You can use this unit to play music files stored on your PC by operating the PC in your home network. The unit supports remote playback via Windows Media[®] Player 12. To use the remote playback function of this unit with Windows Media[®] Player 12, it must be configured beforehand.

Setting PC

- 1. Turn on your PC, and start Windows Media[®] Player 12.
- 2. In the "Stream" menu, select "Turn on media streaming" to display a dialog box.
 - If the media streaming is already turned on, select "More streaming options..." in the "Stream" menu to display the list of playback devices in the network, and then go to step 4.
- 3. Click "Turn on media streaming" to display the list of playback devices in the network.
- 4. Select this unit in "Media streaming options" and check that it is set to "Allow".
- 5. Click "OK" to close the dialog box.
- 6. Open the "Stream" menu and confirm that "Allow remote control of my Player..." is checked.
- Depending on the version of Windows Media[®] Player, the names of items to select may differ from the above description.

Remote playback

- 1. Turn on the power of the unit.
- 2. Turn on your PC, and start Windows Media® Player 12.
- 3. Select and right-click the music file to play with Windows Media® Player 12.
 - To remotely play a music file on another server, open the target server from "Other Libraries", and select the music file to play.
- 4. Select this unit in "Play to" to open the "Play to" window of Windows Media[®] Player 12, and start playback on this unit.
 - If your PC is running on Windows[®] 8.1, click "Play to", and select this unit. If your PC is running on Windows[®] 10, click "Cast to Device", and select this unit. Operations during remote playback are possible from the "Play to" window on the PC. The playback screen is displayed on the HDMIconnected TV.
- 5. Adjust the volume using the volume bar on the "Play to" window.
 - Sometimes, the volume displayed on the remote playback window may differ from the volume displayed on the display of this unit.
 - When the volume is changed on this unit, the value is not reflected in the "Play to" window.
 - This unit cannot play music files remotely in the following conditions.
 - It is using a network service.
 - It is playing a music file on a USB storage device.

• Depending on the version of Windows Media[®] Player, the names of items to select may differ from the above description.

□ Supported Audio Formats (\rightarrow <u>p104</u>)

Front Panel≫ Rear Panel≫ Remote≫

Supported Audio Formats

This unit supports the following music file formats. Remote play of FLAC and DSD is not supported.

MP3 (.mp3/.MP3):

- Supported formats: MPEG-1/MPEG-2 Audio Layer 3
- Supported sampling rates: 44.1 kHz, 48 kHz
- Supported bitrates: Between 8 kbps and 320 kbps, and VBR

WMA (.wma/.WMA):

- Supported sampling rates: 44.1 kHz, 48 kHz
- · Supported bitrates: Between 5 kbps and 320 kbps, and VBR
- WMA Pro/Voice/WMA Lossless formats are not supported.

WAV (.wav/.WAV):

WAV files contain uncompressed PCM digital audio.

- Supported sampling rates: 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz
- Quantization bit: 8 bit, 16 bit, 24 bit

AIFF (.aiff/.aif/.AIFF/.AIF):

AIFF files contain uncompressed PCM digital audio.

- Supported sampling rates: 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz
- Quantization bit: 8 bit, 16 bit, 24 bit

AAC (.aac/.m4a/.mp4/.3gp/.3g2/.AAC/.M4A/.MP4/.3GP/.3G2):

- Supported formats: MPEG-2/MPEG-4 Audio
- Supported sampling rates: 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz
- · Supported bitrates: Between 8 kbps and 320 kbps, and VBR
- FLAC (.flac/.FLAC):
- Supported sampling rates: 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz
- Quantization bit: 8 bit, 16 bit, 24 bit
- LPCM (Linear PCM):
- Supported sampling rates: 44.1 kHz, 48 kHz
- Quantization bit: 16 bit

Apple Lossless (.m4a/.mp4/.M4A/.MP4):

- Supported sampling rates: 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz
- Quantization bit: 16 bit, 24 bit

DSD (.dsf/.dff/.DSF/.DFF):

- Supported formats: DSF/DSDIFF
- Supported sampling rates: 2.8 MHz, 5.6 MHz, 11.2 MHz
- When playing files recorded with VBR (Variable bit-rate), the playback time may not be displayed correctly.
- Remote playback does not support the gapless playback.

104

Play Queue



When downloading Pioneer Remote App (available on iOS or Android[™]) to mobile devices, such as a smartphone and tablet, you can save your favorite playlist (Play Queue information) among music files stored in the USB storage device connected to this unit and music files stored in PC or NAS connected to the same network as this unit, and you can play the music on the playlist. The Play Queue information is effective until the power cord of this unit is removed from the outlet.

Initial Setup

- 1. Connect this unit to your home network by the network settings on this unit.
- 2. Download Pioneer Remote App from App Store or Google Play™ Store.
- 3. Connect the mobile device to the network where this unit is connected.
- 4. Start up Pioneer Remote App, and select this unit.

Adding Play Queue Information

1. Select the "INPUT" input on the application screen, and tap the "USB" icon. Or, select the "NET" input, and tap the "USB" icon or "Music Server" icon. (Depending on the model, the icon names may be different.)



2. Tapping the "+" icon of the track you wan to add will open the pop-up to add the Play Queue information.



3. Touch the "Play Now , "Play Next " or "Play Last " icon to add the track to Play Queue.

 If there are no tracks on the Play Queue list, only "Play Now "" is displayed.

Sort and Delete

1. Select the "NET" input, tap the "Play Queue" icon, and enter the Play Queue service screen.



2. Tap the "===" icon of the track to sort, and drag the icon to the destination.



3. To delete a track, slide the track to the left until the trash icon changes to "i". If the device is on iOS, slide the "icon to the left. Releasing your finger will delete the track from Play Queue.



Playing Back

Playback starts when you select "Play Now I for Play Queue addition, or select the track in the Play Queue service screen.

Amazon Music



You can use the music distribution service provided by Amazon by registering with Amazon Music. Register this unit by downloading the Pioneer Remote App (available for iOS and Android[™]) to your mobile device, for example a smartphone or tablet, and register from the Pioneer Remote App screen.

• To play Amazon Music you need to have an Amazon account and to be a member of Amazon Prime and Amazon Music Unlimited. For more information, see the Amazon website.

Amazon Music is now available in several countries. If Amazon Music is not available in your country, please visit https://music.amazon.com/ for more info.



Registering this unit with Amazon Music

- Use the Pioneer Remote App to register to Amazon Music. Registration is not possible using this unit.
- 1. Use the unit's network settings to connect to your household network.
- 2. Use the mobile device to download the Pioneer Remote App.
- 3. Connect the mobile device to the same network as the unit.
- 4. The unit is automatically displayed when you start the Pioneer Remote App. Tap the unit when displayed to select it.
- 5. Tap "NET" or "NETWORK" at the top of the Pioneer Remote App screen, and

after switching to the network screen, tap the "Amazon Music" icon to display the Amazon Music login screen. (Depending on the model, the icon names may be different.)

• If the login screen is not displayed, but rather a screen prompting installation of Service Unlocker, then install that first.



Available services may differ depending on your area.

6. Enter the information required for the Amazon account, such as your email address and password, to log into Amazon. The Amazon Music menu is displayed when login is successful and this unit is registered. To continue to start play, proceed to step 3 in the next section.

Playing Amazon Music

- 1. Start the Pioneer Remote App. This unit is displayed automatically when the app is started, so tap the unit when displayed to select it.
- 2. Tap "NET" or "NETWORK" at the top of the screen, and after switching to the network screen, tap the "Amazon Music" icon.
- 3. Select the content that you want to play in the menu screen for Amazon Music and start play.
 - When playing Amazon Music with the remote controller, operate the input selector on the remote controller to display the Network menu and select "Amazon Music" from the menu.

Connecting the Sonos System for Playback

Once your unit is connected to the Sonos Connect you will be able to send any music or source on your Sonos App to the unit. By going through the Sonos Connect, you can play your unit through other Sonos devices in the network in the same group, or you can just play on your unit. Further, the power of your unit turns on automatically when music starts playing on the Sonos App, and the linked function to switch input works.

 If "System Setup" - "Hardware" - "Power Management" - "Network Standby" is set to "Off " in the Home, manually turn the unit on and then press NET on the remote controller. In the factory default setting, the Network Standby function (→p161) is set to On.

Necessary Equipment

- Sonos Connect
- RCA Audio Cable (Supplied with Sonos Connect)

How to Connect This Unit and Sonos Connect

- 1. Connect the Sonos Connect to the AUDIO IN jack of this unit with the RCA cable supplied with the Sonos Connect. Any input can be used other than the PHONO input.
 - You can also connect with a digital cable. For details, refer to the instruction manual of the Sonos.
 - You can rename the input that is displayed on the unit to a more logical name. For example, you can change the name of input that the Sonos Connect is plugged into from "CD" (or other input) to "SONOS". Press the

 button on the remote controller to display the Home screen, and select "System Setup" "Source" "Name Edit" to change the name.

Setting Up

A setup is required to play Sonos on this unit. Make the setting according to the following procedure.

- 2. Select the following items with the cursors ▲ / ▼ and set each item. Input Selector:

Enable the interlocking function with the Sonos Connect. With the cursors $\triangleleft/\triangleright$, select the input selector to which the Sonos Connect is connected.

Connected Device:

Press the ENTER button to display Sonos devices connected to the same network as the network of this unit. Select the Sonos Connect connected to the unit and press the ENTER button.

- Products (e.g. Play:3 unequipped with an output terminal) other than the Sonos Connect are also displayed in the device list and selectable. In that case, when playback on the Sonos side starts, the input is switched, however, audio is not output. Select the room name of the connected Sonos Connect.
- Up to 32 devices can be displayed on the Sonos product list screen. If you cannot find the Sonos Connect to be interlocked, return to the previous screen, turn off the product you want to interlock, and try again.

Output Zone:

With the cursors ◀ / ▶, select the ZONE where you want to listen to the music.

"Main": Outputs audio only to the main room (where this unit is located).

"Zone 2": Outputs audio only to the separate room (ZONE 2).

"Main/Zone 2": Outputs audio to both the main room and separate room.

"Zone 3": Outputs audio only to the separate room (ZONE 3).

"Main/Zone 3": Outputs audio to both the main room and separate room (ZONE 3).

"Zone 2/Zone 3": Outputs audio to both the separate rooms (ZONE 2 and ZONE 3).

"Main/Zone 2/Zone 3": Outputs audio to the main room and both separate rooms (ZONE 2 and ZONE 3).

Playing Sonos on This Unit


- Using your Sonos App select the music you want to listen to and send it to the room (or group) where your unit is located. We recommend naming your unit / Sonos Connect combination a friendly name like TV Room or Living Room where the equipment is located.
- If the input on your unit does not change automatically when play starts, try stopping play, then starting it again.
- You can set the volume beforehand for playing back the Sonos Connect. Press the


 button on the remote controller to display the Home screen, and select "System Setup" - "Hardware" - "Works with SONOS" - "Preset Volume" (→p166) to make the setting.

Listening To the AM/FM Radio

You can receive AM and FM radio stations on this unit with the built-in tuner.

Tuning into a Radio Station

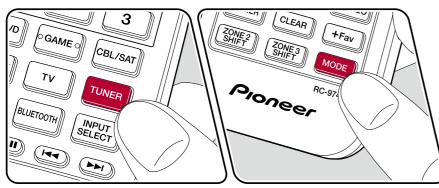

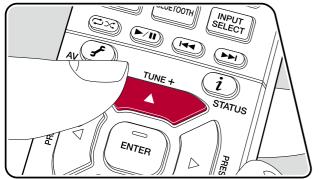


Perform the following procedure when this unit is on.

Tuning Automatically

- 1. Press TUNER repeatedly to select either "AM" or "FM".
- 2. Press MODE repeatedly to display "TunMode: Auto" on the display.

TunMode:Auto

3. When you press the cursors ▲ / ▼, automatic tuning starts, and searching stops when a station is found. When tuned in to a radio station, the "TUNED" indicator on the display lights up. When tuned in to an FM radio station, the "STEREO" indicator lights up.

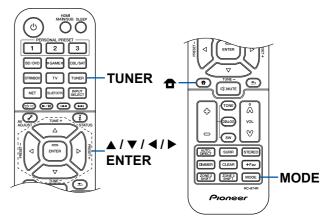

When FM broadcasts reception is poor: Perform the procedure for "Tuning Manually" ($\rightarrow p111$). Note that if you tune manually, the reception for FM broadcasts will be monaural rather than stereo, irrespective of the sensitivity of the reception.

Tuning Manually

Note that if you tune manually, the reception for FM broadcasts will be monaural rather than stereo, irrespective of the sensitivity of the reception.

- 1. Press TUNER repeatedly to select either "AM" or "FM".
- 2. Press MODE repeatedly to display "TunMode: Manual" on the display.

TunMode:Manual


- 3. While pressing the cursors ▲ / ▼, select the desired radio station.
 - Each time you press the cursors ▲ / ▼, the frequency changes by 1 step. If the button is held down, the frequency changes continuously, and if the button is released, the frequency stops changing.

Frequency step setting

Press **1** on the remote controller, and from Home displayed select "System Setup" - "Miscellaneous" - "Tuner" - "AM/FM Frequency Step" or "AM Frequency Step", and then select the frequency step for your area. Note that when this setting is changed, all radio presets are deleted.

\Box Presetting a Radio Station ($\rightarrow p112$)

Presetting a Radio Station

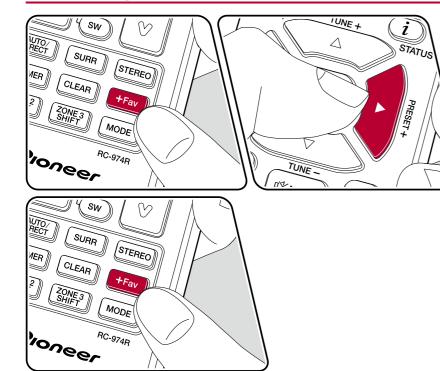


Registration Procedure

You can preset up to 40 of your favorite AM/FM radio stations.


After tuning in to the AM/FM radio station you want to register, perform the following procedure.

1. Press +Fav so that the preset number on the display blinks.



- 2. While the preset number is blinking (approx. 8 seconds), repeatedly press the cursors ◀ / ► to select a number between 1 and 40.
- 3. Press +Fav again to register the station.

When the station is registered, the preset number stops blinking. Repeat this steps to register your favorite AM/FM radio stations.

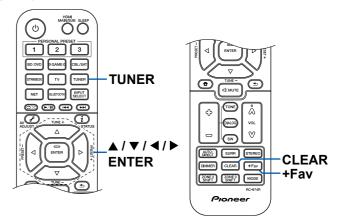

Selecting a Preset Radio Station

- 1. Press TUNER.
- 2. Press the cursors \blacktriangleleft / \triangleright to select a preset number.

Deleting a Preset Radio Station

- 1. Press TUNER.
- 2. Press the cursors \blacktriangleleft / \triangleright to select the preset number to delete.
- 3. After pressing +Fav, press CLEAR while the preset number is blinking, and delete the preset number. When deleted, the number on the display disappears.

□ Using RDS (European, Australian and Asian models) (→p114)

Using RDS (European, Australian and Asian models)

RDS stands for Radio Data System, and is a method of transmitting data in FM radio signals. In regions where RDS can be used, when you tune in to a radio station broadcasting program information, the radio station name is displayed on the display. When you press i on the remote controller in this state, you can use the following functions.

Display Text Information (Radio Text)

1. While the name of the station is being displayed on the display, press i on the remote controller once.

The Radio Text (RT), which is text information delivered by the station, is displayed scrolling across the display. "No Text Data" is displayed when no text information is delivered.

Search for Stations by Program Type

- 1. While the name of the station is being displayed on the display, press i on the remote controller twice.
 - If none of the Program Types are set for the radio station under reception, "None" is displayed.
- Press the cursors
 > on the remote controller to select the Program Type you want to search for, and then press the ENTER button to start the search.
 - The Program Types displayed are as follows: None / News (News reports) / Affairs (Current affairs) / Info (Information) / Sport / Educate (Education) / Drama / Culture / Science (Science and technology) / Varied / Pop M (Pop music) / Rock M (Rock music) / Easy M (Middle of the road music) / Light M (Light classics) / Classics (Serious classics) / Other M (Other music) / Weather / Finance / Children (Children's programmes) / Social (Social affairs) / Religion / Phone In / Travel / Leisure / Jazz (Jazz music) / Country (Country music) / Nation M (National music) / Oldies (Oldies music) / Folk M (Folk music) / Document (Documentary)
 - The information displayed may not match the content delivered by the station.

- 3. When a station is found, the station blinks on the display. Pressing the ENTER button in this state will receive that station. If you don't press the ENTER button, the unit starts to search for another station.
 - If no stations are found, the message "Not Found" is displayed.
- Unusual characters may be displayed when the unit receives unsupported characters. This is not a malfunction. Also, if the signal from a station is weak, information may not be displayed.


Multi-zone

You can enjoy 2-ch audio in the separate room (ZONE 2/ZONE 3) while performing playback in the main room (where this unit is located). The same source can be played back in the main room and ZONE 2/ZONE 3 simultaneously. Also, different sources can be played back in both rooms. For the "NET", "BLUETOOTH", or "USB" input selector, you can select only the same source for the main room and separate room. If you select "NET" in the main room and then select "BLUETOOTH" in the separate room, the main room setting switches to "BLUETOOTH". You cannot select different stations of AM/FM broadcasts for the main room and separate room. Pioneer Remote App is useful for the multi-zone playback operation. Download Pioneer Remote App (available on iOS or Android™) to a mobile device, such as a smartphone and tablet to use it.



□ Playing Back (ZONE 2) (\rightarrow **p116**)

Playing Back (ZONE 2)

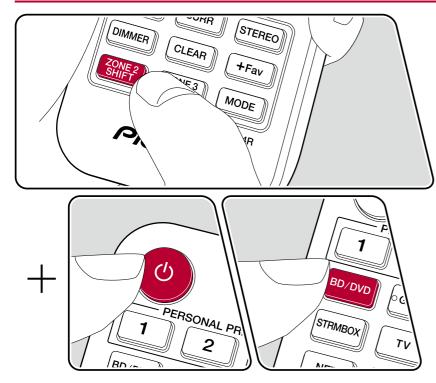

In the remote controller operation, while pressing and holding the ZONE 2 SHIFT button on the remote controller, operate with each button.

- 1. Point the remote controller at the unit, and while pressing and holding the ZONE 2 SHIFT button on the remote controller, press \emptyset .
 - "Z2" on the display of the main unit lights up.

Z2

- 2. While pressing and holding the ZONE 2 SHIFT button on the remote controller, press the input selector of the input source you want to play in the separate room. When operating on the main unit, press the ZONE CONTROL button repeatedly to select "Z2" on the display, then within 8 seconds select the input you want to play in another room using the input selector dial.
- 3. If the unit is connected to the pre-main amplifier in the separate room, adjust the volume on the pre-main amplifier. If the unit is connected to the power amplifier or ZONE speaker in the separate room, adjust the volume with the volume button while pressing and holding the ZONE 2 SHIFT button on the remote controller. When operating on the main unit, press the ZONE CONTROL button repeatedly to select "Z2" on the display, then within 8 seconds adjust using the MASTER VOLUME knob.
 - When connecting the power amplifier, set "Multi Zone" "Zone 2" "Output Level" (→p166) to "Variable" on the System Setup menu. If it is not set, a large volume is output and the power amplifie, speakers, etc. may be damaged.
 - Information of a connected device can be displayed on the TV in the separate room. Press the *i* button while pressing and holding the ZONE 2 SHIFT button on the remote controller.
- If you turn the unit to standby during multi-zone playback, the Z2 indicator is dimmed, and the playback mode is switched to playback in a separate room only. Setting ZONE 2 to on while the unit is in standby also switches the playback mode to playback in a separate room only.
- The audio from externally connected AV components can be output to ZONE 2 only when the audio is analog or 2 ch PCM signal. When the AV component is connected to this unit with a HDMI cable, digital coaxial cable or digital optical


cable, change the audio output of the AV component to the PCM output.

- When video and audio via HDMI input are output to ZONE 2, set "Input/Output Assign" - "TV Out / OSD" - "Zone 2 HDMI" (→p146) to "Use" on the System Setup menu.
- DSD audio signals cannot be output to ZONE 2 when selected with the "NET" or "USB" input selector.
- If ZONE 2 is on, power consumption during standby will increase.

To set the function to off: While pressing and holding ZONE 2 SHIFT button, press O. Alternatively, press the ZONE 2 ON/OFF button on the main unit.

□ Playing Back (ZONE 3) (\rightarrow **p118**)

Playing Back (ZONE 3)

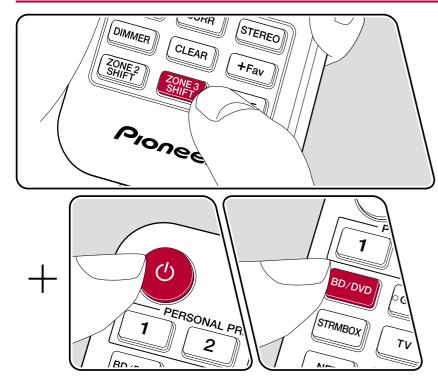

In the remote controller operation, while pressing and holding the ZONE 3 SHIFT button on the remote controller, operate with each button. Settings are required to playback a source in ZONE 3.

When outputting from the speakers: Set "Speaker" - "Configuration" - "Zone Speaker" in the System Setup menu ($\rightarrow p151$) to "Zone 2/Zone 3". When outputting from the pre-main amplifier or the power amplifier: Set "Speaker" - "Configuration" in the System Setup ($\rightarrow p150$) to one of the following.

- Set "Speaker Channels" to "2.1 ch", "3.1 ch", "4.1 ch", or "5.1 ch"
- Set "Speaker Channels" to "2.1.2 ch", "3.1.2 ch", "4.1.2 ch", or "5.1.2 ch", and set "Bi-Amp" and "Zone Speaker" to "No"
- 1. Point the remote controller at the unit, and while pressing and holding the ZONE 3 SHIFT button on the remote controller, press \oplus .
 - "Z3" on the display of the main unit lights up.

Z3

- 2. While pressing and holding the ZONE 3 SHIFT button on the remote controller, press the input selector of the input source you want to play in the separate room. When operating on the main unit, press the ZONE CONTROL button repeatedly to select "Z3" on the display, then within 8 seconds select the input you want to play in another room using the input selector dial.
- 3. If the unit is connected to the pre-main amplifier in the separate room, adjust the volume on the pre-main amplifier. If the unit is connected to the power amplifier or ZONE speaker in the separate room, adjust the volume with the volume button while pressing and holding the ZONE 3 SHIFT button on the remote controller. When operating on the main unit, press the ZONE CONTROL button repeatedly to select "Z3" on the display, then within 8 seconds adjust using the MASTER VOLUME knob.
 - When connecting the power amplifier, set "Multi Zone" "Zone 3" "Output Level" (→p167) to "Variable" on the System Setup menu. If it is not set, a large volume is output and the power amplifier, speakers, etc. may be damaged.

Contents Connections Playback Setup Setup


- If you turn the unit to standby during multi-zone playback, the Z3 indicator is dimmed, and the playback mode is switched to playback in a separate room only. Setting ZONE 3 to on while the unit is in standby also switches the playback mode to playback in a separate room only.
- For ZONE 3 output, audio from externally connected AV components can be output only when it is an analog audio signal.
- DSD audio signals cannot be output to ZONE 3 when selected with the "NET" or "USB" input selector.
- If ZONE 3 is on, power consumption during standby will increase.

To set the function to off: While pressing and holding ZONE 3 SHIFT button, press O. Alternatively, press the ZONE 3 ON/OFF button on the main unit.

ZONE B Playback

While performing playback through speakers (ZONE A) connected to the unit, you can enjoy the audio of the same source with the pre-main amplifie, etc. (ZONE B) (\rightarrow **p81**) connected to the ZONE B LINE OUT jack at the same time.

Playing Back

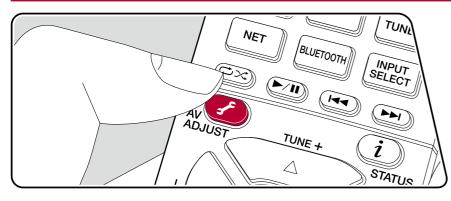

- 1. Press the *F* button on the remote controller to select "Audio" "Zone B".
 - In the following cases, "Zone B" cannot be selected.
 - When ZONE 2 is On
 - When "System Setup" "Speaker" "Configuration" "Zone 2 Preout" on the Home screen is set to "Zone 2" (→p151)
- 2. Select an audio output destination.

Off: Outputs audio only to ZONE A. "A" on the display of the main unit lights up.

On(A+B): Outputs audio to both ZONE A and ZONE B. "A" and "B" on the display of the main unit light up.


On(B): Outputs audio only to ZONE B. "B" on the display of the main unit lights up.

ΑB

- 3. Start play on the AV component.
- 4. Adjust the sound volume on the pre-main amplifier, etc. of ZONE B.
- When "Zone 2 Preout" is set to "Zone B" and "Audio" "Zone B" at AV Adjust is set to "On (A+B)", the output of ZONE A is as shown below.
 - The tone cannot be adjusted.
 - "System Setup" "Speaker" "Crossover" "Double Bass" (→p152) on the Home screen is fixed to "On".
 - The effect of "System Setup" "Speaker" "Distance" (→<u>p153</u>) on the Home screen turns off.
- If "On (A+B)" is selected as an audio output destination, you can select only the "Stereo" listening mode for ZONE A when using the 2.1ch speaker layout. When using a speaker layout of 3.1ch or more, you can select only the "Ext. Stereo" listening mode.

Convenience functions

Using PERSONAL PRESET

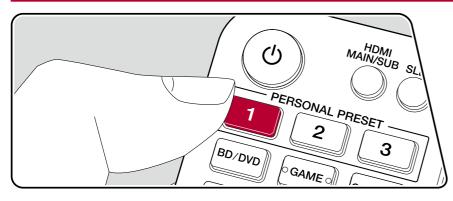


Registration


You can register settings ($\rightarrow p122$) such as the current input selector and listening mode with the three PERSONAL PRESET buttons, and call a registered setting in a single operation.

e.g.) Pressing the PERSONAL PRESET button will automatically switch the input selector to "TUNER" to receive the registered station. Also, the listening mode and volume level are switched as registered.

Perform the following steps in the state of the setting to register.

- 1. Press and hold any of the 1 to 3 buttons of PERSONAL PRESET.
- 2. "Preset Written" appears on the display, and the setting is registered. If registration has already been made, the registered setting is overwritten.

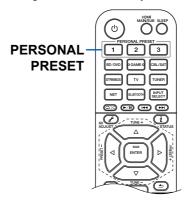

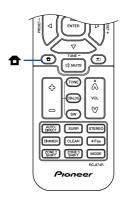

Settings that can be registered

The following settings can be registered with PERSONAL PRESET.

- Input selector (Network service or AM/FM radio stations can also be registered.)
- Listening mode
- Volume level (Upper limit "-32 dB") (When ZONE 2/ZONE 3 is on, the volume level of ZONE 2/ZONE 3 is also registered.)
- Output destination (Multi Zone)
- Sound Retriever function's "On" and "Off"
- TREBLE/BASS/DIALOG, etc.
- * When AM/FM radio stations are registered, TUNER's preset numbers "38", "39" and "40" ($\rightarrow p112$) are overwritten.


Using the registered settings

- 1. Press any of the 1 to 3 buttons of PERSONAL PRESET with which settings have been registered.
 - Pressing PERSONAL PRESET buttons turns the power on even if the main unit is in standby mode.

Checking the registered settings

- 2. The registered settings are displayed in the list.
 - Some of the items such as the Sound Retriever function are not displayed in the list.

Adjusting the tone

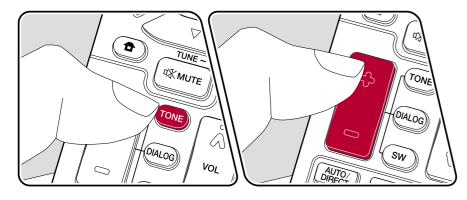

Adjusting TREBLE/BASS


You can adjust the sound quality of the speakers.

- 1. Press TONE repeatedly to select Treble or Bass and adjust the content. Treble: Enhances or moderates the high-tone range of the speakers. Bass: Enhances or moderates the low-tone range of the speakers.
- 2. Press + or for adjustment.

Adjusting DIALOG

Emphasizes movie lines and music vocals to listen to them more easily. It is effective to movie lines in particular. Also, it exerts the effect even if the center speaker is not used. Select a desired level from "1" (low) to "5" (high).

- 1. Press DIALOG.
- 2. Press + or for adjustment.
- Depending on the input source or listening mode setting, selection is not possible, or the desired effect may not be achieved.

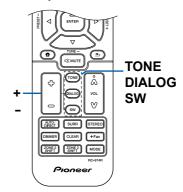


Adjusting SUBWOOFER

Adjust the speaker level of the subwoofer while listening to the sound.

- 1. Press SW.
- 2. Press + or to adjust the level between "-15.0 dB" and "+12.0 dB".
 - If you set the unit to the standby mode, the adjustments you made will be restored to the previous statuses.

Sleep Timer

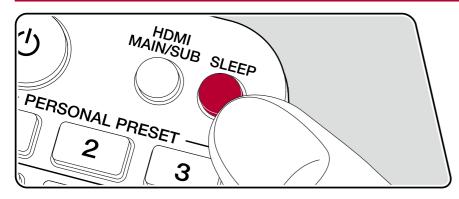

You can allow the unit to enter standby automatically when the specified time has elapsed.

Press SLEEP button on the remote controller to select the time from "30 min", "60 min" and "90 min".

"Off": The unit does not automatically enter standby mode.


You can also set this by pressing the \square button on the remote controller to display the Home screen and selecting "System Setup" - "Hardware" - "Power Management" - "Sleep Timer" ($\rightarrow p160$).

Listening Mode

You can change the listening mode during play by pressing repeatedly "AUTO/DIRECT", "SURR", or "STEREO".


Selecting a Listening mode

- Each of AUTO/DIRECT, SURR, and STEREO buttons stores the listening mode that was selected last. If content incompatible of the listening mode selected last is played, the most standard listening mode for the content is automatically selected.
- For details of the effects of each listening mode, refer to "Listening Mode Effects" (→p132).
- For listening modes selectable for each audio format of input signals, refer to "Input Formats and Selectable Listening Modes" (→p136).

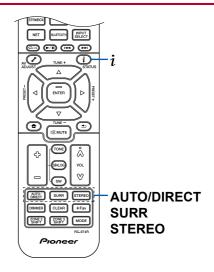

AUTO/DIRECT button


Press repeatedly and the listening modes suited to the input signal are switched between "Auto Surround", "Direct", and "Pure Direct". After selecting one of them, "Auto Surround" (or "Direct" or "Pure Direct") is displayed, then the most suitable listening mode for the audio format is selected automatically (DTS for multi-channel input signals, Stereo for 2 channel input signals, etc.) and an indicator such as "DTS" is displayed on the display.

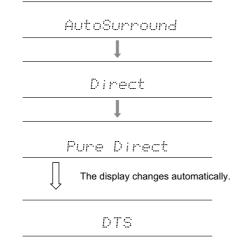

The "Direct" mode shuts down some processing that can affect sound quality, such as the tone control features, so you can enjoy even better sound quality. The "Pure Direct" mode shuts down even more processes that affects sound quality, so you get a more faithful reproduction of the original sound. In this case, the speaker calibration made with MCACC is invalid.

SURR button

By pressing repeatedly you can select the audio format of the signals being input and switch between a variety of listening modes. Select the mode that suits your preference. The selected listening mode is displayed on the display.

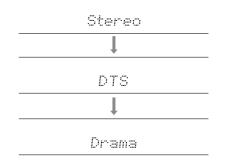

STEREO button


You can select the "Stereo" mode to playback only from the front speakers and subwoofer.

For details on the effects of each of the listening modes see "Listening Mode Effects". For listening modes selectable for each of the audio formats in the input signals, refer to "Input Formats and Selectable Listening Modes".

Checking the input format and listening mode

Pressing i repeatedly will switch the display of the main unit in the following order.

- The display content for the BLUETOOH input is different.
- Not all the information is necessarily displayed.

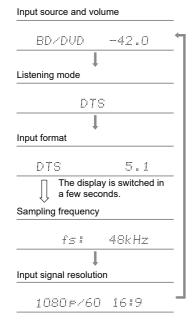

Speaker Layouts and Selectable Listening Modes

See the following table for selectable listening modes for each speaker layout.

	Speak	er layo	ut (ch)													
Listening mode	2.1	3.1	4.1	5.1	6.1	7.1	2.1.2	3.1.2	4.1.2	5.1.2	6.1.2	7.1.2	4.1.4	5.1.4	6.1.4	7.1.4
DD (Dolby Audio - DD)		√ (*1)	√ (*1)	√ (*1)	√ (*2)	√ (*2)		√ (*2)								
DD+ (Dolby Audio - DD+)		√ (*1)	✓ (*1)													
DTHD (Dolby Audio - TrueHD)		√ (*1)														
I Atmos					~	~	~	~	~	~	~	~	~	~	~	~
Atmos 2.0/2.1	~															
Atmos 3.0/3.1		~														
Atmos 4.0/4.1			~													
Atmos 5.0/5.1				~												
Atmos 6.0/6.1					~											
Atmos 7.0/7.1						~										
Atmos 2.0.2/2.1.2							~									
Atmos 3.0.2/3.1.2								~								
🗖 Dsur (Dolby Audio - Surr)	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~
🗖 Dsur 2.0/2.1 (Dolby Audio - Surr)	~															
🗖 Dsur 3.0/3.1 (Dolby Audio - Surr)		~														
🗖 Dsur 4.0/4.1 (Dolby Audio - Surr)			~													
🗖 Dsur 5.0/5.1 (Dolby Audio - Surr)				~												
🗖 Dsur 6.0/6.1 (Dolby Audio - Surr)					~											
🗖 Dsur 7.0/7.1 (Dolby Audio - Surr)						~										
Dsur 2.0.2/2.1.2 (Dolby Audio - Surr)							~									
Dsur 3.0.2/3.1.2 (Dolby Audio - Surr)								~								

	Speak	Speaker layout (ch)														
Listening mode	2.1	3.1	4.1	5.1	6.1	7.1	2.1.2	3.1.2	4.1.2	5.1.2	6.1.2	7.1.2	4.1.4	5.1.4	6.1.4	7.1.4
DTS		~	~	~	~	~		√ (*3)								
ES Discrete (DTS-ES Discrete)					~	~										
ES Matrix (DTS-ES Matrix)					~	V										
DTS 96/24		~	~	~	~	~		√ (*3)								
DTS-HD HR (DTS-HD High Resolution)		~	~	~	~	V		~	~	~	~	~	~	~	~	~
DTS-HD Master (DTS-HD Master Audio)		~	~	~	~	~		~	~	~	~	~	~	~	~	~
DTS Express		~	~	~	~	~		~	~	~	~	~	~	~	~	~
DTS:X		~	~	~	~	~	~	~	~	~	~	~	~	~	~	~
DTS Neural:X	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	V

	Speak	er layoi	ut (ch)													
Listening mode	2.1	3.1	4.1	5.1	6.1	7.1	2.1.2	3.1.2	4.1.2	5.1.2	6.1.2	7.1.2	4.1.4	5.1.4	6.1.4	7.1.4
PCM	~	√ (*1)	√ (*3)													
DSD		√ (*1)	√ (*1)	√ (*1)	√ (*2)	√ (*2)		√ (*2)								
Stereo	~	√ (*4)														
Mono	~	√ (*4)														
Ext.Mono		~	~	~	~	~	~	~	~	~	~	~	~	~	~	~
Ext.Stereo		~	~	~	~	~	~	~	~	~	~	~	~	~	~	~
Classical			~	~	~	~	~	~	~	~	~	~	~	~	~	~
Ent.Show (Entertainment Show)			~	~	~	~	~	~	~	~	~	~	~	~	~	~
Drama			~	~	~	~	~	~	~	~	~	~	~	~	~	~
Unplugged			~	~	~	~	~	~	~	~	~	~	~	~	~	~
Action			~	~	~	~	~	~	~	~	~	~	~	~	~	~
AdvancedGame			~	~	~	~	~	~	~	~	~	~	~	~	~	~
Rock/Pop			~	~	~	~	~	~	~	~	~	~	~	~	~	~
Sports			~	~	~	~	~	~	~	~	~	~	~	~	~	~
F.S.Surround (Front Stage Surround)	~	~	√ (*4)	√ (*5)												

*1: Reproduced with the sound field according to the number of channels of input signals.

*2: Not output from surround back speakers or height speakers.

*3: Not output from height speakers.

*4: Output only from front speakers.*5: Output only from front speakers and center speaker.

Listening Mode Effects

Updating of listening modes

Listening modes such as \square Atmos 2.0 and \square DSur 2.0 are added when the firmware is updated after purchase or the firmware is switched in the product production process. For details of firmware update, see "Additional Function (Firmware Update)" ($\rightarrow p6$).

In alphabetical order

Action

Mode suitable for movies with a lot of action scenes.

AdvancedGame

Mode suitable for game content.

Classical

Suitable for classical or operatic music. This mode emphasizes the surround channels in order to widen the sound image, and simulates the natural reverberation of a large hall.

Atmos

(Firmware version before supporting 🗖 Atmos 2.0, etc.)

Selectable at the time of inputting Dolby Atmos audio format when surround back speakers or height speakers are connected. This mode faithfully reproduces the stereophonic sound design recorded in the Dolby Atmos audio format. Unlike existing surround systems, Dolby Atmos does not rely on channels, but rather enables the accurate placement of sound objects that have independent motion in a 3D space with even greater clarity. Dolby Atmos is an optional audio format for Blu-ray Discs and achieves a more stereophonic sound field by introducing a sound field above the listener.

 To enable transfer of this audio format, connect via an HDMI cable and set the audio output on the player to Bitstream output.

Atmos

(Firmware version supporting 🗖 Atmos 2.0, etc.)

Since this mode calculates the positional data of audio recorded in Dolby Atmos audio in real-time and outputs it from appropriate speakers, you can enjoy the natural and stereophonic sound field of Dolby Atmos with any speaker layout including connection of only front speakers. Also, the Dolby Atmos sound design can be reproduced more faithfully by connecting surround back speakers or height speakers. You can select this mode when inputting the Dolby Atmos audio format. Unlike existing surround systems, Dolby Atmos does not rely on channels, but rather enables the accurate placement of sound objects that have independent motion in a 3D space with even greater clarity. Dolby Atmos is an optional audio format for Blu-ray Discs and achieves a more stereophonic sound field by introducing a sound field above the listener.

According to the speaker layout, the following listening modes are displayed.

- Atmos 2.0/2.1: When only front speakers are installed
- Atmos 3.0/3.1: When front speakers and center speaker are installed
- Atmos 4.0/4.1: When front speakers and surround speakers are installed
- Atmos 5.0/5.1: When front speakers, center speaker and surround speakers are installed
- Atmos 6.0/6.1: When front speakers, surround speakers and surround back speakers are installed
- — Atmos 7.0/7.1: When front speakers, center speaker, surround speakers and surround back speakers are installed
- Atmos 2.0.2/2.1.2: When front speakers and height speakers are installed
- Atmos 3.0.2/3.1.2: When front speakers, center speaker and height speakers are installed
- Atmos: Selectable in the "4.1.2 ch", "5.1.2 ch", "6.1.2 ch", "7.1.2 ch", "4.1.4 ch", "5.1.4 ch", "6.1.4 ch" or "7.1.4 ch" setting with surround speakers and height speakers installed.
- To enable transfer of this audio format, connect via an HDMI cable and set the audio output on the player to Bitstream output.
- When "Speaker Virtualizer" (→<u>p155</u>) is set to "Off" (Default: On), modes other than **II** Atmos cannot be selected.

DD (Dolby Audio - DD)

This mode faithfully reproduces the sound design recorded in the Dolby Digital audio format.

Dolby Digital is a multi-channel digital format developed by Dolby Laboratories, Inc. and is widely adopted for use in movie production. It is also a standard audio format for DVD-Video and Blu-ray Discs. It is possible to record a maximum of 5.1 channels on a DVD-Video or Blu-ray Disc; two front channels, one center channel, two surround channels, and the LFE channel dedicated to the bass region (sound elements for the subwoofer).

• To enable transfer of this audio format, connect via a digital cable and set audio output on the player to Bitstream output.

DD+ (Dolby Audio - DD+)

This mode faithfully reproduces the sound design recorded in the Dolby Digital Plus audio format.

The Dolby Digital Plus format has been improved based on Dolby Digital, increasing the number of channels and endeavoring to improve sound quality by giving more flexibility in data bit rates. Dolby Digital Plus is an optional audio format based on 5.1 ch for Blu-ray Discs. It is possible to record a maximum of 7.1 channels with additional channels such as the surround back channel.

 To enable transfer of this audio format, connect via an HDMI cable and set audio output on the player to Bitstream output.

DSur (Dolby Audio - Surr)

(Firmware version before supporting DSur 2.0, etc.)

This listening mode expands actual channels to more channels for playback according to the configuration of the connected speakers by expanding the input signals from 2 ch or 5.1 ch to 5.1 ch, 7.1 ch or 5.1.2 ch.

• This mode cannot be selected when DTS signal is input.

DSur (Dolby Audio - Surr)

(Firmware version supporting DSur 2.0, etc.)

This listening mode expands 2 ch or 5.1 ch input signals to 5.1 ch, 7.1 ch or 5.1.2 ch. This mode expands actual channels to more channels for playback according to the configuration of the connected speakers. Also, even if there is no speaker for expansion, for example when only front speakers are connected, audio of

surround channel or height channel is virtually created for expansion playback.

• This mode cannot be selected when DTS signal is input.

According to the speaker layout, the following listening modes are displayed.

- DSur 2.0/2.1: When only front speakers are installed
- DSur 3.0/3.1: When front speakers and center speaker are installed
- DSur 4.0/4.1: When front speakers and surround speakers are installed
- DSur 5.0/5.1: When front speakers, center speaker and surround speakers are installed
- DSur 6.0/6.1: When front speakers, surround speakers and surround back speakers are installed
- DSur 7.0/7.1: When front speakers, center speaker, surround speakers and surround back speakers are installed
- DSur 2.0.2/2.1.2: When front speakers and height speakers are installed
- DSur 3.0.2/3.1.2: When front speakers, center speaker and height speakers are installed
- When "Speaker Virtualizer" (→p155) is set to "Off" (Default: On), modes other than II DSur cannot be selected.

DTHD (Dolby Audio - TrueHD)

This mode faithfully reproduces the sound design recorded in the Dolby TrueHD audio format.

The Dolby TrueHD audio format is a "lossless" format expanded based on the lossless compression technology referred to as MLP, and it faithfully reproduces the master audio recorded in the studio. Dolby TrueHD is an optional audio format based on 5.1 ch for Blu-ray Discs. It is possible to record a maximum of 7.1 channels with additional channels such as the surround back channel. 7.1 ch is recorded at 96 kHz/24 bit, and 5.1 ch is recorded at 192 kHz/24 bit.

• To enable transfer of this audio format, connect via an HDMI cable and set audio output on the player to Bitstream output.

Drama

Suitable for TV shows produced in a TV studio. This mode enhances the surround effects to the entire sound to give clarity to voices and create a realistic acoustic image.

DSD

This mode is suitable for playing sources recorded in DSD.

- This unit supports the DSD signal input from the HDMI input terminal. However, depending on the connected player, better sound may be obtained by setting the output on the player side to the PCM output.
- This listening mode cannot be selected if the output setting on your Blu-ray Disc/DVD player is not set to DSD.

DTS

This mode faithfully reproduces the sound design recorded in the DTS audio format.

The DTS audio format is a multi-channel digital format developed by DTS, Inc. This format is an optional audio format for DVD-Video and a standard format for Blu-ray Discs. It enables recording of 5.1 channels; two front channels, one center channel, two surround channels, and the LFE channel dedicated to the bass region (sound elements for the subwoofer). The content is recorded with a rich volume of data, with a maximum sampling rate of 48 kHz, at a resolution of 24 bits and a bit rate of 1.5 Mbps.

• To enable transfer of this audio format, connect via a digital cable and set audio output on the player to Bitstream output.

DTS 96/24

This mode faithfully reproduces the sound design recorded in the DTS 96/24 audio format.

The DTS 96/24 format is an optional audio format for DVD-Video and Blu-ray Discs. It enables recording of 5.1 channels; two front channels, one center channel, two surround channels, and the LFE channel dedicated to the bass region (sound elements for the subwoofer). Detailed reproduction is achieved by recording the content at a sampling rate of 96 kHz and at a resolution of 24 bits.

• To enable transfer of this audio format, connect via a digital cable and set audio output on the player to Bitstream output.

DTS Express

This mode faithfully reproduces the sound design recorded in the DTS Express audio format.

DTS Express is an optional audio format based on 5.1 ch for Blu-ray Discs. It is possible to record a maximum of 7.1 channels with additional channels such as the surround back channel. It also supports low bit rates.

• To enable transfer of this audio format, connect via an HDMI cable and set audio output on the player to Bitstream output.

DTS-HD HR (DTS-HD High Resolution)

This mode faithfully reproduces the sound design recorded in the DTS-HD High Resolution Audio audio format.

DTS-HD High Resolution Audio is an optional audio format based on 5.1 ch for Blu-ray Discs. It is possible to record a maximum of 7.1 channels with additional channels such as the surround back channel at a sampling rate of 96 kHz and at a resolution of 24 bits.

• To enable transfer of this audio format, connect via an HDMI cable and set audio output on the player to Bitstream output.

DTS-HD MSTR (DTS-HD Master Audio)

This mode faithfully reproduces the sound design recorded in the DTS-HD Master Audio audio format.

DTS-HD Master Audio is an optional audio format based on 5.1 ch for Bluray Discs. It is possible to record a maximum of 7.1 channels with additional channels such as the surround back channel using the lossless audio reproduction technology. 96 kHz/24 bit is supported for 7.1 ch, and 192 kHz/24 bit is supported for 5.1 ch.

• To enable transfer of this audio format, connect via an HDMI cable and set audio output on the player to Bitstream output.

DTS Neural:X

This listening mode expands actual channels to more channels for playback to suit the configuration of the connected speakers by expanding the input signals from 2 channels or 5.1 channels to 5.1 channels or 7.1 channels respectively.

· This mode cannot be selected when Dolby signal is input.

DTS:X

This mode faithfully reproduces the sound design recorded in the DTS:X audio format. The DTS:X audio format is a combination of the mixing method based on traditional channel based formats (5.1 ch and 7.1 ch) and object based dynamic audio mixing, and it is characterized by the precise positioning of sounds and the ability to express sound movement.

• To enable transfer of this audio format, connect via an HDMI cable and set audio output on the player to Bitstream output.

ES Discrete (DTS-ES Discrete)

This mode faithfully reproduces the sound design recorded in the DTS-ES Discrete audio format.

DTS-ES Discrete is an optional audio format based on 5.1 ch for DVD-Video and Blu-ray Discs. It is possible to record a maximum of 6.1 channels with a monaural surround back channel added.

• To enable transfer of this audio format, connect via a digital cable and set audio output on the player to Bitstream output.

ES Matrix (DTS-ES Matrix)

This mode faithfully reproduces the sound design recorded in the DTS-ES Matrix audio format.

DTS-ES Matrix is an optional audio format based on 5.1 ch for DVD-Video and Blu-ray Discs. A monaural surround back channel is inserted to this format by matrix encoding. During playback, 6.1 channel-playback is achieved by the matrix decoder on this unit.

• To enable transfer of this audio format, connect via a digital cable and set audio output on the player to Bitstream output.

Ent.Show (Entertainment Show)

Suitable for rock or pop music. Listening to music in this mode creates a lively sound field with a powerful acoustic image, like being at a club or rock concert.

Ext.Mono (Extended Mono)

In this mode, all speakers output the same sound in mono, so the sound you hear is the same regardless of where you are within the listening room.

Ext.Stereo (Extended Stereo)

This mode is ideal for background music. Stereo sound is played through the surround speakers as well as the front speakers, creating a stereo image.

F.S.Surround (Front Stage Surround)

In this mode, you can enjoy a virtual playback of multichannel surround sound even with only two or three speakers. This works by controlling how sounds reach the listener' s left and right ears.

 This mode cannot be selected when "Speaker Virtualizer" (→p155) is set to "Off" (Default: On).

Mono

In this mode, monaural audio is played from the center speaker at the time of inputting an analog signal or PCM signal. If there is no center speaker connected, monaural audio is played from the front speakers.

PCM

Mode suitable for playing sources recorded in multichannel PCM.

Rock/Pop

Mode suitable for rock content.

Sports

Mode suitable for sport content.

Stereo

In this mode, sound is output from the right and left front speakers and subwoofer.

Unplugged

Suitable for acoustic instruments, vocals and jazz. This mode emphasizes the front sound field image, giving the impression of being in front of the stage.

Input Format

Input Formats and Selectable Listening Modes

You can select a variety of listening modes according to the audio format of the signal to be input.

- The Stereo mode can be selected with any audio format.
- When analog signals are being input in the Pure Direct mode, the modes switches to the Analog Direct mode which passes signals directly to the amplifier without passing through the DSP (Digital Signal Processor).
- Listening modes available when headphones are connected are Pure Direct and Stereo only.

Selectable listening modes

In the former of	Listaning Made	PCM	Stereo
Input Format	Listening Mode	Music files (except DSD)	Mono
Analog	Stereo		DSur
	Mono		DTS Neural:X*1
	DSur		Classical*2
	DTS Neural:X		Unplugged*2
	Classical*1		1 00
	Unplugged*1	-	Ent.Show*2
	Ent.Show*1		Drama*2
	Drama ^{*1}		AdvancedGame*2
	AdvancedGame*1		Action*2
	Action*1		Rock/Pop*2
			Sports*2
	Rock/Pop*1		Ext.Stereo*3
	Sports*1		Ext.Mono*3
	Ext.Stereo*2		F.S.Surround*4
	Ext.Mono*2	^{*1} Cannot be selected when the inp	
	F.S.Surround*3	*2 Surround speakers or height spe	akers need to be installed.
	ght speakers need to be installed.	installed.	kers, or height speakers need to be

² A center speaker, surround speakers, or height speakers need to be installed.

^{*3} Cannot be selected if "Speaker Virtualizer" is set to "Off".

*4 Cannot be selected if "Speaker Virtualizer" is set to "Off".

Listening Mode

❑ Speaker Layouts and Selectable Listening Modes (→p129)

Contents >> Connections >> Playback >> Setup >>

nput Format	Listening Mode	Input Format	Listening Mode	Input Format	Listening Mode			
Multich PCM	Stereo	DSD	Stereo	Atmos ^{*1}	Stereo			
	PCM*1	You cannot select any	DSD*1 *2		Atmos			
DSur DTS Neural:X Classical*2 Unplugged*2 Ent.Show*2 Drama*2	mode other than Pure Direct, Stereo, Ext.	DSur		Classical				
	Stereo and Ext.Mono	DTS Neural:X		Unplugged				
	if the sampling rate is	Classical*3		Ent.Show				
	5.6/11.2 MHz.	Unplugged*3		Drama				
	Ent.Show*2		Ent.Show*3		AdvancedGame			
	Drama ^{*2}		Drama ^{*3}		Action			
	AdvancedGame*2		AdvancedGame*3		Rock/Pop			
	Action*2		Action*3		Sports			
	Rock/Pop*2		Rock/Pop*3		Ext.Stereo			
	Sports*2		Sports*3		Ext.Mono			
	Ext.Stereo*3		Ext.Stereo*4		F.S.Surround*2			
	Ext.Mono*3		Ext.Mono*4		before supporting 🗖 Atmos 2.0, etc., you ca			
F.S.Surround ^{*4}			F.S.Surround ^{∗5}		select the X DD+ or X DTHD listening mode when surround back speakers or height speakers are not connected.			

*3 A center speaker, surround speakers, or height speakers need to be installed.

^{*4} Cannot be selected if "Speaker Virtualizer" is set to "Off".

³ Surround speakers or height speakers need to be installed.
 ⁴ A center speaker, surround speakers, or height speakers need to be

installed.

*5 Cannot be selected if "Speaker Virtualizer" is set to "Off".

❑ Speaker Layouts and Selectable Listening Modes (→p129)

Contents Connections Playback Setup

Input Format	Listening Mode	Input Format	Listening Mode	Input Format	Listening Mode
DD	Stereo	DD+	Stereo	DTHD	Stereo
	DD*1*2		DD+*1 *2 *3		DTHD*1*2
	DSur		DSur		DSur
	Classical ^{*3}	Classical ^{*4}		Classical*3	
Unplugged ^{*3} Ent.Show ^{*3} Drama ^{*3}		Unplugged ^{*4}		Unplugged ^{*3}	
		Ent.Show ^{*4}		Ent.Show*3	
	Drama ^{*3}		Drama⁺₄		Drama [*] 3
	AdvancedGame*3		AdvancedGame ^{*4}		AdvancedGame*3
	Action ^{*3}		Action [∗] 4		Action ^{*3}
Sport Ext.S Ext.M	Rock/Pop ^{*3}		Rock/Pop ^{∗₄}		Rock/Pop*3
	Sports [∗] ³		Sports ^{*4}		Sports*3
	Ext.Stereo [∗] 4		Ext.Stereo*5		Ext.Stereo*4
	Ext.Mono*4		Ext.Mono ^{⁺₅}		Ext.Mono*4
	F.S.Surround ^{∗₅}		F.S.Surround ^{*6}		F.S.Surround ^{⁵5}

*2 A center speaker or surround speakers need to be installed.

*3 Surround speakers or height speakers need to be installed.

^{*4} A center speaker, surround speakers, or height speakers need to be installed.

*5 Cannot be selected if "Speaker Virtualizer" is set to "Off".

^{*2} A center speaker or surround speakers need to be installed. ^{*3} If the input source is Blu-ray Disc and the speaker layout is 5.1ch or less,

DD+ cannot be selected. Instead, the listening mode for DD can be selected.

- *4 Surround speakers or height speakers need to be installed.
- *5 A center speaker, surround speakers, or height speakers need to be installed.
- *6 Cannot be selected if "Speaker Virtualizer" is set to "Off".

*2 A center speaker or surround speakers need to be installed.

*3 Surround speakers or height speakers need to be installed.

*4 A center speaker, surround speakers, or height speakers need to be installed.

*5 Cannot be selected if "Speaker Virtualizer" is set to "Off".

□ Speaker Layouts and **Selectable Listening Modes** (→p129)

Input Format	Listening Mode	Input Format	Listening Mode	Input Format	Listening Mode
DTS	Stereo	DTS 96/24	Stereo	DTS Express	Stereo
	DTS*1*2		DTS 96/24*1*2	-	DTS Express ^{*1 *2}
	DTS Neural:X*3		DTS Neural:X*3	-	DTS Neural:X*3
	Classical ^{*4}		Classical ^{*4}	-	Classical ^{*4}
	Unplugged ^{*4}		Unplugged*4	-	Unplugged*4
Ent.Show ^{*4} Drama ^{*4} AdvancedGame ^{*4}		Ent.Show*4		Ent.Show*4	
		Drama*4	-	Drama ^{*4}	
	AdvancedGame*4	_	AdvancedGame*4	-	AdvancedGame*4
	Action ^{*4}		Action ^{*4}		Action ^{*4}
	Rock/Pop ^{*4}		Rock/Pop*4	-	Rock/Pop ^{*4}
	Sports*4		Sports ^{*4}	-	Sports*4
	Ext.Stereo*5		Ext.Stereo*5		Ext.Stereo*5
	Ext.Mono*5		Ext.Mono ^{∗₅}		Ext.Mono*5
	F.S.Surround ^{*6}		F.S.Surround ^{*6}	-	F.S.Surround ^{*6}
 ^{*3} Cannot be selected when ^{*4} Surround speakers or hei ^{*5} A center speaker, surrour installed. 	the input format is 2 ch. und speakers need to be installed. the input format is monaural. ight speakers need to be installed. ind speakers, or height speakers need to be eaker Virtualizer" is set to "Off".	¹² A center speaker or surrou ¹³ Cannot be selected when ¹⁴ Surround speakers or heig ¹⁵ A center speaker, surroun installed.	IF.S.SUITOUND IF.S.SUITOUND ad when the input format is 2 ch. '1 Cannot be selected when the input format i or surround speakers need to be installed. '2 A center speaker or surround speakers need of when the input format is monaural. '2 Cannot be selected when the input format i s or height speakers need to be installed. '4 Surround speakers or height speakers need surround speakers, or height speakers need to be '4 Surround speakers, or height speak		und speakers need to be installed. the input format is monaural. ght speakers need to be installed. d speakers, or height speakers need to be

□ Speaker Layouts and Selectable Listening Modes (→p129)

Input Format	Listening Mode	Input Format	Listening Mode	Input Format	Listening Mode	
DTS-HD HR	Stereo	DTS-HD MSTR	Stereo	DTS-ES	Stereo	
	DTS-HD HR*1 *2		DTS-HD MSTR*1 *2	-	DTS*1	
	DTS Neural:X*3		DTS Neural:X*3	_	ES Matrix*2	
	Classical*4		Classical ^{*4}	-	ES Discrete ^{*2}	
	Unplugged*4	_	Unplugged ^{*4}	_	DTS Neural:X	
	Ent.Show*4		Ent.Show*4		Classical*3	
	Drama ^{*4} AdvancedGame ^{*4} Action ^{*4}		Drama ^{*4}	-	Unplugged*3	
			AdvancedGame*4		Ent.Show*3	
		_	Action ^{*4}		Drama*3	
	Rock/Pop*4		Rock/Pop*4		AdvancedGame*3	
	Sports*4		Sports*4	_	Action*3	
	Ext.Stereo*5		Ext.Stereo*5		Rock/Pop*3	
	Ext.Mono*5		Ext.Mono*5	_	Sports*3	
	F.S.Surround ^{*6}		F.S.Surround ^{*6}		Ext.Stereo*4	
Cannot be selected when	the input format is 2 ch. und speakers need to be installed.	^{*1} Cannot be selected when t	he input format is 2 ch. nd speakers need to be installed.		Ext.Mono*4	
Cannot be selected when	the input format is monaural.	*3 Cannot be selected when t	he input format is monaural.		F.S.Surround ^{∗₅}	
 ¹³ Cannot be selected when the input format is monaural. ⁴⁴ Surround speakers or height speakers need to be installed. ¹⁵ A center speaker, surround speakers, or height speakers need to be installed. ¹⁶ Cannot be selected if "Speaker Virtualizer" is set to "Off". 		*5 A center speaker, surround installed.	ht speakers need to be installed. speakers, or height speakers need to be aker Virtualizer" is set to "Off".	 ¹¹ This can only be selected when no surround back speaker is conne ²² Surround back speakers need to be installed. ³³ Surround speakers or height speakers need to be installed. ⁴⁴ A center speaker surround speakers, or height speakers peed to be 		

^{*4} A center speaker, surround speakers, or height speakers need to be installed.

*5 Cannot be selected if "Speaker Virtualizer" is set to "Off".

❑ Speaker Layouts and Selectable Listening Modes (→p129)

Input Format	Listening Mode
DTS:X	Stereo
	DTS:X
	Classical ^{*1}
	Unplugged*1
	Ent.Show*1
	Drama*1
	AdvancedGame*1
	Action ^{*1}
	Rock/Pop*1
	Sports*1
	Ext.Stereo*2
	Ext.Mono*2
	F.S.Surround*3

*1 Surround speakers or height speakers need to be installed.

^{*2} A center speaker, surround speakers, or height speakers need to be installed.


*3 Cannot be selected if "Speaker Virtualizer" is set to "Off".


❑ Speaker Layouts and Selectable Listening Modes (→p129)

Inputting Characters

You can input characters or symbols on the keyboard displayed on the TV screen such as when inputting a password for Wi-Fi Setup ($\rightarrow p176$) or naming a preset radio station ($\rightarrow p157$).

- 1. Select a character or symbol with the cursors ▲ / ▼ / ◀ / ▶ on the remote controller and press the ENTER button.
- 2. When saving characters after input, select "OK" and press the ENTER button.

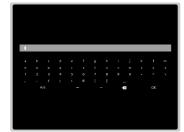

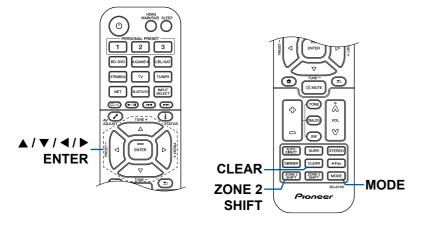

- Select "A/a" to switch between upper and lower cases. (Can also be switched with the MODE button on the remote controller.)
- To enter a space, select "u".
- To delete a character on the left of the cursor, select "I".
- To delete all the input characters, press the CLEAR button on the remote control.
- On the ZONE 2 playback screen, operate the remote controller while pressing and holding the ZONE 2 SHIFT button. To delete all the input characters, only press the CLEAR button without pressing the ZONE 2 SHIFT button.

System Setup


Menu list

You can configure advanced settings to have a more enjoyable experience with this unit. For operation details, refer to "Menu operations" ($\rightarrow p145$).

Input/Output	TV Out / OSD	Make settings for TV output and On-Screen Displays (OSD) that appear on the TV.	p146
Assign	HDMI Input	Change input assignment between the input selectors and HDMI IN jacks.	<u>p147</u>
	Video Input	Change input assignment between the input selectors and COMPONENT VIDEO IN jacks and the VIDEO IN jacks.	<u>p147</u>
	Digital Audio Input	Change input assignment between the input selectors and DIGITAL IN COAXIAL/OPTICAL jacks.	<u>p147</u>
	Analog Audio Input	Change input assignment between the input selectors and AUDIO IN jacks.	<u>p148</u>
	Input Skip	You can skip inputs to which nothing is connected when selecting them with the INPUT SELECTOR dial on the main unit or with the input selectors on the remote controller.	<u>p148</u>
	PERSONAL PRESET Information	Confirm the registered contents of PERSONAL PRESET.	<u>p149</u>
Speaker	Configuration	Change the settings of connection environment of the speakers.	<u>p150</u>
	Crossover	Change the settings of crossover frequencies.	<u>p151</u>
	Distance	Set the distance from each speaker to the listening position.	<u>p153</u>
	Channel Level	Adjust the volume level of each speaker.	<u>p154</u>
	Dolby Enabled Speaker	Change the settings of Dolby Enabled Speakers.	<u>p155</u>
	Speaker Virtualizer	The Speaker Virtualizer function can be switched between On and Off.	<u>p155</u>
Audio Adjust	Dual Mono/Mono	Change the settings of multiplex audio playback.	<u>p155</u>
-	Dolby	Change the setting of when Dolby signals are input.	p156
	DTS	Change the setting of when DTS signals are input.	p156
	Volume	Change the Volume settings.	<u>p156</u>

Source	Input Volume Absorber	Adjust the volume level when there are differences in volume level among multiple devices connected to this unit.	<u>p157</u>
	Name Edit	Set an easy name for each input.	<u>p157</u>
	Audio Select	Select the priority for input selection when multiple audio sources are connected to one input selector.	<u>p158</u>
Hardware	HDMI	Change the settings for the HDMI functions.	<u>p159</u>
	Power Management	Change the settings for the power-save function.	<u>p160</u>
	12V Trigger A	Change the settings for 12V TRIGGER OUT A port.	<u>p162</u>
	12V Trigger B	Change the settings for 12V TRIGGER OUT B port.	<u>p163</u>
	Works with SONOS	Change the settings to connect with the Sonos Connect.	<u>p165</u>
Multi Zone	Zone 2	Change the settings for Zone 2.	<u>p166</u>
	Zone 3	Change the settings for Zone 3.	p167
	Remote Play Zone	Change the settings for remote play.	<u>p167</u>
Miscellaneous	Tuner	Change the frequency step for the tuner.	<u>p168</u>
	Remote ID	Change the remote controller ID.	p168
	Firmware Update	Change the settings for Firmware Update.	<u>p168</u>
	Initial Setup	Make the initial setup from the setup menu.	<u>p168</u>
	Lock	Lock the Setup menu so that the settings cannot be changed.	<u>p169</u>
	Factory Reset	All the settings are restored to factory defaults.	<u>p169</u>

Menu operations

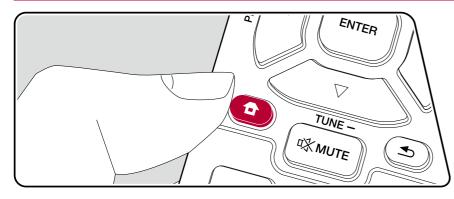



Select the item with the cursor $\blacktriangle / \lor / \blacklozenge / \blacklozenge$ buttons of the remote controller and press ENTER to confirm your selection.

Use the cursors $\triangleleft / \triangleright$ to change the default values.

- To return to the previous screen, press ≤.
- To exit the settings, press **1**.

Input/Output Assign

TV Out / OSD

Make settings for TV output and On-Screen Displays (OSD) that appear on the TV.

Setting Item	Default Value	Setting Details
HDMI Out	MAIN	Select the HDMI jack to be connected with the TV. "MAIN": When connecting the TV to the HDMI OUT MAIN jack "SUB": When connecting the TV to the HDMI OUT SUB jack "MAIN+SUB": When connecting to both the MAIN and SUB jacks • If devices with different resolutions are connected to HDMI OUT MAIN jack and SUB jack, images are output with the lower resolution.
Dolby Vision	MAIN	To output Dolby Vision video from the player to a TV that supports Dolby Vision, select either the HDMI OUT MAIN jack or HDMI OUT SUB jack to which the Dolby Vision-supported TV is connected. This setting is only necessary if you have set "HDMI Out" to "MAIN+SUB" and you have connected a TV to both the MAIN and SUB jacks. "MAIN": To output Dolby Vision video to a Dolby Vision-supported TV connected to the HDMI OUT MAIN jack. "SUB": To output Dolby Vision video to a Dolby Vision-supported TV connected to the HDMI OUT SUB jack. • After selecting "MAIN" or "SUB", if the video on the TV does not appear correctly, set this to "Off".

Setting Item	Default Value	Setting Details
1080p -> 4K Upscaling	Off	 When using a TV that supports 4K, video signals input at 1080p can be automatically upscaled to 4K for output. "Off": When this function is not to be used "Auto": When this function is to be used Select "Off" if your TV does not support 4K. If the TV does not support the 4K resolution with the same frequency as the frequency of HDMI input video signals, upscaling to 4K is not correctly performed. Check the frequency of 4K resolution supported by the TV, and change the resolution of the video signals input from the AV component.
Super Resolution	2	When you have set "1080p -> 4K Upscaling" to "Auto", you can select the degree of video signal correction from "Off" and between "1" (weak) and "3" (strong).
Zone 2 HDMI	Not Use	 Make the setting when you output to the Zone 2 TV connected to the HDMI OUT ZONE 2/SUB jack. "Use": Enable this function "Not Use": Disable this function When video and audio via HDMI input are output to ZONE 2, set to "Use".
OSD Language	English	Select the on-screen display language from the following. (North American models) English, German, French Spanish, Italian, Dutch, Swedish (European, Australian and Asian models) English, German, French, Spanish, Italian, Dutch, Swedish, Russian, Chinese
Impose OSD	On	 Set whether or not to display information such as volume adjustment or switching of input on the TV screen. "On": OSD is displayed on the TV. "Off": OSD is not displayed on the TV. OSD may not be displayed depending on the input signal even if "On" is selected. In this case, change the resolution of the connected device.

Setting Item	Default Value	Setting Details
Screen Saver	3 minutes	Set the time to start the screen saver. Select a value from "3 minutes", "5 minutes", "10 minutes" and "Off".

HDMI Input

Change input assignment between the input selectors and HDMI IN jacks.

Setting Item	Default Value	Setting Details
BD/DVD	HDMI 1 (HDCP 2.2)	"HDMI 1 (HDCP 2.2)" to "HDMI 4 (HDCP 2.2)": Assign a desired HDMI IN jack to the BD/DVD input selector. If you do not assign a jack, select "". To select an HDMI IN jack already assigned to another input selector, change its setting to "" first.
GAME	HDMI 2 (HDCP 2.2)	"HDMI 1 (HDCP 2.2)" to "HDMI 4 (HDCP 2.2)": Assign a desired HDMI IN jack to the GAME input selector. If you do not assign a jack, select "". To select an HDMI IN jack already assigned to another input selector, change its setting to "" first.
CBL/SAT	HDMI 3 (HDCP 2.2)	"HDMI 1 (HDCP 2.2)" to "HDMI 4 (HDCP 2.2)": Assign a desired HDMI IN jack to the CBL/SAT input selector. If you do not assign a jack, select "". To select an HDMI IN jack already assigned to another input selector, change its setting to "" first.
STRM BOX	HDMI 4 (HDCP 2.2)	"HDMI 1 (HDCP 2.2)" to "HDMI 4 (HDCP 2.2)": Assign a desired HDMI IN jack to the STRM BOX input selector. If you do not assign a jack, select "". To select an HDMI IN jack already assigned to another input selector, change its setting to "" first.

Video Input

Change input assignment between the input selectors and COMPONENT VIDEO IN jacks and the VIDEO IN jacks. If you do not assign a jack, select "---".

Setting Item	Default Value	Setting Details
BD/DVD	COMPONENT	"COMPONENT": Assign the COMPONENT VIDEO IN jacks to the BD/DVD input selector. "VIDEO 1", "VIDEO 2": Assign a desired VIDEO IN jack to the BD/DVD input selector.
GAME		"COMPONENT": Assign the COMPONENT VIDEO IN jacks to the GAME input selector. "VIDEO 1", "VIDEO 2": Assign a desired VIDEO IN jack to the GAME input selector.
CBL/SAT	VIDEO 1	"COMPONENT": Assign the COMPONENT VIDEO IN jacks to the CBL/SAT input selector. "VIDEO 1", "VIDEO 2": Assign a desired VIDEO IN jack to the CBL/SAT input selector.
STRM BOX	VIDEO 2	"COMPONENT ": Assign the COMPONENT VIDEO IN jacks to the STRM BOX input selector. "VIDEO 1", "VIDEO 2": Assign a desired VIDEO IN jack to the STRM BOX input selector.

Digital Audio Input

Change input assignment between the input selectors and DIGITAL IN COAXIAL/ OPTICAL jacks. If you do not assign a jack, select "---".

Setting Item	Default Value	Setting Details
BD/DVD		"COAXIAL", "OPTICAL" : Assign a desired DIGITAL IN jack to the BD/DVD input selector.
GAME		"COAXIAL", "OPTICAL" : Assign a desired DIGITAL IN jack to the GAME input selector.
CBL/SAT		"COAXIAL", "OPTICAL" : Assign a desired DIGITAL IN jack to the CBL/SAT input selector.
STRM BOX		"COAXIAL", "OPTICAL" : Assign a desired DIGITAL IN jack to the STRM BOX input selector.
CD	COAXIAL	"COAXIAL", "OPTICAL" : Assign a desired DIGITAL IN jack to the CD input selector.

Setting Item	Default Value	Setting Details
TV		"COAXIAL", "OPTICAL" : Assign a desired DIGITAL IN jack to the TV input selector.

• Supported sampling rates for PCM signals (stereo, mono) from a digital input are 32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz/16 bit, 20 bit, and 24 bit.

Analog Audio Input

Change input assignment between the input selectors and AUDIO IN jacks. If you do not assign a jack, select "---".

Setting Item	Default Value	Setting Details
BD/DVD	AUDIO 1	"AUDIO 1" to "AUDIO 4": Assign a desired AUDIO IN jack to the BD/DVD input selector.
GAME		"AUDIO 1" to "AUDIO 4": Assign a desired AUDIO IN jack to the GAME input selector.
CBL/SAT	AUDIO 2	"AUDIO 1" to "AUDIO 4": Assign a desired AUDIO IN jack to the CBL/SAT input selector.
STRM BOX	AUDIO 3	"AUDIO 1" to "AUDIO 4": Assign a desired AUDIO IN jack to the STRM BOX input selector.
CD	AUDIO 4	"AUDIO 1" to "AUDIO 4": Assign a desired AUDIO IN jack to the CD input selector.
TV		"AUDIO 1" to "AUDIO 4": Assign a desired AUDIO IN jack to the TV input selector.

Input Skip

You can skip inputs to which nothing is connected when selecting them with the INPUT SELECTOR dial on the main unit or with the INPUT SELECT button on the remote controller.

Setting Item	Default Value	Setting Details
BD/DVD	Use	Set whether to skip the BD/DVD input selector. Select "Skip" to skip this input.
GAME	Use	Set whether to skip the GAME input selector. Select "Skip" to skip this input.
CBL/SAT	Use	Set whether to skip the CBL/SAT input selector. Select "Skip" to skip this input.

Setting Item	Default Value	Setting Details
STRM BOX	Use	Set whether to skip the STRM BOX input selector. Select "Skip" to skip this input.
HDMI 5	Use	Set whether to skip the HDMI 5 input selector. Select "Skip" to skip this input.
HDMI 6	Use	Set whether to skip the HDMI 6 input selector. Select "Skip" to skip this input.
AUX	Use	Set whether to skip the AUX input selector. Select "Skip" to skip this input.
CD	Use	Set whether to skip the CD input selector. Select "Skip" to skip this input.
TV	Use	Set whether to skip the TV input selector. Select "Skip" to skip this input.
PHONO	Use	Set whether to skip the PHONO input selector. Select "Skip" to skip this input.
TUNER	Use	Set whether to skip the TUNER input selector. Select "Skip" to skip this input.
NET	Use	Set whether to skip the NET input selector. Select "Skip" to skip this input.
USB FRONT	Use	Set whether to skip the USB FRONT input selector. Select "Skip" to skip this input.
USB REAR	Use	Set whether to skip the USB REAR input selector. Select "Skip" to skip this input.
BLUETOOTH	Use	Set whether to skip the BLUETOOTH input selector. Select "Skip" to skip this input.

PERSONAL PRESET Information

Confirm the registered contents of 1 to 3 buttons of PERSONAL PRESET. The registered settings are displayed in the list.

Setting Item	Default Value	Setting Details
Preset	Preset 1	Selects a preset number from among "Preset 1", "Preset 2" and "Preset 3".

(Main)

Setting Item	Default Value	Setting Details
Input Selector		Displays the input selector that has been set.
Network Service		Displays the Network Service that has been set.
Band		Displays the band, "AM" or "FM" that has been set.
Station		Displays the Preset Name of the radio station that has been set.
Listening Mode		Displays the listening mode that has been set.
Volume		Displays the volume level that has been set. (Upper limit "-32 dB")
Multi Zone		Displays the output destination (Multi Zone) that has been set.

• "Band" is displayed only when the input selector is set to "TUNER".

- "Station" is displayed only when the input selector is set to "TUNER" or "NET".
- "Network Service" is displayed only when the input selector is set to "NET".
- Preset Name of "Station" (only when the input selector is set to "TUNER") is displayed with the name set by "Source" "Name Edit". If the name is not set, the frequency of the radio station is displayed instead.

(Zone 2)

Setting Item	Default Value	Setting Details
Input Selector		Displays the input selector that has been set.
Network Service		Displays the Network Service that has been set.
Band		Displays the band, "AM" or "FM" that has been set.
Station		Displays the Preset Name of the radio station that
		has been set.

• "Band" is displayed only when the input selector is set to "TUNER".

• "Station" is displayed only when the input selector is set to "TUNER" or "NET".

- "Network Service" is displayed only when the input selector is set to "NET".
- Preset Name of "Station" (only when the input selector is set to "TUNER") is displayed with the name set by "Source" "Name Edit". If the name is not set, the frequency of the radio station is displayed instead.

(Zone 3)

Setting Item	Default Value	Setting Details
Input Selector		Displays the input selector that has been set.
Network Service		Displays the Network Service that has been set.
Band		Displays the band, "AM" or "FM" that has been set.
Station		Displays the Preset Name of the radio station that has been set.

• "Band" is displayed only when the input selector is set to "TUNER".

• "Station" is displayed only when the input selector is set to "TUNER" or "NET".

• "Network Service" is displayed only when the input selector is set to "NET".

• Preset Name of "Station" (only when the input selector is set to "TUNER") is displayed with the name set by "Source" - "Name Edit". If the name is not set, the frequency of the radio station is displayed instead.

Speaker

Configuration

Change the settings of connection environment of the speakers.

Setting Item	Default Value	Setting Details
Speaker Channels	7.1.2 ch	Select "2.1 ch", "3.1 ch", "4.1 ch", "5.1 ch", "6.1 ch", "7.1 ch", "2.1.2 ch", "3.1.2 ch", "4.1.2 ch", "5.1.2 ch", "6.1.2 ch", "7.1.2 ch", "4.1.4 ch", "5.1.4 ch", "6.1.4 ch" or "7.1.4 ch" to suit the number of speaker channels connected.
Subwoofer	Yes	Set whether a subwoofer is connected or not. "Yes": When a subwoofer is connected "No": When a subwoofer is not connected
Height 1 Speaker	Top Middle	 Set the speaker type if height speakers are connected to the HEIGHT 1 terminals. Select "Top Middle", "Top Rear", "Rear High", "Dolby Speaker (Front)", "Dolby Speaker (Surr)", "Dolby Speaker (Back)", "Front High" or "Top Front" according to the type and layout of the connected speakers. This setting cannot be selected under any of following conditions. Set the height speakers type to "Height 2 Speaker". "Bi-Amp" is set to "Yes" When "Speaker Channels" is set to "2.1.2 ch", "3.1.2 ch", "4.1.2 ch" or "5.1.2 ch", and "Zone Speaker" is set to "Zone 2" When two sets of height speakers are being used, "Top Rear", "Rear High", "Dolby Speaker (Back)" can only be selected when surround speakers or surround back speakers are being used, respectively. You can check speakers that you are using on the figure displayed in "Speaker Channels" is connection is correct, check that the settings in "Speaker Channels" matches the number of connected channels.

Setting Item	Default Value	Setting Details
Height 2 Speaker	Rear High	 Set the speaker type if height speakers are connected to the HEIGHT 2 terminals. Select "Front High", "Top Front", "Top Middle", "Top Rear", "Rear High", "Dolby Speaker (Front)", "Dolby Speaker (Surr)" or "Dolby Speaker (Back)" according to the type and layout of the connected speakers. However, the options selectable for the "Height 1 Speaker" is set to "Front High": Select from "Top Middle", "Top Rear", "Rear High", "Dolby Speaker (Surr)" or "Dolby Speaker (Back)". If "Height 1 Speaker" is set to "Front High": Select from "Top Middle", "Top Rear", "Rear High", "Dolby Speaker (Surr)" or "Dolby Speaker (Back)". If "Height 1 Speaker" is set to "Top Front" or "Dolby Speaker (Surr)" or "Dolby Speaker (Back)". If "Height 1 Speaker" is set to "Top Front" or "Dolby Speaker (Front)": Select from "Top Rear", "Rear High", "Dolby Speaker (Surr)" or "Dolby Speaker (Back)". If "Height 1 Speaker" is set to "Top Middle": Fixed to "Rear High". "Dolby Speaker (Surr)" and "Dolby Speaker (Back)". If "Height 1 Speaker" is selected when surround speakers or surround back speakers are being used, respectively. You can check speakers that you are using on the figure displayed in "Speaker Channels". If an item cannot be selected even though connection is correct, check that the settings in "Speaker Channels".

Setting Item	Default Value	Setting Details	Setting
Zone Speaker	No	 Set whether speakers are connected to Zone 2 or Zone 3 speaker terminals. "Zone 2": When speakers are connected to Zone 2 speaker terminals "Zone 2/Zone 3": When connecting speaker to both ZONE 2 speaker terminal and ZONE 3 speaker terminals. This setting cannot be selected under any of following conditions. When the surround back speakers are used When 2 sets of height speakers are used "No": When speakers are not connected to Zone 2 speaker terminals This setting cannot be selected when "Zone 2 speaker terminals 	Speake Impeda C Changu Setting Front
Zone 2 Preout	Zone 2	Set the output destination of the audio that is output from the ZONE 2 PRE/LINE OUT or ZONE B LINE OUT terminals. "Zone 2": When connecting a pre-main amplifier in a separate room (ZONE 2) "Zone B": When connecting a pre-main amplifier, transmitter of wireless headphones, etc. to ZONE B • This setting is fixed to "Zone 2" when "Zone Speaker" is set to "Zone 2" or "Zone 2/Zone 3".	
Bi-Amp	No	Set whether the front speakers are bi-amp connected. "No": When front speakers are not bi-amp connected "Yes": When front speakers are bi-amp connected • This setting will be set to "No" in either of following cases. – When 2 sets of height speakers are used – When surround back speakers and height speakers are being used at the same time. – When "Zone Speaker" is set to "Zone 2" or "Zone 2/Zone 3"	Center

Setting Item	Default Value	Setting Details
Speaker Impedance	6 ohms or above	Set the impedance (Ω) of the connected speakers. "4ohms": When any of the connected speakers have 4 Ω or more to less than 6 Ω impedance "6 ohms or above": When the connected speakers all have 6 Ω or more impedance • For impedance, check the indications on the back of the speakers or their instruction manual

Crossover

Change the settings of crossover frequencies.

Setting Item	Default Value	Setting Details
Front	Small	 Set the low range capabilities for each channel by setting either small or large. "Small": For small speakers whose low range capabilities may be limited "Large": For full-range speakers with sufficient low range capabilities If "Configuration" - "Subwoofer" is set to "No", "Front" will be fixed to "Large" and the low pitched range of the other channels will be output from the front speakers. Refer to the instruction manual of your speakers to make the setting.
Center	Small	 Set the low range capabilities for each channel by setting either small or large. "Small": For small speakers whose low range capabilities may be limited "Large": For full-range speakers with sufficient low range capabilities When "Front" is set to "Small", this is set to "Small". If an item cannot be selected even though connection is correct, check that the settings in "Configuration" - "Speaker Channels" matches the number of connected channels.

Setting Item	Default Value	Setting Details
Height 1	Small	 Set the low range capabilities for each channel by setting either small or large. "Small": For small speakers whose low range capabilities may be limited "Large": For full-range speakers with sufficient low range capabilities When "Front" is set to "Small", this is set to "Small". If an item cannot be selected even though connection is correct, check that the settings in "Configuration" - "Speaker Channels" matches the number of connected channels.
Height 2	Small	 Set the low range capabilities for each channel by setting either small or large. "Small": For small speakers whose low range capabilities may be limited "Large": For full-range speakers with sufficient low range capabilities When "Front" is set to "Small", this is set to "Small". If an item cannot be selected even though connection is correct, check that the settings in "Configuration" - "Speaker Channels" matches the number of connected channels.
Surround	Small	Set the low range capabilities for each channel by setting either small or large. "Small": For small speakers whose low range capabilities may be limited "Large": For full-range speakers with sufficient low range capabilities • When "Front" is set to "Small", this is set to "Small". • If an item cannot be selected even though connection is correct, check that the settings in "Configuration" - "Speaker Channels" matches the number of connected channels.

Setting Item	Default Value	Setting Details
Surround Back	Small	 Set the low range capabilities for each channel by setting either small or large. "Small": For small speakers whose low range capabilities may be limited "Large": For full-range speakers with sufficient low range capabilities When "Surround" is set to "Small", this is set to "Small". If an item cannot be selected even though connection is correct, check that the settings in "Configuration" - "Speaker Channels" matches the number of connected channels.
Crossover	80Hz	When there are speakers that have been set to "Small", set the Hz under which you would like other speakers to play bass, and also set Hz under which you would like the LFE (low frequency effect) to play the bass. The value from "50Hz" to "200Hz" can be set.
Double Bass	Off	This can be selected only when "Configuration" - "Subwoofer" is set to "Yes" and "Front" is set to "Large". Boost bass output by feeding bass sounds from the front left and right, and center speakers to the subwoofer. "On": Bass output will be boosted "Off": Bass output will not be boosted • The setting will not automatically be configured even if you performed Full Auto MCACC.

Distance

Set the distance from each speaker to the listening position.

Setting Item	Default Value	Setting Details
Front Left	10.0 ft/3.00 m	Specify the distance between each speaker and the listening position.
Center	10.0 ft/3.00 m	Specify the distance between each speaker and the listening position.
Front Right	10.0 ft/3.00 m	Specify the distance between each speaker and the listening position.
Height 1 Left	10.0 ft/3.00 m	Specify the distance between each speaker and the listening position.Depending on the use of the ZONE speakers, it may not be possible to select this setting.
Height 1 Right	10.0 ft/3.00 m	 Specify the distance between each speaker and the listening position. Depending on the use of the ZONE speakers, it may not be possible to select this setting.
Height 2 Left	10.0 ft/3.00 m	 Specify the distance between each speaker and the listening position. Depending on the use of the ZONE speakers, it may not be possible to select this setting.
Height 2 Right	10.0 ft/3.00 m	 Specify the distance between each speaker and the listening position. Depending on the use of the ZONE speakers, it may not be possible to select this setting.
Surround Right	10.0 ft/3.00 m	Specify the distance between each speaker and the listening position.
Surr Back Right	10.0 ft/3.00 m	 Specify the distance between each speaker and the listening position. Depending on the use of the ZONE speakers, it may not be possible to select this setting.
Surr Back Left	10.0 ft/3.00 m	Specify the distance between each speaker and the listening position.Depending on the use of the ZONE speakers, it may not be possible to select this setting.

Setting Item	Default Value	Setting Details
Surround Left	10.0 ft/3.00 m	Specify the distance between each speaker and the listening position.
Subwoofer	10.0 ft/3.00 m	Specify the distance between each speaker and the listening position.

· Default values vary depending on the regions.

• The unit of distance can be changed by pressing the MODE button on the remote controller. When using the unit "feet", the setting is available in increments of 0.1 ft from 0.1 ft to 30.0 ft. When using the unit "meter", the setting is available in increments of 0.03 m from 0.03 m to 9.00 m.

Channel Level

Adjust the volume level of each speaker.

Setting Item	Default Value	Setting Details
Front Left	0.0 dB	Select a value between "-12.0 dB" and "+12.0 dB" (in 0.5 dB increments). A test tone will be output each time you change the value. Select the desired level.
Center	0.0 dB	Select a value between "-12.0 dB" and "+12.0 dB" (in 0.5 dB increments). A test tone will be output each time you change the value. Select the desired level.
Front Right	0.0 dB	Select a value between "-12.0 dB" and "+12.0 dB" (in 0.5 dB increments). A test tone will be output each time you change the value. Select the desired level.
Height 1 Left	0.0 dB	 Select a value between "-12.0 dB" and "+12.0 dB" (in 0.5 dB increments). A test tone will be output each time you change the value. Select the desired level. Depending on the use of the ZONE speakers, it may not be possible to select this setting.
Height 1 Right	0.0 dB	 Select a value between "-12.0 dB" and "+12.0 dB" (in 0.5 dB increments). A test tone will be output each time you change the value. Select the desired level. Depending on the use of the ZONE speakers, it may not be possible to select this setting.
Height 2 Left	0.0 dB	 Select a value between "-12.0 dB" and "+12.0 dB" (in 0.5 dB increments). A test tone will be output each time you change the value. Select the desired level. Depending on the use of the ZONE speakers, it may not be possible to select this setting.

Setting Item	Default Value	Setting Details
Height 2 Right	0.0 dB	 Select a value between "-12.0 dB" and "+12.0 dB" (in 0.5 dB increments). A test tone will be output each time you change the value. Select the desired level. Depending on the use of the ZONE speakers, it may not be possible to select this setting.
Surround Right	0.0 dB	Select a value between "-12.0 dB" and "+12.0 dB" (in 0.5 dB increments). A test tone will be output each time you change the value. Select the desired level.
Surr Back Right	0.0 dB	 Select a value between "-12.0 dB" and "+12.0 dB" (in 0.5 dB increments). A test tone will be output each time you change the value. Select the desired level. Depending on the use of the ZONE speakers, it may not be possible to select this setting.
Surr Back Left	0.0 dB	 Select a value between "-12.0 dB" and "+12.0 dB" (in 0.5 dB increments). A test tone will be output each time you change the value. Select the desired level. Depending on the use of the ZONE speakers, it may not be possible to select this setting.
Surround Left	0.0 dB	Select a value between "-12.0 dB" and "+12.0 dB" (in 0.5 dB increments). A test tone will be output each time you change the value. Select the desired level.
Subwoofer	0.0 dB	Select a value between "-15.0 dB" and "+12.0 dB" (in 0.5 dB increments). A test tone will be output each time you change the value. Select the desired level.

Dolby Enabled Speaker

Change the settings of Dolby Enabled Speakers.

Setting Item	Default Value	Setting Details
Dolby Enabled Speaker to Ceiling	6.0 ft/1.80 m	 Set the distance between the Dolby Enabled Speaker and the ceiling. Select between "0.1 ft/0.03 m" and "15.0 ft/4.50 m" (0.1 ft/0.03 m units). The unit of distance (ft/m) is displayed using the unit selected for the "Distance" setting.
Reflex Optimizer	Off	 You can enhance the reflection effect of Dolby Enabled Speakers from the ceiling. "Off": When this function is not used "On": When this function is used The function is not effective if the listening mode is Pure Direct.

• This setting can be selected when "Configuration" - "Height 1 Speaker" / "Height 2 Speaker" is set to "Dolby Speaker".

Speaker Virtualizer

The Speaker Virtualizer function can be switched between On and Off

Setting Item	Default Value	Setting Details
Speaker Virtualizer	On	"On": The listening mode with virtual speaker effect such as F.S.Surround can be selected. "Off": The listening mode with virtual speaker effect such as F.S.Surround cannot be selected.

Audio Adjust

Dual Mono/Mono

Change the settings of multiplex audio playback.

Setting Item	Default Value	Setting Details
Dual Mono	Main	Set the audio channel or language to be output when playing multiplex audio or multilingual broadcasts, etc. "Main": Main channel only "Sub": Sub channel only "Main/Sub": Main and sub channels are output at the same time. • For multiplex audio broadcasts, pressing the <i>i</i> button on the remote controller will display "1+1" on the main unit's display.
Mono Input Channel	Left + Right	Set the input channel to play 2-ch digital sources such as Dolby Digital, or 2-ch analog/PCM sources in the Mono listening mode. "Left": Left channel only "Right": Right channel only "Left + Right": Left and right channels

Dolby

Change the setting of when Dolby signals are input.

Setting Item	Default Value	Setting Details
Loudness Management	On	When playing Dolby TrueHD, enable the dialog normalization function which keeps the volume of dialog at a certain level. Note that when this setting is Off, the Midnight function that allows you to enjoy surround at low volumes is fixed to off when playing Dolby Digital Plus/Dolby TrueHD. "On": When this function is used "Off": When this function is not used
Center Spread*	Off	 Adjust the width of the sound field of the front channel when playing in Dolby Audio - Surr listening mode. "On": The sound field is spread to left and right. "Off": The sound field is centralized. Depending on the speaker settings, "Off" is applied.

Volume

Change the Volume settings.

Setting Item	Default Value	Setting Details
Mute Level	-∞ dB	Set the volume lowered from the listening volume when muting is on. Select a value from "- ∞ dB", "-40 dB" and "-20 dB".
Volume Limit	Off	Set the maximum value to prevent the volume from becoming too loud. Select a value from "Off", "-32 dB" to "+17 dB".
Power On Level	Last	 Set the volume level of when the power is turned on. Select a value from "Last" (Volume level before entering standby mode), "-∞ dB", and "-81.5 dB" to "+18.0 dB". You cannot set a higher value than that of "Volume Limit".
Headphone Level	0.0 dB	Adjust the output level of headphones. Select a value between "-12.0 dB" and "+12.0 dB".

* This function will not be selectable if the firmware is updated after purchase or the firmware is switched in the product production process. For details of firmware update, see "Additional Function (Firmware Update)" (→p6).

DTS

Change the setting of when DTS signals are input.

Setting Item	Default Value	Setting Details
Dialog Control	0 dB	 You can increase the volume of dialog portion of the audio up to 6 dB by 1 dB step so that you can hear the dialog easily in noisy atmosphere. This cannot be set for content other than DTS:X. Depending on the content, this function may not be selected.

Source

Input Volume Absorber

Adjust the volume level when there are differences in volume level among multiple devices connected to this unit. Select the input selector to make the setting.

Setting Item	Default Value	Setting Details
Input Volume Absorber	0.0 dB	 Select a value between "-12.0 dB" and "+12.0 dB". Set a negative value if the volume of the target device is larger than the others and a positive value if smaller. To check the audio, play back the connected device. This function does not work in Zone 2/Zone 3.

Name Edit

Set an easy name for each input. The set name appears on the main unit's display. Select the input selector to make the setting.

Setting Item	Default Value	Setting Details
Name Edit	Input name	 Select a character or symbol with the cursors, and press ENTER. Repeat this operation to input up to 10 characters. "A/a": Switches between upper and lower cases. (Pressing MODE on the remote controller also toggles between upper and lower cases) " — " " — ": Moves the cursor in the arrow direction. " I'GI": Removes a character on the left of the cursor. " I'I: Enters a space. Pressing CLEAR on the remote controller will remove all the input characters. After inputting, select "OK" with the cursors, and press ENTER. The input name will be saved. To restore the name to the default value, press CLEAR on the remote controller on the input screen. Then while nothing is entered, select "OK", and press ENTER.

• To name a preset radio station, press TUNER on the remote controller, select AM/FM, and select the preset number.

• This cannot be set if the "NET", "USB" or "BLUETOOTH" input is selected.

Audio Select

Select the priority for input selection when multiple audio sources are connected to one input selector, for example, connections to both the "BD/DVD" HDMI IN jack and the "BD/DVD" AUDIO IN jack. The setting can be separately set to each input selector. Select the input selector to make the setting. Note that some of the default values cannot be changed.

Setting Item	Default Value	Setting Details
Setting Item Audio Select	Default Value BD/DVD: HDMI GAME: HDMI CBL/SAT: HDMI STRM BOX: HDMI AUX: HDMI CD: COAXIAL TV: OPTICAL	 "ARC": When giving priority to the input signal from ARC-compatible TV. This item can be selected only when "Hardware" - "HDMI" - "Audio Return Channel (eARC supported)" is set to "On" and also the "TV" input is selected. "HDMI": When giving priority to the input signal from HDMI IN jacks This item can be selected only when the input to be set is assigned to the HDMI jack in the "Input/ Output Assign" - "HDMI Input" setting. "COAXIAL": When giving priority to the input signal from DIGITAL IN COAXIAL jacks This item can be selected only when the input signal from DIGITAL IN COAXIAL jacks This item can be selected only when the input to be set is assigned to the COAXIAL jack in the "Input/Output Assign" - "Digital Audio Input" setting. "OPTICAL": When giving priority to the input signal from DIGITAL IN OPTICAL jacks
		to be set is assigned to the COAXIAL jack in the "Input/Output Assign" - "Digital Audio Input" setting. "OPTICAL": When giving priority to the input signal

Setting Item	Default Value	Setting Details
Fixed PCM	Off	Select whether to fix input signals to PCM (except multi-channel PCM) when you select "HDMI", "COAXIAL", or "OPTICAL" in the "Audio Select" setting. Set this item to "On" if noise is produced or truncation occurs at the beginning of a track when playing PCM sources. Select "Off" normally. • Each time the "Audio Select" setting is changed, the setting is restored to "Off".

• The setting cannot be changed when "TUNER", "NET", "USB", or "BLUETOOTH" input is selected.

Hardware

Change the settings of the HDMI function.

Setting Item	Default Value	Setting Details
HDMI Standby Through	Off	 When this is set to anything other than "Off", you can play the video and audio of an HDMI-connected player on the TV even if the unit is in standby mode. Also, only "Auto" and "Auto(Eco)" can be selected if "HDMI CEC" is set to "On". If you select anything else, set "HDMI CEC" to "Off". When this function is set to a value other than "Off", the power consumption in standby state increases, however, the increase in power consumption is minimized by automatically entering the HYBRID STANDBY mode where only the essential circuits operate. "BD/DVD", "GAME", "CBL/SAT", "STRM BOX", "HDMI 5", "HDMI 6", "AUX": For example, if you select "BD/DVD", you can play the device connected to the "BD/DVD" jack on the TV even if the unit is in standby mode. Select this setting if you have decided which player to use with this function. "Last": You can play on the TV the video and audio of the input selected immediately before the unit is switched to standby. "Auto", "Auto (Eco)": Select either of the settings if the connected player conforms to the CEC standard. You can play the video and audio of the player on the TV using the CEC link function, irrespective of what input is selected immediately before the unit is switched to standby. To play a non-CEC compliant player on the TV, turn the unit on and switch the input. When using a CEC-compliant TV, you can reduce the power consumption in standby mode by selecting "Auto (Eco)".

Setting Item	Default Value	Setting Details You can enjoy audio through the speakers of the TV while this unit is on. "On": When this function is used "Off": When this function is not used • This setting is fixed to "Auto" if you have set "Input/Output Assign" - "TV Out/OSD" - "HDMI Out" or "HDMI" - "HDMI Out" in "AV Adjust" to "MAIN" or "MAIN+SUB" and "HDMI CEC" is set to "On". If you change this setting, set "HDMI CEC" to "Off". • Listening mode cannot be changed while "Audio TV Out" is set to "On" and audio is being output from the TV. • Depending on your TV or input signal of the connected device, audio may not be output from the TV even if this is set to "On". In such a case, audio is output from the speakers of the unit. • Audio is output from this unit if you operate the MASTER VOLUME dial on this unit when audio that is input to this unit is output from your TV speakers. If you do not want to output audio, change the setting of this unit or TV, or reduce the volume of this unit.		
Audio TV Out	Off			
Audio Return Channel (eARC supported)	Off	You can enjoy the sound of an HDMI-connected ARC-compatible TV or eARC-compatible TV through the speakers connected to the unit. "On": When enjoying the TV sound through the speakers of this unit "Off": When the ARC function or eARC function is not used		
Auto Delay On		This setting automatically corrects desynchronization between the video and audio signals based on the information from the HDMI Lip Sync-compatible TV. "On": When enabling the automatic correction function "Off": When not using the automatic correction function		

Power Management

Change the settings for the power-save function.

Setting Item	Default Value	Setting Details
Sleep Timer Off		You can allow the unit to enter standby automatically when the specified time elapses. Select a value from "30 minutes", "60 minutes" and "90 minutes". "Off": The unit does not automatically enter standby mode.
Auto Standby	On/Off	 This setting allows the unit to enter standby mode automatically after 20 minutes of inactivity without any video or audio input. (When "USB Power Out at Standby" or "Network Standby" is enabled, the unit enters the HYBRID STANDBY mode which minimizes the increase in power consumption.) "On": The unit automatically enters standby mode ("AUTO STBY" lights up). "Off": The unit does not automatically enter standby mode. "Auto Standby" is displayed on the main unit's display and TV screen 30 seconds before entering standby mode. "Auto Standby" does not work when Zone 2/ Zone 3 is active. Default values vary depending on the regions.
Auto Standby in HDMI Standby Through	On/Off	 Enable or disable "Auto Standby" while "HDMI Standby Through" is on. "On": The setting is enabled. "Off": The setting is disabled. This setting cannot be set to "On" if "Auto Standby" and "HDMI Standby Through" are set to "Off". Default values vary depending on the regions.

Setting Item	Default Value	Setting Details		
USB Power Out at Standby	Off	 When this function is set to "On", power can be supplied to devices connected to the USB port on the rear panel even when the unit is in the standby mode. Supply of power to USB devices in the standby mode is not supported for the USB port on the front panel. When this function is set to "On", the power consumption in standby state increases, however, the increase in power consumption is minimized by automatically entering the HYBRID STANDBY mode where only the essential circuits operate. 		
Network Standby	On	 When this function is set to "On", the network function works even in standby state, and you can turn on the power of the unit via network using an application such as Pioneer Remote App that can control this unit. When this function is set to "On", the power consumption in standby state increases, however, the increase in power consumption is minimized by automatically entering the HYBRID STANDBY mode where only the essential circuits operate. Note that even if this function is set to "Off", when any of the HDMI CEC (→p159), HDMI Standby Through (→p159), USB Power Out at Standby (→p161) and Bluetooth Wakeup (→p161) functions is enabled, this function will be in "On" state regardless of the setting. When connection to the network is lost, "Network Standby" may be disabled to reduce power consumption. In such a case, turn the unit on by using the power button on the remote controller or main unit. 		

Setting Item	Default Value	Setting Details
Bluetooth Wakeup	Off	 This function wakes up the unit on standby by connecting a BLUETOOTH-enabled device. "On": When this function is used "Off": When this function is not used When this function is set to "On", the power consumption in standby state increases, however, the increase in power consumption is minimized by automatically entering the HYBRID STANDBY mode where only the essential circuits operate. This setting is fixed to "Off" if "Network/ Bluetooth" - "Bluetooth" - "Auto Input Change" is set to "Off".

• Wait for a while if "Network Standby" and "Bluetooth Wakeup" cannot be selected. It can be selected when the network function is activated.

12V Trigger A

Set when outputting the control signal (maximum 12 V/100 mA) through the 12V TRIGGER OUT A jack. Different settings can be set for each input selector. You can enable power link operation when you connect the unit and the external devices equipped with 12V trigger input jack.

Setting Item	Setting Details	
BD/DVD Off		Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "BD/DVD" is selected as input source for the main room. "Zone 2": Output when "BD/DVD" is selected as input source for ZONE2. "Zone 3": Output when "BD/DVD" is selected as input source for ZONE3.
GAME	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "GAME" is selected as input source for the main room. "Zone 2": Output when "GAME" is selected as input source for ZONE2. "Zone 3": Output when "GAME" is selected as input source for ZONE3.
CBL/SAT	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "CBL/SAT" is selected as input source for the main room. "Zone 2": Output when "CBL/SAT" is selected as input source for ZONE2. "Zone 3": Output when "CBL/SAT" is selected as input source for ZONE3.
STRM BOX Off		Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "STRM BOX" is selected as input source for the main room. "Zone 2": Output when "STRM BOX" is selected as input source for ZONE2. "Zone 3": Output when "STRM BOX" is selected as input source for ZONE3.

Setting Item	Setting Details			
HDMI 5 Off		Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "HDMI 5" is selected as input source for the main room.		
HDMI 6	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "HDMI 6" is selected as input source for the main room.		
AUX	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "AUX" is selected as input source for the main room.		
CD	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "CD" is selected as input source for the main room. "Zone 2": Output when "CD" is selected as input source for ZONE2. "Zone 3": Output when "CD" is selected as input source for ZONE3.		
TV Off PHONO Off		Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "TV" is selected as input source for the main room. "Zone 2": Output when "TV" is selected as input source for ZONE2. "Zone 3": Output when "TV" is selected as input source for ZONE3.		
		Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "PHONO" is selected as inj source for the main room. "Zone 2": Output when "PHONO" is selected as input source for ZONE2. "Zone 3": Output when "PHONO" is selected as input source for ZONE3.		

Setting Item	Default Value	Setting Details			
TUNER	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "TUNER" is selected as input source for the main room. "Zone 2": Output when "TUNER" is selected as input source for ZONE2. "Zone 3": Output when "TUNER" is selected as input source for ZONE3.			
NET	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "NET" is selected as input source for the main room. "Zone 2": Output when "NET" is selected as input source for ZONE2. "Zone 3": Output when "NET" is selected as input source for ZONE3.			
USB FRONT	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "USB FRONT" is selected as input source for the main room. "Zone 2": Output when "USB FRONT" is selected as input source for ZONE2. "Zone 3": Output when "USB FRONT" is selected as input source for ZONE3.			
USB REAR	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "USB REAR" is selected as input source for the main room. "Zone 2": Output when "USB REAR" is selected as input source for ZONE2. "Zone 3": Output when "USB REAR" is selected as input source for ZONE3.			

Setting Item	Default Value	Setting Details
BLUETOOTH	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "BLUETOOTH" is selected as input source for the main room. "Zone 2": Output when "BLUETOOTH" is selected as input source for ZONE2. "Zone 3": Output when "BLUETOOTH" is selected as input source for ZONE3.

12V Trigger B

Set when outputting the control signal (maximum 12 V/25 mA) through the 12V TRIGGER OUT B jack. Different settings can be set for each input selector. You can enable power link operation when you connect the unit and the external devices equipped with 12V trigger input jack.

Setting Item	Default Value	Setting Details	
BD/DVD	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "BD/DVD" is selected as in source for the main room. "Zone 2": Output when "BD/DVD" is selected as input source for ZONE2. "Zone 3": Output when "BD/DVD" is selected as input source for ZONE3.	
GAME	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "GAME" is selected as input source for the main room. "Zone 2": Output when "GAME" is selected as input source for ZONE2. "Zone 3": Output when "GAME" is selected as input source for ZONE3.	

Setting Item	Default Value	Setting Details	Setting Item	Default Value	Setting Details	
CBL/SAT	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "CBL/SAT" is selected as input source for the main room. "Zone 2": Output when "CBL/SAT" is selected as input source for ZONE2. "Zone 3": Output when "CBL/SAT" is selected as input source for ZONE3.	TV	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "TV" is selected as input source for the main room. "Zone 2": Output when "TV" is selected as input source for ZONE2. "Zone 3": Output when "TV" is selected as input source for ZONE3.	
STRM BOX	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "STRM BOX" is selected as input source for the main room. "Zone 2": Output when "STRM BOX" is selected as input source for ZONE2. "Zone 3": Output when "STRM BOX" is selected as input source for ZONE3.	PHONO	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "PHONO" is selected as input source for the main room. "Zone 2": Output when "PHONO" is selected as input source for ZONE2. "Zone 3": Output when "PHONO" is selected as input source for ZONE3.	
HDMI 5	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "HDMI 5" is selected as input source for the main room.	TUNER	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "TUNER" is selected as input source for the main room.	
HDMI 6	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "HDMI 6" is selected as input source for the main room.			"Zone 2": Output when "TUNER" is selected as input source for ZONE2. "Zone 3": Output when "TUNER" is selected as input source for ZONE3.	
AUX	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "AUX" is selected as input source for the main room.	NET	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "NET" is selected as input source for the main room.	
CD	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "CD" is selected as input source for the main room. "Zone 2": Output when "CD" is selected as input source for ZONE2. "Zone 3": Output when "CD" is selected as input source for ZONE3.			"Zone 2": Output when "NET" is selected as input source for ZONE2. "Zone 3": Output when "NET" is selected as input source for ZONE3.	

Setting Item	ing Item Default Value Setting Details		Works
USB FRONT	Off	Set the 12V trigger output setting to each input. "Off": No output	Change the se
		"Main": Output when "USB FRONT" is selected as	Setting Item
		input source for the main room. "Zone 2": Output when "USB FRONT" is selected as input source for ZONE2. "Zone 3": Output when "USB FRONT" is selected as input source for ZONE3.	Input Selector
USB REAR Off		Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "USB REAR" is selected as input source for the main room. "Zone 2": Output when "USB REAR" is selected as input source for ZONE2. "Zone 3": Output when "USB REAR" is selected as input source for ZONE3.	Connected Dev
BLUETOOTH	Off	Set the 12V trigger output setting to each input. "Off": No output "Main": Output when "BLUETOOTH" is selected as input source for the main room. "Zone 2": Output when "BLUETOOTH" is selected as input source for ZONE2. "Zone 3": Output when "BLUETOOTH" is selected as input source for ZONE3.	

Works with SONOS

Change the settings to connect with the Sonos Connect.

	Setting Item	Default Value	Setting Details
	Input Selector	Off	Select the input selector to which the Sonos Connect is connected.Selecting "Off" disables the interlock function with Sonos.
	Connected Device	-	Displays the Sonos Connect connected to the same network as the network of this unit. Press the ENTER button to select the connected Sonos Connect.
			Products (e.g. Play:3 unequipped with an output terminal) other than the Sonos Connect are also
_			displayed in the device list and selectable. In tha case, when playback on the Sonos side starts, the input is switched, however, audio is not
			output. Select the room name of the connected Sonos Connect.
			Up to 32 devices can be displayed on the Sonos product list screen. If you cannot find the Sonos
			Connect to be interlocked, return to the previous screen, turn off the product you want to interlock
			and try again.
_			To use this function, set "Input Selector" beforehand.

Setting Item	Default Value	Setting Details
Output Zone	Main	Select the zone where you want to listen to the music. "Main": Outputs audio only to the main room (where this unit is located). "Zone 2": Outputs audio only to the separate room (ZONE 2). "Main/Zone 2": Outputs audio to both the main room and separate room. "Zone 3": Outputs audio only to the separate room (ZONE 3). "Main/Zone 3": Outputs audio to both the main room and separate room (ZONE 3). "Zone 2/Zone 3": Outputs audio to both the separate rooms (ZONE 2 and ZONE 3). "Main/Zone 2/Zone 3": Outputs audio to the main room and both separate rooms (ZONE 2 and ZONE 3). • To use this function, set "Input Selector" beforehand.
Preset Volume	Main: Last Zone 2: Last Zone 3: Last	 You can set the volume beforehand for playing back the Sonos Connect. You can set volumes for the main room (where this unit is located) and separate room (ZONE 2 or ZONE 3) respectively. Select a value from "Last" (Volume level before entering standby mode), "-∞ dB", and "-81.5 dB" to "+18.0 dB". To use this function, set "Input Selector" beforehand.

Multi Zone

Zone 2

Change the settings for Zone 2.

Setting Item	Default Value	Setting Details
Output Level	Fixed	Select whether to adjust the volume on the pre- main amplifier in the separate room or on this unitwhen outputting to Zone 2. "Fixed": Adjust on the pre-main amplifier in theseparate room "Variable": Adjust on this unit
Volume Limit	Off	Set the maximum value for Zone 2 to avoid too high volume. Select "Off" or a value between "-32 dB" and "+17 dB".
Power On Level	Last	 Set the Zone 2 volume level of when this unit is turned on. Select a value from "Last" (volume before the unit was turned off), "-∞ dB", and "-81.5 dB" to "+18.0 dB". You cannot set a higher value than that of "Volume Limit".
Bass	0 dB	Adjust the volume of the bass for Zone 2. Select a value between "-10 dB" and "+10 dB".
Treble	0 dB	Adjust the volume of the treble for Zone 2. Select a value between "-10 dB" and "+10 dB".
Balance	0	Set the left-right balance for Zone 2. Select a value between "L + 10" to "R + 10".

Zone 3

Change the settings for Zone 3.

Setting Item	Default Value	Setting Details
Output Level	Fixed	Select whether to adjust the volume on the pre- main amplifier in the separate room or on this unitwhen outputting to Zone 3. "Fixed": Adjust on the pre-main amplifier intheseparate room "Variable": Adjust on this unit • When "Speaker" - "Configuration" - "Zone Speaker" is set to "Zone 2/Zone 3", this setting is fixed to "Variable".
Volume Limit	Off	Set the maximum value for Zone 3 to avoid too high volume. Select "Off" or a value between "-32 dB" and "+17 dB".
Power On Level	Last	 Set the Zone 3 volume level of when this unit is turned on. Select a value from "Last" (volume before the unit was turned off), "-∞ dB", and "-81.5 dB" to "+18.0 dB". You cannot set a higher value than that of "Volume Limit".

Remote Play Zone

Change the settings for remote play.

Setting Item	Default Value	Setting Details
Remote Play Zone	Auto	 When playing with AirPlay or Spotify Connect, or when using the Music Server function to play remotely from your PC, you can set whether to play in the main room (where this unit is located) or in a separate room (ZONE 2/ZONE 3). "Auto": When the main room input is NET, music is played in the main room. When the separate room input is NET and the main room input is other than NET, then the music is played in the separate room. "Main", "Zone 2", "Zone 3": Select when limiting the play zone to a particular room. For example, when playing only in the separate room, select "Zone 3". This function may not work if playback is already proceeding with the same network function.

Miscellaneous

Tuner

Change the frequency step for the tuner.

Setting Item	Default Value	Setting Details
AM/FM Frequency Step (North American models)	10 kHz/0.2 MHz	 Select a frequency step to suit your residential area. Select "10 kHz/0.2 MHz" or "9 kHz/0.05 MHz". When this setting is changed, all radio presets are deleted.
AM Frequency Step (European, Australian and Asian models)	9 kHz	 Select a frequency step to suit your residential area. Select "10 kHz" or "9 kHz". When this setting is changed, all radio presets are deleted.

Remote ID

Change the remote controller ID.

Setting Item	Default Value	Setting Details
Remote ID	1	Select an ID for the unit's remote controller from "1", "2", and "3" to prevent interference between the unit and other Pioneer components that are installed in the same room. After changing the ID on the main unit, change the ID on the remote controller accordingly with the following procedure. While pressing and holding the MODE button, press the following buttons for approx. 3 seconds. • To change the remote controller ID to "1": AUTO/ DIRECT
		 To change the remote controller ID to "2": SURR To change the remote controller ID to "3": STEREO

Firmware Update

Change the settings for Firmware Update.

Setting Item	Default Value	Setting Details
Update Notice	Enable	Availability of a firmware update is notified via network. "Enable": Notify updates "Disable": Do not notify updates
Version	-	The current firmware version is displayed.
Update via NET	-	 Press ENTER to select when updating the firmware via network. This setting cannot be selected if you do not have Internet access or there is no updatable firmware.
Update via USB	-	 Press ENTER to select when updating the firmware via USB. This setting cannot be selected if a USB storage device is not connected or there is no updatable firmware in the USB storage device.

• Wait for a while if "Firmware Update" cannot be selected. It can be selected when the network function is activated.

Initial Setup

Make the initial setup from the setup menu.

• Wait for a while if "Initial Setup" cannot be selected. It can be selected when the network function is activated.

Lock

Lock the Setup menu so that the settings cannot be changed.

Setting Item	Default Value	Setting Details
Setup Parameter	Unlocked	Lock the Setup menu so that the settings cannot be changed. "Locked": The menu is locked. "Unlocked": The menu is unlocked.


Factory Reset

All the settings are restored to factory defaults.

Setting Item	Default Value	Setting Details
Factory Reset	-	 All the settings are restored to factory defaults. Select "Start", and press the ENTER button. If "Factory Reset" is performed, your settings are restored to the default values. Be sure to note down your setting contents beforehand.

Advanced MCACC

Menu operations

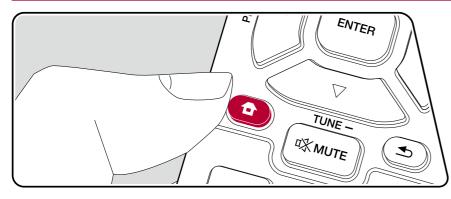

Setup the speakers automatically or make desired changes to the equalizer. You can also check the values set currently for each speaker setting.



Select the item with the cursor $\blacktriangle / \lor / \blacklozenge / \lor$ buttons of the remote controller and press ENTER to confirm your selection.

Use the cursors \blacktriangleleft / \triangleright to change the default values.

- To return to the previous screen, press ≤.
- To exit the settings, press **1**.

Full Auto MCACC


Place the supplied speaker setup microphone in the listening position, measure the test tones emitted by the speakers, then the unit automatically sets the optimum volume level for each speaker, the crossover frequencies, and the distance from the listening position. This also reduces the effect of the standing wave in accordance with the viewing environment and automatically adjusts the equalizers for the speakers and enables correction of distortion caused by the acoustic environment of the room.

- Calibration takes between 3 and 12 minutes to be completed. The speakers emit the test tone at high volume during measurement, so be careful of your surroundings. Keep the room as quiet as possible during measurement.
- If you have connected a subwoofer, check the power and volume of the subwoofer. Set the subwoofer volume to more than halfway.
- If the power of this unit suddenly turns off, the wires in the speaker cables may have touch the rear panel or other wires and tripped the protection circuit. Twist the wires again properly and make sure they do not stick out of the speaker terminals when connecting.
- 1. Select the connected speaker configuration.



The image on the screen changes as you choose the number of channels in "Speaker Channels", so refer to it when performing the settings.

2. Place the supplied speaker setup microphone in the listening position, and connect to the SETUP MIC jack on the main unit.

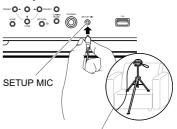

When putting the speaker setup microphone on a tripod, refer to the illustration when putting it in place.

- 3. Confirm a test tone is output from the subwoofer and press ENTER.
- 4. Press ENTER. Then, test tones are output from each speaker, and the connected speakers and the noise in the surrounding environment are automatically measured.
- 5. The measurement results in step 4 are displayed. If there is no problem in the detection result of the speaker, select "Next" and press ENTER to output the test tone again to automatically set the settings such as volume level, crossover frequency, etc., to their optimum. (The test tone is automatically output when 10 seconds has elapsed without any operation.)
 - When an error message is displayed or when the connected speakers cannot be detected, perform re-measurement by selecting "Retry" and pressing ENTER.
 - When it cannot be resolved by performing the re-measurement, confirm if the speakers are connected correctly. If there is any problem with the speaker connection, perform the connection after disconnecting the power cord.
- 6. Once the measurement is completed, it is possible to perform the measurement in 8 additional listening positions. To perform the measurement, select "Next" and press ENTER, then follow the instructions. To not perform the measurement, select "Finish (Calculate)" and press ENTER.
 - After each listening position is detected, select "Finish (Calculate)" and press ENTER to complete the detection process.
- 7. Disconnect the speaker setup microphone.

Manual MCACC

EQ Adjust

If you perform Full Auto MCACC then settings are automatic, but you can also adjust the output volume of the range of each connected speaker to suit your own preferences. You can adjust the volume of the different sound ranges for each of the speakers. You can set three different equalizers in Preset 1 to 3. You can select up to 4 bands for the Subwoofer and 9 bands for all other speakers.

Setting Item	Default Value	Setting Details
Front Left	0.0 dB	 After selecting the speaker frequency from between "63 Hz" and "16 kHz" with the cursors ◀/▶, adjust the volume of that frequency between "-12.0 dB" and "+12.0 dB" with ▲/▼. "63 Hz" can only be selected when this speaker is set to "Large" in "System Setup" - "Speaker" - "Crossover".
Center	0.0 dB	 After selecting the speaker frequency from between "63 Hz" and "16 kHz" with the cursors ◀/▶, adjust the volume of that frequency between "-12.0 dB" and "+12.0 dB" with ▲ / ▼. "63 Hz" can only be selected when this speaker is set to "Large" in "System Setup" - "Speaker" - "Crossover". If an item cannot be selected even though connection is correct, check that the settings in "System Setup" - "Speaker" - "Configuration" - "Speaker Channels" matches the number of connected channels.
Front Right	0.0 dB	 After selecting the speaker frequency from between "63 Hz" and "16 kHz" with the cursors ◀/▶, adjust the volume of that frequency between "-12.0 dB" and "+12.0 dB" with ▲ / ▼. "63 Hz" can only be selected when this speaker is set to "Large" in "System Setup" - "Speaker" - "Crossover".

Setting Item	Default Value	Setting Details
Height 1 Left	0.0 dB	 After selecting the speaker frequency from between "63 Hz" and "16 kHz" with the cursors ◀/▶, adjust the volume of that frequency between "-12.0 dB" and "+12.0 dB" with ▲ / ▼. "63 Hz" can only be selected when this speaker is set to "Large" in "System Setup" - "Speaker" - "Crossover". Depending on the use of the ZONE speakers, it may not be possible to select this setting. If an item cannot be selected even though connection is correct, check that the settings in "System Setup" - "Speaker" - "Configuration" - "Speaker Channels" matches the number of connected channels.
Height 1 Right	0.0 dB	 After selecting the speaker frequency from between "63 Hz" and "16 kHz" with the cursors ◀/▶, adjust the volume of that frequency between "-12.0 dB" and "+12.0 dB" with ▲/▼. "63 Hz" can only be selected when this speaker is set to "Large" in "System Setup" - "Speaker" - "Crossover". Depending on the use of the ZONE speakers, it may not be possible to select this setting. If an item cannot be selected even though connection is correct, check that the settings in "System Setup" - "Speaker" - "Configuration" - "Speaker Channels" matches the number of connected channels.

Setting Item	Default Value	Setting Details	Setting Item	Default Value	Setting Details
Height 2 Left	0.0 dB	 After selecting the speaker frequency from between "63 Hz" and "16 kHz" with the cursors ◀/▶, adjust the volume of that frequency between "-12.0 dB" and "+12.0 dB" with ▲ / ▼. "63 Hz" can only be selected when this speaker is set to "Large" in "System Setup" - "Speaker" - "Crossover". Depending on the use of the ZONE speakers, it may not be possible to select this setting. If an item cannot be selected even though connection is correct, check that the settings in "System Setup" - "Speaker" - "Configuration" 	Surround Right	0.0 dB	 After selecting the speaker frequency from between "63 Hz" and "16 kHz" with the cursors ◀/▶, adjust the volume of that frequency between "-12.0 dB" and "+12.0 dB" with ▲ / ▼. "63 Hz" can only be selected when this speaker is set to "Large" in "System Setup" - "Speaker" - "Crossover". If an item cannot be selected even though connection is correct, check that the settings in "System Setup" - "Speaker" - "Configuration" - "Speaker Channels" matches the number of connected channels.
		- "Speaker Channels" matches the number of connected channels.	Surr Back Right	0.0 dB	After selecting the speaker frequency from between "63 Hz" and "16 kHz" with the cursors $\blacktriangleleft/\triangleright$, adjust
Height 2 Right	0.0 dB	 After selecting the speaker frequency from between "63 Hz" and "16 kHz" with the cursors ◄/▶, adjust the volume of that frequency between "-12.0 dB" and "+12.0 dB" with ▲/▼. "63 Hz" can only be selected when this speaker is set to "Large" in "System Setup" - "Speaker" - "Crossover". Depending on the use of the ZONE speakers, it may not be possible to select this setting. If an item cannot be selected even though connection is correct, check that the settings in "System Setup" - "Speaker" - "Configuration" - "Speaker Channels" matches the number of 			 the volume of that frequency between "-12.0 dB" and "+12.0 dB" with ▲ / ▼. "63 Hz" can only be selected when this speaker is set to "Large" in "System Setup" - "Speaker" - "Crossover". Depending on the use of the ZONE speakers, it may not be possible to select this setting. If an item cannot be selected even though connection is correct, check that the settings in "System Setup" - "Speaker" - "Configuration" - "Speaker Channels" matches the number of connected channels.

Setting Item Default Value		Setting Details	
"63 Hz" a the volum and "+12 • "63 Hz is set to "Cross • Depen- may no • If an ite connec "System - "Spea		 After selecting the speaker frequency from between "63 Hz" and "16 kHz" with the cursors ◀/▶, adjust the volume of that frequency between "-12.0 dB" and "+12.0 dB" with ▲ / ▼. "63 Hz" can only be selected when this speaker is set to "Large" in "System Setup" - "Speaker" - "Crossover". Depending on the use of the ZONE speakers, it may not be possible to select this setting. If an item cannot be selected even though connection is correct, check that the settings in "System Setup" - "Speaker" - "Configuration" - "Speaker Channels" matches the number of connected channels. 	
Surround Left	0.0 dB	 After selecting the speaker frequency from betweel "63 Hz" and "16 kHz" with the cursors After selecting the speaker frequency from betweel "63 Hz" and "16 kHz" with the cursors After selecting the volume of that frequency between "-12.0 dB" and "+12.0 dB" with If an item cannot be selected when this speaker - "Crossover". If an item cannot be selected even though connection is correct, check that the settings in "System Setup" - "Speaker" - "Configuration" - "Speaker Channels" matches the number of connected channels 	
"3 the an		 After selecting the speaker frequency from between "31 Hz" and "250 Hz" with the cursors ◀/▶, adjust the volume of that frequency between "-12.0 dB" and "+12.0 dB" with ▲ / ▼. This cannot be selected if "No" is set in "System Setup" - "Speaker" - "Configuration" - "Subwoofer". 	

- The result may not be as expected depending on the input source and listening mode setting.
- If you want to make the adjustments while listening to something, press f on the remote controller, and select the Preset you want to adjust in "AV Adjust" - "MCACC" - "Manual EQ Select" first.

MCACC Data Check

You can check the number of speaker channels connected and the content and values you have set for each of the speaker settings.

Speaker Setting

You can check the number of speaker channels connected and the large and small settings you have set for the low range reproduction capabilities for each of the speakers.

Channel Level

You can check the output level settings for each of the speakers.

Speaker Distance


You can check the distance from each speaker to the listening position.

Acoustic Calibration EQ

You can check the calibration values for the frequency characteristics of each speaker that were set in "Manual MCACC".

Network/Bluetooth

Menu operations

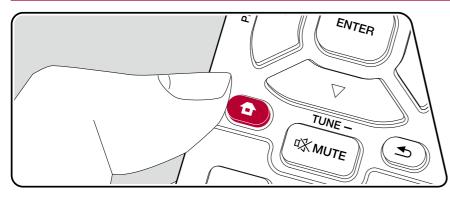

Make settings related to network connections and BLUETOOTH.

Use the on-screen displays (OSD) that appear on the TV to make the settings. Press **1** on the remote controller to display the Home screen, select Network/ Bluetooth with the cursors on the remote controller, then press ENTER.



Select the item with the cursor $\blacktriangle / \checkmark / \checkmark / \blacktriangleright$ buttons of the remote controller and press ENTER to confirm your selection.

Use the cursors \blacktriangleleft / \triangleright to change the default values.

- To return to the previous screen, press ≤.
- To exit the settings, press **1**.

Network

 When LAN is configured with a DHCP, set "DHCP" to "Enable" to configure the setting automatically. ("Enable" is set by default.) To assign fixed IP addresses to each components, you must set "DHCP" to "Disable" and assign an address to this unit in "IP Address" as well as set information related to your LAN, such as Subnet Mask and Gateway.

Setting Item	Default Value	Setting Details
Wi-Fi	Off(Wired)	Connect the unit to network via wireless LAN router. "On": Wireless LAN connection "Off (Wired)": Wired LAN connection • When switching between "On" and "Off(Wired)", stop the Network service. Also, when group playback is in process, cancel the group playback once, and then switch the setting.
Wi-Fi Setup	-	You can configure wireless LAN settings by pressing ENTER when "Start" is displayed.
Wi-Fi Status	-	The information of the connected access point will be displayed. "SSID": SSID of the connected access point. "Signal": Signal strength of the connected access point. "Status": Status of the connected access point.
MAC Address	-	This is the MAC address of this unit. This value is specific to the component and cannot be changed.
DHCP	Enable	 "Enable": Auto configuration by DHCP "Disable": Manual configuration without DHCP If selecting "Disable", you must set "IP Address", "Subnet Mask", "Gateway", and "DNS Server" manually.
IP Address	0.0.0.0	Displays/Sets the IP address.
Subnet Mask	0.0.0.0	Displays/Sets the subnet mask.
Gateway	0.0.0.0	Displays/Sets the gateway.
DNS Server	0.0.0.0	Displays/Sets the primary DNS server.

Setting Item	Default Value	Setting Details
Proxy URL	-	Displays/Sets the proxy server URL.
Proxy Port	8080	Displays/Sets the proxy server port number when you enter "Proxy URL".
Friendly Name	Pioneer VSX- LX504 XXXXXX	Change the device name for this unit which is shown on other devices connected to the network to an easily recognized name. 1. Press ENTER to display the Edit screen. 2. Select a character or symbol with the cursors and press ENTER. Repeat it to input 31 or less characters. "A/a": Switches between upper and lower cases (Pressing MODE on the remote controller also toggles between upper and lower cases.) "←" "→": Moves the cursor to the arrow direction. "⊲": Removes a character on the left of the cursor. "L": Enters a space. • Pressing CLEAR on the remote controller will remove all the input characters. 3. After inputting, select "OK" with the cursors and press ENTER. The input name will be saved.

Setting Item	Default Value	Setting Details	Setting Item	Default Value	Setting Details
AirPlay Device Name	Pioneer VSX- LX504 XXXXXX	 Change the model name of this unit which is displayed on the AirPlay-connected device to an easily recognized name. 1. Press ENTER to display the Edit screen. 2. Select a character or symbol with the cursors and press ENTER. Repeat it to input 31 or less characters. "A/a": Switches between upper and lower cases. (Pressing MODE on the remote controller also toggles between upper and lower cases.) " →": Moves the cursor to the arrow direction. " ☆I": Removes a character on the left of the cursor. " µ": Enters a space. Pressing CLEAR on the remote controller will remove all the input characters. 3. After inputting, select "OK" with the cursors and press ENTER. The input name will be saved. This function cannot be used when registering this unit to Home App. 	AirPlay Password		 You can set a password of up to 31 characters so that only registered users can use AirPlay[®]. 1. Press ENTER to display the Edit screen. 2. Select a character or symbol with the cursors and press ENTER. Repeat it to input 31 or less characters. "A/a": Switches between upper and lower cases. (Pressing MODE on the remote controller also toggles between upper and lower cases.) " —" "→": Moves the cursor to the arrow direction. " " " → ": Removes a character on the left of the cursor. " u": Enters a space. To select whether to mask the password with " *" or display it in plain text, press +Fav on the remote controller. Pressing CLEAR on the remote controller will remove all the input characters. 3. After inputting, select "OK" with the cursors and press ENTER. The input password will be saved. This function cannot be used when registering this unit to Home App.
			Privacy Statement	Not Accepted	When using a network service that requires a login name, email address, password, etc., you need to agree to the Privacy Statement of our company.

• Wait for a while if "Network" cannot be selected. It will appear when the network feature is started.

Statement is displayed.

You can check the network connection. Press ENTER when "Start" is displayed.

 This setting can be made after confirming the Privacy Statement. When you select "Privacy Statement" and press ENTER, the Privacy

• When "Not Accepted" is selected, you will log out from the network service you have logged in.

Network Check

Bluetooth


Setting Item	Default Value	Setting Details
Bluetooth	On	Select whether or not to use the BLUETOOTH function. "On": Enables connection with a BLUETOOTH wireless technology enabled device by using the BLUETOOTH function. Select "On" also when making various BLUETOOTH settings. "Off": When not using the BLUETOOTH function
Auto Input Change	On	 When a BLUETOOTH-enabled device is played while it is connected to the unit, the input of the unit can be automatically switched to "BLUETOOTH". "On": The input is automatically set to "BLUETOOTH" responding to the playback operation of the BLUETOOTH-enabled device. "Off": The function is disabled. If the input is not switched automatically, set to "Off" and change the input manually.
Auto Reconnect	On	This function automatically reconnects to the BLUETOOTH wireless technology enabled device connected last when you change the input to "BLUETOOTH". "On": When this function is to be used "Off": When this function is not to be used • This may not work with some BLUETOOTH wireless technology enabled devices.

Setting Item	Default Value	Setting Details
Pairing Information	-	 You can initialize the pairing information saved on this unit. Pressing ENTER when "Clear" is displayed initializes the pairing information stored in this unit. This function does not initialize the pairing information on the BLUETOOTH wireless technology enabled device. When pairing the unit again with the device, be sure to clear the pairing information on the BLUETOOTH wireless technology enabled device in advance. For information on how to clear the pairing information, refer to the BLUETOOTH wireless technology enabled device's instruction manual.
Device	-	Displays the name of the BLUETOOTH wireless technology enabled device connected to the unit. • The name is not displayed when "Status" is "Ready" and "Pairing".
Status	-	Displays the status of the BLUETOOTH wireless technology enabled device connected to the unit. "Ready": Not paired "Pairing": Paired "Connected": Successfully connected

• Wait for a while if "Bluetooth" cannot be selected. It will appear when the BLUETOOTH function is started up.

AV Adjust

Menu operations

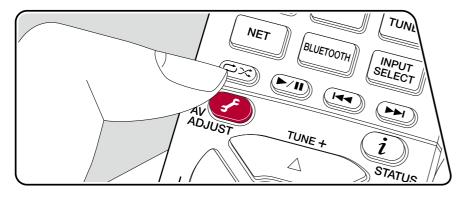

You can quickly adjust the settings you frequently use, such as tone adjustments, etc.

You can make the settings on the TV screen while playing something. Press f on the remote controller to display the AV Adjust menu. Note that there is no display on the TV screen when the input selector is "CD", "TV", "PHONO", "FM", or "AM", so follow the main unit's display while doing the operations.

AV Adjust		BD/DVD
HDMI	HDMI Out	
Audio		
MCACC		
Level		

Select the item with the cursor \blacktriangle / \blacktriangledown buttons of the remote controller and press ENTER to confirm your selection.

Use the cursors to change the settings.

- To return to the previous screen, press ≤.
- To exit the settings, press *F*.

HDMI Out: Select the HDMI OUT jack to output video signals from "MAIN", "SUB", and "MAIN+SUB".

Sound Delay: If the video is behind the audio, you can delay the audio to offset the gap. Different settings can be set for each input selector.

• It cannot be set if the listening mode is Pure Direct and the input signal is analog.

Audio Return Channel: You can enjoy the sound of the HDMI-connected ARCcompatible TV through the speakers connected to the unit. Select "On" when listening to the audio of TV using the speakers of this unit. Select "Off" when the ARC function is not used.

Audio

Sound Retriever: Improve the quality of the compressed audio. Playback sound of lossy compressed files such as MP3 will be improved. The setting can be separately set to each input selector. The setting is effective in the signals of 48 kHz or less. The setting is not effective in the bitstream signals.

• It cannot be set if the listening mode is Direct or Pure Direct.

Midnight: Make small sounds easily heard. It is useful when you need to reduce the volume while watching a movie late night. You can enjoy the effect only when playing Dolby series and DTS series input signals.

- It cannot be set if the listening mode is Direct or Pure Direct.
- The setting cannot be used in the following cases.
 - If "Loudness Management" is set to "Off" when playing Dolby Digital Plus or Dolby TrueHD
 - When the input signal is DTS:X and "Dialog Control" is other than 0 dB

Stereo Assign: When the listening mode is set to "Stereo", the audio output destination can be set to "Surround", "Surround Back", "Height 1" or "Height 2" in addition to the normal right and left channels ("Front") of front speakers.

- This function cannot be used if the listening mode is set to modes other than "Stereo".
- It is not possible to select speakers that are not set at "System Setup" -"Speaker" - "Configuration" on the Home screen.

Zone B: Select a method of outputting audio to ZONE B from among "Off", "On(A+B)" and "On(B)".

- In the following cases, "Zone B" cannot be selected.
 - When ZONE 2 is On
 - When "System Setup" "Speaker" "Configuration" "Zone 2 Preout" on the Home screen is set to "Zone 2" (→p151)

Auto Phase Control+: The low frequencies are recorded with a delay for some discs not made according to phase control standards. This function corrects the phase shift when playing such discs. When "Auto" is selected, in addition to the low frequency delay, the polarity and correlation are also detected and corrected.

• It cannot be set if the listening mode is Pure Direct.

MCACC EQ: Enable or disable the equalizer function that corrects for distortion caused by the acoustic environment of the room.

• It cannot be set if the listening mode is Pure Direct.

Manual EQ Select: From the Home screen, select "Preset 1" to "Preset 3" which were set in "Advanced MCACC" - "Manual MCACC" - "EQ Adjust". The same sound field setting is applied all ranges when set to "Off".

· It cannot be set if the listening mode is Pure Direct.

Phase Control: Correct phase disturbance in the low range to enhance the bass. This enables you to achieve powerful bass reproduction that is faithful to the original sound.

· It cannot be set if the listening mode is Pure Direct.

Theater Filter: Adjust the soundtrack that was processed to enhance its high pitch range, in order to make it suitable for home theater.

· It cannot be set if the listening mode is Direct or Pure Direct.

Standing Wave: Setting this "On" will control the effect of the standing wave generated by the sound wave reflected by wall or similar interfering with the original sound wave.

Level

Front: Adjust the speaker level of the front speaker while listening to the sound.

Center: Adjust the speaker level of the center speaker while listening to the sound.

Subwoofer: Adjust the speaker level of the subwoofer while listening to the sound.

• If you set the unit to the standby mode, the adjustments you made will be restored to the previous statuses.

Web Setup

Menu operations

You can make the settings for the network function of this unit using an Internet browser on a PC, smartphone, etc.

- 1. Press **1** on the remote controller to display the Home screen.
- 2. Select "Network/Bluetooth" "Network" with the cursors, then take a note of the IP address displayed in "IP Address".
- 3. Start the internet browser on your PC or smartphone and enter the IP address of the unit in the URL field.
- 4. Information for the unit (Web Setup screen) is displayed in the internet browser.

address of this unit.

Network Connection: You can select a network connection method. If you select "Wireless", select an access point from "Wi-Fi Setup" to connect.

DHCP: You can change DHCP settings. If you select "Off", set "IP Address", "Subnet Mask", "Gateway" and "DNS Server" manually.

Proxy: Display and set the URL for the proxy server.



5. After changing the settings, select "Save" to save the settings.

Device Information

You can change the Friendly Name or AirPlay Device Name, set an AirPlay Password, etc.

Control4: Register this unit if you are using a Control4 system.


Firmware Update: Select the firmware file you have downloaded to your PC so you can update this unit.


Network Setting

Status: You can see information for the network such as the MAC address and IP

Initial Setup with Auto Start-up Wizard


Operations

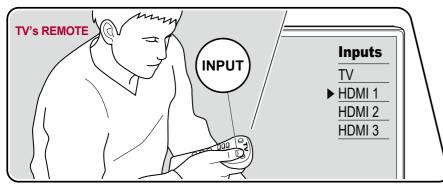

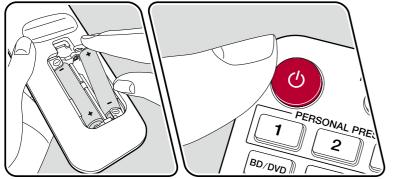

When you turn the unit on for the first time after purchase, the Initial Setup screen is automatically displayed on the TV to allow you to make settings required for startup using simple operations following on-screen guidance.

- 1. Switch the input of the TV to the input connected to the unit.
- 2. Put batteries into the remote controller of this unit.
- 3. Press O on the remote controller to turn the unit on.
- 4. When the language selection screen is displayed on TV, select the language with the cursors ▲ / ▼ and press ENTER.
- If you have terminated the Initial Setup halfway, turn this unit to standby mode. Then turning the power on again can display the Initial Setup again. The Initial Setup appears on the screen each time the power is turned on unless the Initial Set up is completed or "Never Show Again" is selected on the first screen.

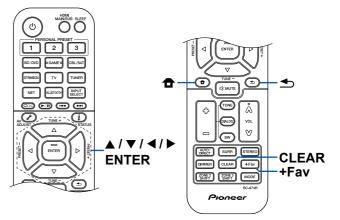

1. Speaker Setup

 Select the connected speaker configuration, and press ENTER. Note that the image on the screen changes each time you select the number of channels in "Speaker Channels".




- 2. The speaker combination selected in step 1 is displayed. "Yes" is displayed for the selected speakers. If the setting is correct, press ENTER.
- 3. Select "Next" and press ENTER. Then a test tone is output from each speaker to confirm the connection. Selecting each speaker with the cursors ▲ / ▼ will output the test tone. Press ENTER after confirmation.
- 4. If there is no problem with the speaker connection, select "Next" and press ENTER. To return to "Speaker Setup", select "Back to Speaker Setup" and press ENTER.

2. Full Auto MCACC

Place the supplied speaker setup microphone at the listening position. The unit automatically measures the test tones output from each speaker, and sets the optimum volume level for each speaker, the crossover frequencies, and the distance from the listening position. This also reduces the effect of the standing wave in accordance with the viewing environment and automatically adjusts the equalizers for the speakers, and enables correction of sound distortion caused by the acoustic environment of the room.

 It takes between 3 and 12 minutes for calibration to be completed. Each speaker outputs the test tone at high volume during measurement, so be careful of your surroundings. Also, keep the room as quiet as possible during measurement.

- If you connect a subwoofer, check the power and volume of the subwoofer. Set the subwoofer volume to more than half.
- If the power of this unit suddenly turns off, the wires in the speaker cables have touched the rear panel or other wires, and the protection circuit is working. Twist the wires again securely, and make sure they do not stick out of the speaker terminals when connecting.
- 1. Place the supplied speaker setup microphone at the listening position, and connect it to the SETUP MIC jack on the main unit.

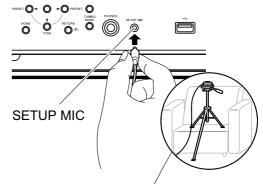

When placing the speaker setup microphone on a tripod, refer to the illustration.

- 2. Confirm a test tone is output from the subwoofer and press ENTER.
- 3. Press ENTER. Then, test tones are output from each speaker, and the connected speakers and the noise in the surrounding environment are automatically measured.
- 4. The measurement results in step 3 are displayed. If there is no problem in the detection result of the speaker, select "Next" and press ENTER to output the test tone again to automatically set the settings such as volume level, crossover frequency, etc., to their optimum. (The test tone is automatically output when 10 seconds has elapsed without any operation.)
 - When an error message is displayed or when the connected speakers cannot be detected, perform re-measurement by selecting "Retry" and pressing ENTER.

- When it cannot be resolved by performing the re-measurement, confirm if the speakers are connected correctly. If there is any problem with the speaker connection, perform the connection after disconnecting the power cord.
- 5. Once the measurement is completed, it is possible to perform the measurement in 8 additional listening positions. To perform the measurement, select "Next" and press ENTER, then follow the instructions. To not perform the measurement, select "Finish (Calculate)" and press ENTER.
 - After each listening position is detected, select "Finish (Calculate)" and press ENTER to complete the detection process.
- 6. Disconnect the speaker setup microphone.

3. Multi Zone Sound Check

Output test tones to ZONE 2 to enjoy audio in a separate room (ZONE 2) in addition to the main room.

4. ARC Setup

To connect with an ARC-compatible TV, select "Yes". The ARC setting on this unit turns on, and you can listen to the TV's audio through this unit.

• If you select "Yes", the HDMI CEC function is enabled and power consumption increases during standby.

5. Network Connection

- 1. To make the network connection settings, select "Yes" and press ENTER.
 - A confirmation screen asking you whether to agree to the privacy statement is displayed during network setting. If you agree, select "Accept" and press ENTER.
- 2. Select the network connection method and press ENTER.

"Wired": Use a wired LAN to connect to a network.

"Wireless": Wi-Fi connection using an access point such as a wireless LAN router.

· There are two methods for Wi-Fi connection.

"Scan Networks": Search for an access point from this unit. Find out the SSID of the access point beforehand.

"Use iOS Device (iOS7 or later)": Share the Wi-Fi settings of your iOS device with this unit.

• If you select "Scan Networks", there are another two types of connection methods. Check the following.

"Enter Password":Enter the password (or key) of the access point to connect.

"Push Button": If the access point is equipped with an automatic setting button, you can connect without entering the password.

 If the SSID of the access point is not displayed, select "Other..." with the cursor ▶ on the SSID list screen, press ENTER, and then follow the on-screen instructions.

Keyboard Input

To switch between upper and lower cases, select "A/a" on the screen, and press ENTER on the remote controller.

Press +Fav on the remote controller to select whether to mask the password with " \star " or display it in plain text. Pressing CLEAR on the remote controller will remove all the input characters.

Troubleshooting

Before starting the procedure

Problems may be solved by simply turning the power on/off or disconnecting/ connecting the power cord, which is easier than working on the connection, setting and operating procedure. Try the simple measures on both the unit and the connected device. If the problem is that the video or audio is not output or the HDMI linked operation does not work, disconnecting/connecting the HDMI cable may solve it. When reconnecting, be careful not to wind the HDMI cable since if wound the HDMI cable may not fit well. After reconnecting, turn off and on the unit and the connected device.

- The AV receiver contains a microPC for signal processing and control functions. In very rare situations, severe interference, noise from an external source, or static electricity may cause it to lockup. In the unlikely event that this happens, unplug the power cord from the wall outlet, wait at least 5 seconds, and then plug it back in.
- Our company is not responsible for damages (such as CD rental fees) due to unsuccessful recordings caused by the unit's malfunction. Before you record important data, make sure that the material will be recorded correctly.

When the unit is operating erratically	186


Try restarting the unit	186
Resetting the unit (this resets the unit settings to the default)	187
Troubleshooting	188
■ Power	188
■ Audio	188
■ Listening Modes	190
■ Video	191
■ Linked operation	191

Tuner	192
BLUETOOTH function	192
Network function	193
■ USB storage device	193
Wireless LAN Network	194
ZONE B function	194
Multi-zone function	195
Remote Controller	195
■ Display	195
■ Others	195

When the unit is operating erratically

□ Try restarting the unit

Restarting this unit may solve the problem. After turning the unit to standby mode, press and hold the \bigcirc STANDBY/ON button of the main unit for at least 5 seconds, and then restart the unit. (The settings on this unit are kept.) If the problem persists after restarting the unit, unplug and plug the power cords or HDMI cable of this unit and connected devices.

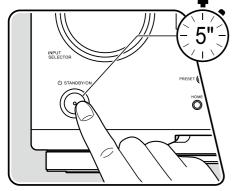


□ Resetting the unit (this resets the unit settings to the default)

If the restart of the unit does not solve the problem, reset the unit, and restore all the settings to the factory default at the time of purchase. This may solve the problem. If the unit is reset, your settings are restored to the default values. Be sure to note down your setting contents before performing the following operations.

1. While pressing and holding ZONE CONTROL of the input selector on the main unit with the unit turned on, press the O STANDBY/ON button.

2. "Clear" is displayed on the display, and the unit returns to the standby state. Do not remove the power cord until "Clear" disappears from the display. To reset the remote controller, while pressing and holding MODE, press CLEAR at least 3 seconds.

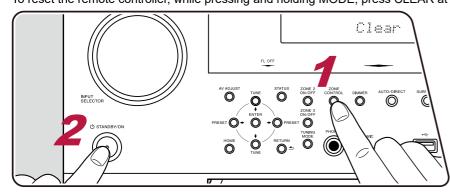

Troubleshooting

Power

U When the power is turned on, "AMP Diag Mode" appears on the display of the main unit.

• The protection circuit function may have operated. If the unit suddenly enters the standby state and "AMP Diag Mode" appears on the display of the main unit when the power is turned on again, this function is diagnosing whether or not the main unit is malfunctioning or there is an abnormality with the speaker cable connection. When the diagnosis is complete, the following messages are displayed.

CH SP WIRE	If the unit returns to the normal ON state after "CH SP WIRE" appears on the display, the speaker cable may have been short- circuited. After setting the power of this unit to standby state, connect the speaker cable again. Twist the wires exposed from the tip of the speaker cable so that the wires do not stick out of the speaker terminal.
NG: ****	If the operation has stopped with "NG" displayed on the display, set the power of this unit to standby state immediately and remove the power plug from the outlet. The unit may be malfunctioning. Consult a dealer.

□ The unit turns off unexpectedly

- The unit automatically switches to standby when the "System Setup" "Hardware" "Power Management" "Auto Standby" setting in the Home screen functions.
- The protection circuit function may have operated due to an abnormal rise in temperature of the unit. In such a case, the power turns off repeatedly even if the power is turned on each time. Secure sufficient ventilation space around the unit, wait for a while until the temperature of the unit decreases. Then, turn the power on again.

WARNING: If smoke, smell or abnormal noise is produced by the unit, unplug the power cord from the outlet immediately, and contact the dealer or our company's Support.

Audio

- Make sure that the speaker setup microphone is no longer connected.
- · Confirm that the connection between the output jack on the connected device and the input jack on this unit is correct.
- · Make sure that none of the connecting cables are bent, twisted, or damaged.
- If the is indicator on the display blinks, press is on the remote controller to cancel muting.
- · While headphones are connected to the PHONES jack, no sound is output from the speakers.
- When "System Setup" "Source" "Audio Select" "Fixed PCM" in the Home Menu is set to "On", no sound is played when signals other than PCM are input. Change the setting to Off.

Check the following if the problem persists after you have confirmed the above.

(→p160)

188

□ No sound from the TV

- Change the input selector on this unit to the position of the terminal to which the TV is connected.
- If the TV does not support the ARC function, along with the connection by an HDMI cable, connect the TV with this unit using a digital optical cable.

□ No sound from a connected player

- · Change the input selector on this unit to the position of the terminal to which the player is connected.
- Check the digital audio output setting on the connected device. On some game consoles, such as those supporting DVD, the default setting may be off.
- For some DVD-Video discs, you need to select an audio output format from a menu.

□ A speaker produces no sound

- Make sure that the polarity (+/-) of the speaker cables is correct, and that no bare wires are in contact with the metal part of speaker terminals.
- · Make sure that the speaker cables are not shorting out.
- Check "Connect the Speaker Cables" (→p47) to see if the speaker connections have been made correctly. Settings for the speaker connection environment need to be made in "Speaker Setup" in Initial Setup. Check "Initial Setup with Auto Start-up Wizard" (→p182).
- Depending on the input signal and listening mode, not much sound may be output from speakers. Select another listening mode to see if sound is output.
- If surround back speakers are installed, be sure to install surround speakers as well.
- A maximum of 7.1 ch playback is possible when Bi-Amping connection is used. Be sure to remove the jumper bar on the speakers when using Bi-Amping connection.

□ The subwoofer produces no sound

If the setting of the front speakers is "Large", the low range elements will be output from the front speakers instead of from the subwoofer during 2 ch audio input of TV or music. To output the sound from the subwoofer, make one of the following settings.

1. Change the front speakers settings to "Small".

The low range elements will be output from the subwoofer rather than the front speakers. We do not recommend changing this if your front speakers have good low range reproduction capabilities.

2. Change "Double Bass" to "On".

The low range elements of the front speakers will be output from both the front speakers and the subwoofer. Due to this, the bass sound may be emphasized too much. In such a case, do not change the setting, or make the setting with the above option 1.

- For the setting details, refer to "System Setup" "Speaker" "Crossover".
- · If the input signals do not contain subwoofer audio elements (LFE), the subwoofer may produce no sound.

Noise can be heard

- Using cable ties to bundle audio pin cables, power cords, speaker cables, etc. may degrade the audio performance. Do not bundle the cords.
- An audio cable may be picking up interference. Change the position of the cables.

189

(→<u>p151</u>)

(→p73)

(→**p47**)

□ The beginning of audio received by an HDMI IN cannot be heard

• Since it takes longer to identify the format of an HDMI signal than it does for other digital audio signals, audio output may not start immediately.

□ Sound suddenly reduces

• When using the unit for extended periods with the temperature inside the unit exceeding a certain temperature, the volume may be reduced automatically to protect the circuits.

Listening Modes

- To enjoy digital surround playback in formats such as Dolby Digital, you need to make a connection for audio signals with an HDMI cable, digital coaxial cable or digital optical cable. Also, audio output need to be set to Bitstream output on the connected Blu-ray Disc player, etc.
- Press *i* on the remote controller several times to switch the display of the main unit, and you can check the input format. Check the following if the problem persists after you have confirmed the above.

□ Cannot select a desired listening mode

Depending on the connection status of the speaker, some listening modes may not be selected. Refer to "Speaker Layouts and Selectable Listening Modes" (→p129) or "Input Formats and Selectable Listening Modes" (→p136) in "Listening Mode".

Cannot listen to the sound in Dolby TrueHD, Dolby Atmos or DTS-HD Master Audio format

• If the audio in Dolby TrueHD, Dolby Atmos or DTS-HD Master Audio format cannot be output correctly in the source format, set "BD video supplementary sound" (or reencode, secondary sound, video additional audio, etc.) to "Off" in the setting of a connected Blu-ray Disc player, etc. After changing the setting, switch the listening mode to that for each source, and confirm.

□ About DTS signals

- With media that switches suddenly from DTS to PCM, PCM playback may not start immediately. In such a case, stop playback on the player side for approx. 3 seconds or more. Then, resume playback. The playback will be performed normally.
- DTS playback may not be performed normally on some CD and LD players even if the player and this unit are digitally connected. If some processing (e.g., output level adjustment, sampling frequency conversion, or frequency characteristic conversion) has been executed for the DTS signal being output, this unit cannot recognize it as a genuine DTS signal, and noise may occur.
- While playing a DTS-compatible disc, if a pause or skip operation is performed on your player, noise may occur for a short period. This is not a malfunction.

Video

- · Confirm that the connection between the output jack on the connected device and the input jack on this unit is correct.
- Make sure that none of the connecting cables are bent, twisted, or damaged.
- When the TV image is blurry or unclear, the power cord or connection cables of the unit may have interfered. In such a case, keep distance between TV antenna cable and cables of the unit.
- · Check the switching of the input screen on the monitor side such as a TV.

Check the following if the problem persists after you have confirmed the above.

□ No image appears

- If a 4K high-quality video is played, use a Premium High Speed HDMI Cable or Premium High Speed HDMI Cable with Ethernet whose package has a "PREMIUM Certified Cable" label.
- · Change the input selector on this unit to the position of the terminal to which the player is connected.

□ No image from a device connected to HDMI IN jack

- To display video from the connected player on the TV while the unit is in standby, you need to enable "System Setup" "Hardware" "HDMI" -"HDMI Standby Through" in the Home screen. For details of the HDMI Standby Through function, refer to "System Setup" - "Hardware" - "HDMI".
- To output video to a TV connected to the HDMI OUT SUB jack, press the *F* button on the remote controller to display "AV Adjust" and select "HDMI" "HDMI Out", or press the HDMI MAIN/SUB button on the remote controller. Then, select the HDMI OUT jack for output.
- Check if "Resolution Error" is displayed on the main unit display when video input via HDMI IN jack is not displayed. In this case, the TV does not support the resolution of the video input from the player. Change the setting on the player.
- Normal operation with an HDMI-DVI adapter is not guaranteed. In addition, video signals output from a PC are not guaranteed.

□ Images flicker

• The output resolution of the player may not be compatible with the resolution of the TV. If the player is connected to this unit with an HDMI cable, change the output resolution on the player. Also this may be solved by changing the screen mode on the TV.

□ Video and audio are out of synch

• Depending on the settings on your TV and connection environment, the video may be behind the audio. To adjust, press *f* on the remote (→p179) controller, and adjust in "HDMI" - "Sound Delay" in the "AV Adjust".

Linked operation

□ HDMI linked operation does not work with CEC-compliant devices, such as a TV

- In the Home screen of the unit, set "System Setup" "Hardware" "HDMI" "HDMI CEC" to "On".
- It is also necessary to set HDMI linking on the CEC-compliant device. Check the instruction manual.
- When connecting a Sharp brand player or recorder to the HDMI IN jacks, set "System Setup" "Hardware" "HDMI" "HDMI Standby Through" to "Auto".

(→**p159**)

(→<u>p159</u>)

Tuner

Poor reception or much noise

- Recheck the antenna connection.
- · Move the antenna away from the speaker cord or power cord.
- · Move the unit away from your TV or PC.
- · Passing cars or airplanes in the vicinity can cause interference.
- If radio waves are blocked by concrete walls, etc., radio reception may be poor.
- Change the reception mode to mono ($\rightarrow p111$).
- Operating the remote controller during AM reception may cause noise.
- FM reception may be clearer if you use the antenna jack on the wall used for the TV.

BLUETOOTH function

- Unplug and plug the power cord of the unit, or turn off and on the BLUETOOTH-enabled device. Restart of the BLUETOOTH-enabled device may be effective.
- BLUETOOTH-enabled devices must support the A2DP profile.
- Because a radio wave interference will occur, this unit may not be used near devices such as a microwave oven or cordless phone which use the radio wave in the 2.4 GHz range.
- A metallic object near the unit can affect on the radio wave, and BLUETOOTH connection may not be possible.

Check the following if the problem persists after you have confirmed the above.

Cannot connect with this unit

· Check if the BLUETOOTH function of the BLUETOOTH-enabled device is enabled.

□ Music playback is unavailable on the unit even after successful BLUETOOTH connection

- When the audio volume of your BLUETOOTH-enabled device is set low, the audio may not be played back. Turn up the volume of the BLUETOOTH-enabled device.
- Depending on the BLUETOOTH-enabled device, the Send/Receive selector switch may be equipped. Select Send mode.
- Depending on the characteristics or specifications of the BLUETOOTH-enabled device, music may not be played back on this unit.

Sound is interrupted

• There may a problem with the BLUETOOTH-enabled device. Check the information on a web page.

□ The audio quality is poor after connection with a BLUETOOTH-enabled device

• The BLUETOOTH reception is poor. Move the BLUETOOTH-enabled device closer to the unit, or remove any obstacle between the BLUETOOTH-enabled device and this unit.

192

(→<u>p82</u>)

(→<u>p178</u>)

Network function

- If you cannot select a network service, start up the network function to select it. It may take approx. one minute to start it up.
- When the NET indicator is blinking, this unit is not properly connected to the home network.
- Unplug and plug the power cords of this unit and the router, or restart the router.
- If the desired router is not displayed in the access point list, it may be set to hide SSID, or the ANY connection may be off. Change the setting and try again.

Check the following if the problem persists after you have confirmed the above.

□ Cannot access the Internet radio

- In the case the service provider has terminated the service, the network service or contents may not be used on this unit.
- · Check if your modem and router are properly connected, and they are both turned on.
- · Check if the LAN side port on the router is properly connected to this unit.
- Check if connecting to Internet from other devices is possible. If it is not possible, turn off all devices connected to the network, wait for a while, and then turn on the devices again.
- · Depending on ISP, setting the proxy server is required.
- · Check if the router and modem you are using are supported by your ISP.

□ Cannot access the network server

- · This unit needs to be connected to the same router as the network server.
- This unit supports the Windows Media® Player 11 or 12 network servers, or NASes that support the home network function.
- Windows Media® Player may require some settings. Refer to "Playing back files on a PC and NAS (Music Server)".
- When using a PC, only the music files registered in the library of Windows Media® Player can be played.

□ Sound is interrupted when playing music files on the network server

- · Check if the network server meets the requirements for operation.
- When the PC is serving as the network server, quit application software other than the server software (Windows Media® Player 12, etc.).
- If the PC is downloading or copying large files, the playback sound may be interrupted.

USB storage device

□ USB storage device is not displayed

- · Check if the USB storage device or USB cable is securely inserted to the USB port of the unit.
- · Disconnect the USB storage device once from the unit, and then reconnect it.
- Performance of the hard disk that receive power from the USB port of the unit is not guaranteed.
- Depending on the type of content, the playback may not be performed normally. Check the types of supported file formats.
- Operations of USB storage devices equipped with security functions are not guaranteed.

(→**p100**)

(→<u>p97</u>)

Wireless LAN Network

 Unplug and plug the power cords of this unit and the wireless LAN router, check the power-on status of the wireless LAN router, or restart the wireless LAN router.

Check the following if the problem persists after you have confirmed the above.

□ Cannot access wireless LAN network

- The wireless LAN router setting may be switched to Manual. Restore the setting to Auto.
- Try the manual set-up. The connection may succeed.
- When the wireless LAN router is in stealth mode (mode to hide SSID) or when the ANY connection is off, the SSID is not displayed. Change the setting and try again.
- Check if the SSID and encryption settings (WEP, etc.) are correct. Match the network settings with the settings of this unit.
- Connection to an SSID that includes multi-byte characters is not supported. Set the SSID of the wireless LAN router using single-byte alphanumeric characters only, and try again.

□ Connected to an SSID different from the selected SSID

• Some wireless LAN routers allow you to set multiple SSIDs for one unit. If connecting to such a router using the automatic setting button, you may end up connecting to an SSID different from the SSID you want to connect to. If this occurs, use the connection method requiring you to enter a password

□ Playback sound is interrupted, or communication is not possible

- You may not receive radio waves due to poor radio wave conditions. Shorten the distance from the wireless LAN router, or remove obstacles to
 improve visibility, and connect again. Install the unit away from microwave ovens or other access points. It is recommended to install the wireless
 LAN router and the unit in the same room.
- If there is a metallic object near the unit, wireless LAN connection may not be possible because the metal affects the radio wave.
- When other wireless LAN devices are used near the unit, other symptoms may occur, such as interrupted playback and impossible communication. You can avoid those problems by changing the channel of your wireless LAN router. For instructions on changing channels, refer to the instruction manual supplied with your wireless LAN router.
- There may not be enough bandwidth available in wireless LAN. Use a wired LAN for connection.

ZONE B function

Cannot output audio to ZONE B

 To output audio to ZONE B, the audio output destination at "Audio" - "Zone B" under AV Adjust must be set to "On(A+B)" or "On(B)", and "System Setup" - "Speaker" - "Configuration" - "Zone 2 Preout" on the Home screen must be set to "Zone B".

(→p120)

Multi-zone function

□ Cannot ZONE-output the audio of externally connected AV components

- To output audio from an externally connected AV component to ZONE 2, connect it to any of HDMI IN1 to IN3 jacks. If the AV component is not
 equipped with an HDMI jack, use a digital coaxial cable, digital optical cable or analog audio cable. Also, the audio from externally connected AV
 components can be output to ZONE 2 only when the audio is analog or 2ch PCM signal. When the AV component is connected to this unit with an
 HDMI cable, digital coaxial cable or digital optical cable, change the audio output of the AV component to the PCM output.
- When video and audio via HDMI input are output to ZONE 2, set "Input/Output Assign" "TV Out / OSD" "Zone 2 HDMI" (→p146) to "Use" on the System Setup menu.
- To output audio from an externally connected AV component to ZONE 3, use an analog audio cable for connection. Also, audio from externally connected AV components can be output to ZONE 3 only when it is an analog audio signal.

Others

• If the audio signal is from the NET or USB input selector, zone output is not possible for DSD audio signals.

Remote Controller

- · Make sure that the batteries are inserted with the correct polarity.
- · Insert new batteries. Do not mix different types of batteries, or old and new batteries.
- Make sure that the sensor of the main unit is not subjected to direct sunlight or inverter-type fluorescent lights. Relocate it if necessary.
- If the main unit is installed in a rack or cabinet with colored-glass doors, or if the doors are closed, the remote controller may not work normally.

Display

□ The display does not light up

• When the Dimmer function is working, the display may go dim or turn off. Press the DIMMER button, and change the brightness level of the display.

(→**p1**1)

Others

□ Strange noise can be heard from the unit

• If you have connected another device to the same outlet as this unit, strange noise may occur under the influence of the device. If the symptom is remedied by removing the power plug of the other device from the outlet, use different outlets for this unit and the device.

□ The message "Noise Error" appears during Full Auto MCACC

• This can be caused by a malfunction in your speaker unit. Check the speaker output, etc.

The measurement results of Full Auto MCACC show different distances to the speakers from the actual ones

- Depending on the speakers you are using, some errors may occur in the measurement results. If this is the case, make the settings in "System (→p153) Setup" "Speaker" "Distance".
- □ The measurement results of Full Auto MCACC show that the volume level of the subwoofer has been corrected to the lower limit
- The volume level correction of the subwoofer may not have been completed. Lower the volume of the subwoofer before Full Auto MCACC measurement.

□ Midnight function does not work

• Make sure the source material is Dolby Digital, Dolby Digital Plus, Dolby TrueHD or DTS.

Reducing the Power Consumption in Standby State

When the following functions are enabled, the power consumption in standby state increases. To reduce the power consumption in standby state, check each setting and set the functions to "Off".

- HDMI CEC (→<u>p159</u>)
- HDMI Standby Through (→p159)
- USB Power Out at Standby ($\rightarrow p161$)
- Network Standby ($\rightarrow p161$)
- Bluetooth Wakeup (→p161)

About HDMI

Compatible functions

HDMI (High Definition Multimedia Interface) is a digital interface standard for connecting TVs, projectors, Blu-ray Disc/DVD players, digital tuners, and other video components. Several separate video and audio cables have been required to connect AV components so far. With HDMI, a single cable can transmit control signals, digital video and digital audio (2-channel PCM, multichannel digital audio, and multichannel PCM).

HDMI CEC function:

By connecting a device that complies with CEC (Consumer Electronics Control) of the HDMI standard using an HDMI cable, a variety of linked operations between devices are possible. This function enables various linking operations with players, such as switching input selectors interlocking with a player, adjusting the volume of this unit using the remote controller of a TV, and automatically switching this unit to standby when the TV is turned off. The unit is designed to link with products that comply with the CEC standard, however, linked operation is not always guaranteed with all CEC devices. For linked functions to work properly, do not connect CEC-compliant devices exceeding the connectable number to the HDMI jack as shown below.

- Blu-ray Disc/DVD players: up to 3 units
- · Blu-ray Disc/DVD recorders: up to 3 units
- Cable TV tuner, terrestrial digital tuner, and satellite broadcasting tuner: up to 4 units

Operation has been confirmed on the following devices: (As of January 2019) Toshiba brand televisions; Sharp brand televisions; Toshiba brand players and recorders; Sharp brand players and recorders (when used with a Sharp brand television)

ARC (Audio Return Channel)/eARC (Enhanced Audio Return Channel): The ARC function and eARC function transmit the audio signals of the TV via an HDMI cable, and plays the audio of the TV on this unit. By connecting an ARCcompatible TV or eARC-compatible TV with a single HDMI cable, you can output the audio and video from this unit to the TV, and also input the audio from the TV to this unit.

- The eARC function is a newly added function for HDMI 2.1. This is an expanded function from the existing ARC function, and is able to send audio formats such as Dolby TrueHD and DTS-HD Master Audio that cannot be sent with the ARC function, from an eARC-compatible TV to this unit.
 - ARC-supported audio formats: PCM, Dolby Digital, Dolby Digital Plus, DTS (DTS 96/24, DTS-ES, etc.)
 - eARC-supported audio formats: PCM, Dolby Digital, Dolby Digital Plus, DTS (DTS 96/24, DTS-ES, etc.), Dolby TrueHD, Dolby Atmos, DTS-HD Master Audio, DTS:X, Multichannel PCM

HDMI Standby Through:

Even if this unit is in standby mode, the input signals from AV components can be transmitted to the TV.

Deep Color:

By connecting devices supporting Deep Color, video signals input from the devices can be reproduced on the TV with even more colors.

x.v.Color™:

This technology reproduces even more realistic colors by expanding the color gamut.

3D:

You can transmit 3D video signals from AV components to the TV.

4K:

This unit supports 4K (3840×2160p) and 4K SMPTE (4096×2160p) video signals.

Lip Sync:

This setting automatically corrects desynchronization between the video and audio signals based on the information from the HDMI Lip Sync-compatible TV.

Copyright Protection:

The HDMI jack of this unit conforms to the Revision 1.4 and Revision 2.2 standards of the HDCP (High-bandwidth Digital Content Protection), a copy protection system for digital video signals. Other devices connected to the unit must also conform to the HDCP standards.

Supported Audio Formats

2 ch linear PCM:

32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz, 16/20/24 bit

Multi-channel linear PCM:

Maximum 7.1 channels, 32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz, 16/20/24 bit

Bitstream:

Dolby Atmos, Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS, DTS:X, DTS-HD High Resolution Audio, DTS-HD Master Audio, DTS 96/24, DTS-ES, DTS Express, IMAX DTS, IMAX DTS:X

DSD:

Supported sampling rates: 2.8 MHz

Your Blu-ray Disc/DVD player must also support the HDMI output of the above audio formats.

Supported resolutions

HDMI IN1 to IN6:

- Copyright protection technology: HDCP1.4/HDCP2.2
- Color space (Color Depth):
 - 720×480i 60 Hz, 720×576i 50 Hz, 720×480p 60 Hz, 720×576p 50 Hz, 1920×1080i 50/60 Hz, 1280×720p 24/25/30/50/60 Hz, 1680×720p 24/25/30/50/60 Hz, 1920×1080p 24/25/30/50/60 Hz, 2560×1080p 24/25/30/50/60 Hz, 4K (3840×2160p) 24/25/30 Hz, 4K SMPTE (4096×2160p) 24/25/30 Hz : RGB/YCbCr4:4:4 (8/10/12 bit), YCbCr4:2:2 (12 bit)
 - 4K (3840×2160p) 50/60 Hz, 4K SMPTE (4096×2160p) 50/60 Hz : RGB/ YCbCr4:4:4 (8 bit), YCbCr4:2:2 (12 bit), YCbCr4:2:0 (8/10/12 bit)

AUX INPUT HDMI (front):

- Copyright protection technology: HDCP1.4/HDCP2.2
- Color space (Color Depth):
 - 720×480i 60Hz, 720×576i 50Hz, 720×480p 60Hz, 720×576p 50Hz, 1920×1080i 50/60Hz, 1280×720p 24/25/30/50/60Hz, 1680×720p 24/25/30/50/60Hz, 1920×1080p 24/25/30/50/60Hz, 2560×1080p 24/25/30/50/60Hz : RGB/YCbCr4:4:4 (8/10/12 bit), YCbCr4:2:2 (12 bit)

- 4K (3840×2160p) 24/25/30Hz, 4K SMPTE (4096×2160p) 24/25/30Hz : RGB/YCbCr4:4:4 (8 bit), YCbCr4:2:2 (12 bit)
- 4K (3840×2160p) 50/60Hz, 4K SMPTE (4096×2160p) 50/60Hz : YCbCr4:2:0 (8 bit)

General Specifications

Amplifier Section

Rated Output Power (FTC) (North American) With 8 ohm loads, both channels driven, from 20-20,000 Hz; rated 120 watts per channel minimum RMS power, with no more than 0.08% total harmonic distortion from 250 milliwatts to rated output. Rated Output Power (IEC) (Others) 9 ch × 180 W at 6 ohms, 1 kHz, 1 ch driven of 1% THD Maximum Effective Output Power (North American) 230 W at 6 ohms, 1 kHz, 1 ch driven of 10% THD Maximum Effective Output Power (IEC) 9 ch × 215 W at 6 ohms, 1 kHz, 1 ch driven of 10% THD (European) Maximum Effective Output Power (JEITA) 9 ch × 215 W at 6 ohms, 1 kHz, 1 ch driven of 10% THD (Asian and Australian) Dynamic Power (*) * IEC60268-Short-term maximum output power 250 W (3 Ω, Front) 220 W (4 Ω, Front) 130 W (8 Ω, Front) THD+N (Total Harmonic Distortion+Noise) 0.08% (20 Hz - 20,000 Hz, half power) Input Sensitivity and Impedance 200 mV/47 kΩ (LINE (RCA)) 3.5 mV/47 kΩ (PHONO MM) Rated RCA Output Level and Impedance 1 V/470 Ω (PRE OUT) 1 V/470 Ω (SUBWOOFER PRE OUT) 200 mV/470 Ω (ZONE B /ZONE 2 LINE OUT) 1 V/470 Ω (ZONE 2 PRE OUT) 200 mV/470 Ω (ZONE 3 LINE OUT) 1 V/470 Ω (ZONE 3 PRE OUT) Phono Maximum Input Signal Voltage 70 mV (MM 1 kHz 0.5%)

Frequency Response 10 Hz - 100 kHz/+1 dB, -3 dB (Direct/Pure Direct) Tone Control Characteristics (MAIN) ±10 dB, 20 Hz (BASS) ±10 dB, 20 kHz (TREBLE) Tone Control Characteristics (ZONE 2) ±10 dB, 100 Hz (BASS) ±10 dB, 10 kHz (TREBLE) Signal to Noise Ratio 106 dB (IHF-A, LINE IN, SP OUT) 80 dB (IHF-A, PHONO IN, SP OUT) Speaker Impedance 4 Ω - 16 Ω (Normal) $8 \Omega - 16 \Omega$ (Bi-Wiring) Headphone Rated Output 85 mW + 85 mW (32 Ω, 1 kHz, 10% THD) Supported impedance of Headphones 8 Ω - 600 Ω Headphones Frequency Response 10 Hz - 100 kHz

Video Section

Signal level 1 Vp-p/75 Ω (Composite Video) 1 Vp-p/75 Ω (Component Video Y) 0.7 Vp-p/75 Ω (Component Video Pb/Pr) Maximum resolution supported by component video 480i/576i

Tuner Section

FM Tuning Frequency Range 87.5 MHz - 107.9 MHz (North American) 87.5 MHz - 108.0 MHz, RDS (Others) 50 dB quieting sensitivity (FM MONO) 1.0 μV, 11.2 dBf (IHF, 75 Ω) AM Tuning Frequency Range 530 kHz - 1710 kHz (North American) 522/530 kHz - 1611/1710 kHz (Others) Preset Channel 40

Network Section

Ethernet LAN 10BASE-T/100BASE-TX Wireless LAN IEEE 802.11 a/b/g/n/ac standard (Wi-Fi[®] standard) 5 GHz/2.4 GHz band

BLUETOOTH Section

Communication system **BLUETOOTH Specification version 4.2** Frequency band 2.4 GHz band Modulation method FHSS (Freq Hopping Spread Spectrum) Compatible BLUETOOTH profiles A2DP 1.2 AVRCP 1.3 Supported Codecs SBC AAC Transmission range (A2DP) 20 Hz - 20 kHz (Sampling frequency 44.1 kHz) Maximum communication range Line of sight approx. 15 m (*) * The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, cordless phone, reception sensitivity, antenna's performance, operating system, software application, etc.

General

Power Supply AC 120 V, 60 Hz (North American) AC 220 - 240 V, 50/60 Hz (Others) **Power Consumption** 850 W (North American) 870 W (Others) 0.15 W (Full Standby mode) 1.8 W (Network Standby (wired)) (North American) 2.0 W (Network Standby (wired)) (Others) 2.0 W (Network Standby (wireless)) 1.8 W (Bluetooth Wakeup) (North American) 2.0 W (Bluetooth Wakeup) (Others) 0.15 W (HDMI CEC) * 2.8 W (Equipment with HiNA functionality Standby mode, Network disconnect and Network Standby ON) (North American) 3.0 W (Equipment with HiNA functionality Standby mode, Network disconnect and Network Standby ON) (Others) 2.9 W (Standby mode (ALL ON)) (North American) 3.1 W (Standby mode (ALL ON)) (Others) 70 W (No-sound) (North American) 75 W (No-sound) (Others) 6.2 W (HDMI Standby Through) (North American) 6.7 W (HDMI Standby Through) (Others) * This equipment complies with European Commission Regulation (EC) No 1275/2008 as equipment with HiNA functionality. If you do not to use the Network function, please set Network Standby setting to Off. You can reduce power consumption under standby mode. Dimensions ($W \times H \times D$) 435 mm × 185 mm × 386 mm 17-1/8" × 7-5/16" × 15-3/16" Weight 13 kg (28.7 lbs.) Maximum radio-frequency power transmitted in the frequency band(s) (European) 2400 MHz - 2483.5 MHz (20 dBm (e.i.r.p)) 5150 MHz - 5350 MHz (23 dBm (e.i.r.p)) 5470 MHz - 5725 MHz (23 dBm (e.i.r.p))

HDMI

Input

IN1 (BD/DVD), IN2 (GAME), IN3 (CBL/SAT), IN4 (STRM BOX), IN5, IN6, AUX INPUT HDMI (front)

Output

OUT MAIN (ARC), OUT ZONE 2/SUB

Supported

Deep Color, x.v.Color™, Lip Sync, eARC, 3D, 4K 60 Hz, CEC, Extended Colorimetry (sYCC601, Adobe RGB, Adobe YCC601), Content Type, HDR (HDR10, BT.2020, HLG), Dolby Vision

Audio Format

Dolby Atmos, Dolby TrueHD, Dolby Digital, Dolby Digital Plus, DTS, DTS:X, DTS-HD Master Audio, DTS-HD High Resolution Audio, DTS 96/24, DTS-ES, DTS Express, IMAX DTS, IMAX DTS:X, DSD, PCM

HDCP version

```
2.2
```

Maximum Video Resolution 4K 60 Hz (YCbCr 4:4:4)

Video Inputs

Component

IN1 (BD/DVD) Composite IN1 (CBL/SAT), IN2 (STRM BOX)

Supported input resolutions

HDMI input

4K, 1080p/24, 1080p, 1080i, 720p, 480p/576p Component input 480i/576i Composite input

480i/576i

 The output from the HDMI OUT jack to the TV is the same resolution as the input. When using a TV that supports 4K, 1080p HDMI video signals can also be output as 4K.

Audio Inputs

```
Digital
```

OPTICAL (TV)

COAXIAL (CD)

Analog

BD/DVD, CBL/SAT, STRM BOX, CD, PHONO

Audio Outputs

Analog

PRE OUT (FRONT L/R, CENTER, SURROUND L/R, HEIGHT 1 L/R, SURROUND BACK L/R, HEIGHT 2 L/R or ZONE 3 L/R, 2 SUBWOOFER) ZONE B LINE OUT or ZONE 2 PRE/LINE OUT HEIGHT 2 PREOUT or ZONE 3 PRE/LINE OUT Speaker Outputs (North American) FRONT L/R, CENTER, SURROUND L/R, HEIGHT 1 L/R, HEIGHT 2 L/R or SURROUND BACK L/R or ZONE 3 L/R, ZONE 2 L/R (Banana plugs supported) Speaker Outputs (Others) FRONT L/R, CENTER, SURROUND L/R, HEIGHT 1 L/R or ZONE 2 L/R, HEIGHT 2 L/R or SURROUND BACK L/R or ZONE 3 L/R Phones PHONES (Front, Ø 6.3 mm, 1/4")

Others

Setup Mic: 1 (Front) USB: 2 (Ver. 2.0, 5 V/0.5 A (Front), 5 V/1 A (Rear)) Ethernet: 1 RS232: 1 IR IN: 1 IR OUT: 1 12V TRIGGER OUT: 2 (A: 100 mA, B: 25 mA)

Specifications and features are subject to change without notice.

$\Box \rightarrow \underline{\text{License and Trademark}}$



SN 29403714_EN

© 2019 Onkyo & Pioneer Corporation. All rights reserved.

Onkyo group has established its Privacy Policy, available at [http://pioneer-audiovisual.com/privacy/]. "Pioneer", "ELITE" and "MCACC logo" are trademarks of Pioneer Corporation, and are used under license.

H1904-0