



Audio Out Setup Guide

www.visualint.net

1/6/2015

Setup Guide

Image 1: This is the microphone connector. In this picture, Black is common and Red is input.



Image 2: This is the connector that goes to the camera, plug the wires in as if you were looking straight down at the camera so the cables are on the left side). First the Red (Input) goes in, then the Black (Common) is connected together with the Green (common) from the amplifier. The Green (common) and White (output). Then that gets plugged into the camera.

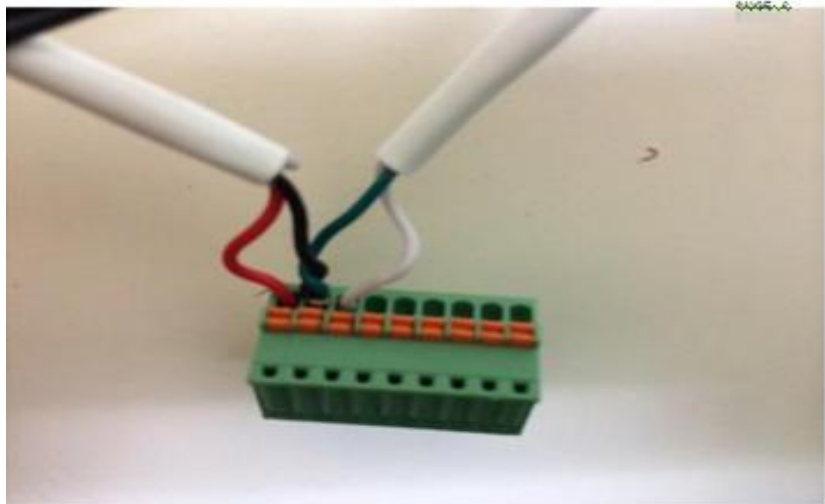


Image3: The amplifier. On the left is the power connector. Then the INPUT is the new cable we have on the connector from the camera. So the White (Input) and Green (Common). The other two goes to the speaker. On this picture, white is on the left and black/white stripe is on the right.

