

SUNBRITE Firmware Update Instructions

True Outdoor Television

SB-V-43-4KHDR / SB-V-55-4KHDR / SB-V-65-4KHDR

UPGRADE YOUR FIRMWARE FOR THE BEST SUNBRITE EXPERIENCE

Thank you for choosing a Veranda 4K HDR Outdoor TV from SunBrite!

HDR (High Dynamic Range) is a new, cutting-edge technology. In fact, it's so new that we've already made software improvements to our products in the short time since we built your TV!

Because HDR technology is always changing, we want to make sure your new Veranda is always compatible with the latest third-party streaming devices. Please help us make your viewing experience even better by following the simple steps below to upgrade its firmware.

Using the included USB drive, upgrade your TV firmware before installation to optimize its HDR settings. The USB drive is yours to keep after the update. If the included USB drive is missing, please refer to the Help section of this guide.



UPDATE YOUR FIRMWARE

Items required: SunBrite USB Drive and SunBrite Remote

1. Ensure the TV is **unplugged** from all power sources before inserting SunBriteTV USB drive.
2. Insert the SunBrite USB drive into the TV.
3. Plug the TV into power. **Firmware update will begin automatically.**
4. The update process takes 2-3 minutes to complete.
5. After the firmware update is complete, remove the USB drive. Then, using the power button on the remote, turn on the TV.
6. The TV will initialize. This process takes 2-3 minutes to complete. During this process the startup icon appears in the lower right corner of the screen.

To finish firmware update and initialize new settings:

1. Exit out of Channel Scan menu by **selecting Skip, and then Exit Setup.**
2. Enter service menu by pressing Menu, and then 4, 3, 9, 8.
3. On the Model Name menu, select the appropriate model by pressing Enter.
4. Next, select Clean Storage and press enter to complete firmware update. Once update is complete, the TV powers off.

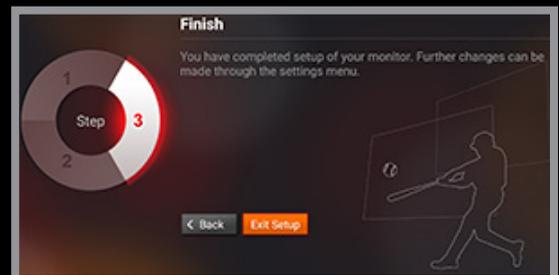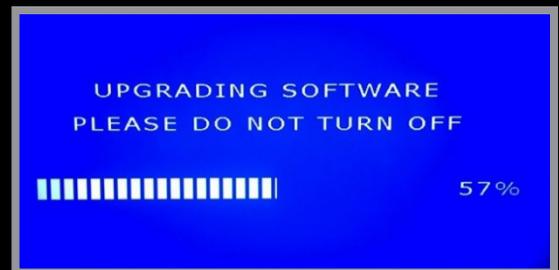

Help

If you need help with your firmware installation or your USB drive is missing, please go to www.SunBriteTV.com/products, select your product, and then click the **Manuals and Tech** tab for the latest firmware, additional troubleshooting information and detailed instructions.

You may also contact our award-winning Customer Service team for assistance.

Email CustomerService@SunBriteTV.com or call 866.357.8688 with any additional questions.

Enjoy your new Veranda outdoor TV!